



7000 Series Indicators Instruction Manual



T71P



T71XW

TABLE OF CONTENTS

1.	INTRODUCTION.....	5
1.1	Safety Precautions	5
1.1.1	Relay Option Safety Precautions	5
1.2	Overview of Parts and Controls.....	6
1.3	Control Functions.....	10
2.	INSTALLATION	11
2.1	Unpacking	11
2.2	External Connections.....	11
2.2.1	Scale Base with Connector to T71P.....	11
2.2.2	Scale Base with Connector to T71XW.....	11
2.2.3	RS232 Interface Cable to T71P.....	11
2.2.4	AC Power to T71P	11
2.2.5	AC Power to T71XW	11
2.2.6	Battery Power to T71P	11
2.2.7	Mounting Bracket Attachment	12
2.3	Internal Connections	12
2.3.1	Opening the Housing.....	12
2.3.2	Scale Base without Connector to T71P or T71XW.....	12
2.3.3	RS232 Interface Cable to T71XW.....	13
2.3.4	Footswitch to T71P or T71XW	13
2.3.5	T71P Housing Orientation.....	13
2.3.6	Mounting Bracket.....	13
3.	SETTINGS.....	14
3.1	Menu Structure	14
3.2	Menu Navigation	16
3.3	Calibration Menu	17
3.3.1	Zero Calibration	17
3.3.2	Span Calibration	17
3.3.3	3 Point Linearity Calibration	18
3.3.4	5 Point Linearity Calibration	18
3.3.5	Calibration Test.....	19
3.3.6	Geographical Adjustment Factor	20
3.3.7	End Calibration	20
3.4	Setup Menu.....	20
3.4.1	Reset	20
3.4.2	Dual Scale	20
3.4.3	Range1	20
3.4.4	Range2	21
3.4.5	Capacity1	21
3.4.6	Capacity2	21
3.4.7	Graduation1	21
3.4.8	Graduation2	22
3.4.9	Power Unit	22
3.4.10	Zero Range.....	22
3.4.11	Auto Tare	22
3.4.12	Accumulate	23
3.4.13	Retain Zero	23
3.4.14	Legal For Trade.....	23
3.4.15	Beep Volume	23
3.4.16	Beep Signal	23
3.4.17	Key Beep	24
3.4.18	Library	24
3.4.19	Alibi.....	24
3.4.20	End Setup	24
3.5	Readout Menu	24
3.5.1	Reset	24
3.5.2	Language.....	24
3.5.3	Stable Range	25

3.5.4	Filter	25
3.5.5	Auto Zero Tracking	25
3.5.6	Backlight.....	25
3.5.7	Auto Off Timer.....	26
3.5.8	Gross Indicator	26
3.5.9	End Readout.....	26
3.6	Mode Menu.....	26
3.6.1	Reset	26
3.6.2	Weighing Mode	26
3.6.3	Parts Counting Mode.....	26
3.6.4	Parts Counting Optimization.....	27
3.6.5	Percent Weighing Mode.....	27
3.6.6	Dynamic Weighing Mode.....	27
3.6.7	Check Weighing Mode.....	27
3.6.8	End Mode	27
3.7	Unit Menu	28
3.7.1	Reset	28
3.7.2	Kilogram Unit	28
3.7.3	Pound Unit	28
3.7.4	Gram Unit	28
3.7.5	Ounce Unit	28
3.7.6	Pound Ounce Unit.....	28
3.7.7	Tonne Unit.....	29
3.7.8	Custom Unit	29
3.7.9	End Unit.....	29
3.8	GMP Menu.....	30
3.8.1	Reset	30
3.8.2	Date	30
3.8.3	Time	30
3.8.4	User ID.....	31
3.8.5	Project ID	31
3.8.6	Scale ID	31
3.8.7	End GMP	31
3.9	Print1, Print2 Menus	31
3.9.1	Reset	31
3.9.2	Print Stable Data Only.....	31
3.9.3	Auto Print	32
3.9.4	Print Content Sub-menu	32
3.9.5	Layout Sub-menu.....	35
3.9.6	List.....	36
3.9.7	End Print1, End Print2	36
3.10	COM1, COM2 Menus	36
3.10.1	Reset	36
3.10.2	Baud	36
3.10.3	Parity.....	36
3.10.4	Stop Bit.....	37
3.10.5	Handshake.....	37
3.10.6	Address.....	37
3.10.7	Alternate Command Sub-menu	37
3.10.8	End COM1, End COM2	38
3.11	I-O Menu	38
3.11.1	Reset	38
3.11.2	External Input	38
3.11.3	Input Beep.....	38
3.11.4	Relay Output Sub-menu	39
3.11.5	End I-O	39
3.12	Menu Lock Menu	40
3.12.1	Reset	40
3.12.2	Lock Calibration.....	40
3.12.3	Lock Setup	40
3.12.4	Lock Readout	40

3.12.5	Lock Mode	40
3.12.6	Lock Unit.....	40
3.12.7	Lock Print1.....	41
3.12.8	Lock Print2.....	41
3.12.9	Lock COM1.....	41
3.12.10	Lock COM2.....	41
3.12.11	Lock GMP	41
3.12.12	Lock I-O.....	41
3.12.13	End Menu Lock.....	41
3.13	Key Lock Menu.....	42
3.13.1	Reset	42
3.13.2	Lock All Buttons	42
3.13.3	Lock Off Button	42
3.13.4	Lock Zero Button.....	42
3.13.5	Lock Print Button.....	42
3.13.6	Lock Unit Button.....	42
3.13.7	Lock Function Button.....	43
3.13.8	Lock Mode Button	43
3.13.9	Lock Tare Button	43
3.13.10	Lock Menu Button	43
3.13.11	Lock Library Button	43
3.13.12	Lock Info Button.....	43
3.13.13	End Lock.....	43
3.14	End Menu	44
3.15	Securing the Menu and Key Lock menu settings.....	44
4.	OPERATION.....	45
4.1	Turning Indicator On/Off.....	45
4.2	Zero Operation.....	45
4.3	Manual Tare	45
4.4	Preset Tare	45
4.5	Auto Tare	45
4.6	Changing Units of Measure	45
4.7	Printing Data.....	46
4.8	Dual Scale Operation	46
4.9	Application Modes	46
4.9.1	Weighing	46
4.9.2	Parts Counting.....	46
4.9.3	Percent Weighing.....	48
4.9.4	Dynamic Weighing.....	48
4.9.5	Check Weighing.....	49
4.10	Library.....	50
4.10.1	Storing Library Data.....	50
4.10.2	Retrieving Data	53
4.10.3	Editing Stored Data.....	53
4.11	Accumulation and Statistics	54
4.11.1	Accumulating Displayed Values.....	54
4.11.2	Viewing Statistics Data.....	54
4.11.3	Clearing Statistics Data.....	54
4.12	Alibi Memory	55
4.12.1	Viewing Alibi Data	55
5.	SERIAL COMMUNICATION.....	56
5.1	Interface Commands	56
5.2	Output Format	56
5.3	Printout Examples.....	57
6.	LEGAL FOR TRADE	59
6.1	Settings	59
6.2	Verification	59
6.3	Sealing	59
6.3.1	Physical Seals	59
6.3.2	Audit Trail Seal.....	60

7.	MAINTENANCE.....	62
7.1	Cleaning.....	62
7.2	Troubleshooting.....	62
7.3	Service Information	63
8.	TECHNICAL DATA	64
8.1	Specifications	64
8.2	Accessories and Options	65
8.3	Drawings and Dimensions.....	66
8.4	Compliance.....	67

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ohaus/7000 Series with T71P and T71XW Indicators.pdf](https://the-checkout-tech.com/manuals/ohaus/7000%20Series%20with%20T71P%20and%20T71XW%20Indicators.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)