


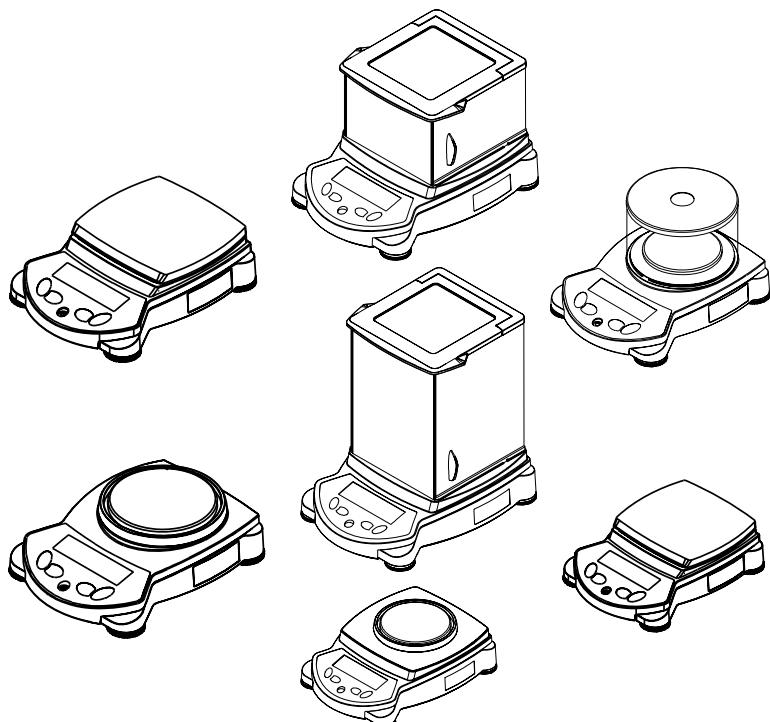

Adventurer Pro Balances Instruction Manual



**TABLE OF CONTENTS**

1.	INTRODUCTION	EN-3
1.1	Description	EN-3
1.2	Features	EN-3
1.3	Safety Precautions	EN-3
2.	INSTALLATION	EN-4
2.1	Unpacking	EN-4
2.2	Installing Components	EN-4
2.2.1	Assembly of Models AV412, AV812, AV2101, AV2102, AV3102, AV4101, AV4102, AV8101	EN-4
2.2.2	Assembly of Models AV64, AV114, AV213, AV264, AV313, AV413, AV513	EN-5
2.2.3	Assembly of Model AV53	EN-8
2.2.4	Assembly of Models AV212	EN-9
2.3.	Selecting the Location	EN-9
2.4	Leveling the Balance	EN-9
2.5	Connecting Power	EN-10
2.5.1	AC Adapter	EN-10
2.5.2	Battery Installation	EN-10
2.5.3	Turning Power On and Off	EN-10
2.6	Initial Calibration	EN-10
3.	OPERATION	EN-11
3.1	Overview of Controls & Display Functions	EN-11
3.1.1	Models AV53, AV212, AV412, AV812, AV1502, AV2101, AV4101, AV8101	EN-11
3.1.2	Models AV64, AV64C, AV114, AV114C, AV212C, AV53C, AV213, AV213C, AV313C, AV264, AV264C, AV412C, AV413, AV413C, AV513C, AV812C, AV2101C, AV2102, AV2102C, AV3101C, AV3102, V4101C, AV4102, AV4102C, AV8101C	EN-11
3.2	Button Control Functions	EN-13
3.3	Using the Button Control Functions	EN-14
3.3.1	Setting the Balance to Zero	EN-14
3.3.2	Taring	EN-14
3.3.3	Changing Units of Measure	EN-14
3.3.4	Changing Application modes	EN-14
3.3.5	Printing Data	EN-14
3.4	MenuEN-16	
3.4.1	Menu Structure	EN-15
3.4.2	Menu Navigation	EN-16
3.4.3	Changing Settings	EN-16



**TABLE OF CONTENTS (Cont.)**

3.5	Application Modes	EN-17
3.5.1	Weighing	EN-17
3.5.2	Parts Counting	EN-17
3.5.3	Percent Weighing	EN-18
3.5.4	Check Weighing	EN-19
3.5.5	Animal Weighing	EN-20
3.5.6	Display Hold	EN-21
3.5.7	Totalize	EN-22
3.6	Additional Features	EN-22
3.6.1	Weigh Below	EN-22
3.6.2	Battery Operation	EN-23
3.7	Balance Settings	EN-24
3.7.1	Calibration	EN-24
3.7.2	Calibration Masses	EN-29
3.7.3	Setup	EN-30
3.7.4	Readout	EN-30
3.7.5	Mode	EN-30
3.7.6	Unit	EN-31
3.7.7	Print-1 and Print-2	EN-31
3.7.8	RS232-1 and RS232-2	EN-32
3.7.9	GLP Data	EN-33
3.7.10	GLP Print	EN-34
3.7.11	Reset	EN-34
3.7.12	Lockout	EN-35
3.7.13	End	EN-35
3.8	Legal for Trade (LFT)	EN-35
3.9	Sealing Access to the Balance Settings	EN-36
3.10	Printing Data	EN-36
4.	MAINTENANCE	EN-37
4.1	Calibration	EN-37
4.2	Cleaning	EN-37
4.3	Troubleshooting	EN-37
4.4	Service Information	EN-38
4.5	Parts	EN-38
4.6	Accessories	EN-39
5.	TECHNICAL DATA	EN-40
5.1	Drawings	EN-41
5.2	Specifications	EN-43
5.3	Capacity x Readability	EN-46
5.4	Communication	EN-49
5.4.1	Commands	EN-49
5.4.2	Connections	EN-50
	Limited Warranty	EN-51

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : the biggest supplier of cash register and scale manuals on the net