


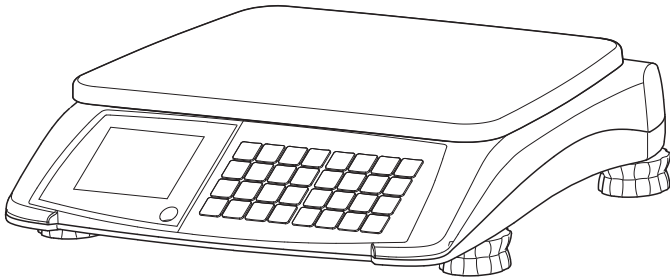

Operator Manual

OHAUS Aviator 5000



Contents

1	Your new retail scale	4
1.1	Most important functions.....	4
1.2	Device overview	4
1.3	Safety instructions	7
1.4	Calibration instructions	7
2	Setting up	8
2.1	Scope of delivery.....	8
2.2	Requirements for scale's location	8
2.3	Setting up the scale	8
2.4	Inserting the batteries.....	9
2.5	Connecting to mains power	10
2.6	Turning scale on/off.....	10
2.7	Cleaning	10
3	Operation	11
3.1	Free input.....	11
3.2	Working with PLUs.....	11
3.3	Using tare.....	13
3.4	Zeroing	14
3.5	By-count operation	14
3.6	Accumulating.....	15
3.7	Change function.....	16
3.8	Fix unit price and/or tare	17
3.9	Hold function.....	18
3.10	Weighing with 100 g (1/2 lb / 1/4 lb) price unit.....	18
3.11	Switching weighing unit between kg and lb	19
3.12	Displaying the price to pay in EURO	19
3.13	Backlight function.....	19
4	Operator setup.....	20
4.1	Setup operation.....	20
4.2	Operator setup overview	21
5	What do you do if....?	23
6	Technical data and accessories.....	24
6.1	Technical data	24
6.2	Accessories	24
7	Appendix.....	25
7.1	Disposal	25

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ohaus/Aviator 5000 operating manual.html](https://the-checkout-tech.com/manuals/ohaus/Aviator%205000%20operating%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)