


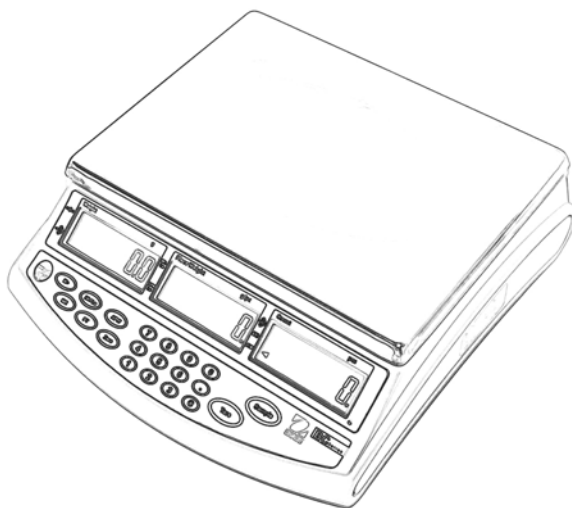

BC Series Compact Counting Scale

INSTRUCTION MANUAL



1.	INTRODUCTION.....	2
1.1	Product Description	2
1.2	General Features	2
1.3	Safety Precautions.....	2
2.	INSTALLATION.....	3
2.1	Unpacking.....	3
2.2	Installing Components	3
2.3	Selecting the Location	3
2.4	Leveling the Scale	3
2.5	Connecting Power	4
2.6	Initial Calibration	4
3.	OVERVIEW OF CONTROLS AND FUNCTIONS.....	5
3.1	Display Symbols	5
3.2	Controls and Functions	6
4.	OPERATIONS.....	7
4.1	Switching the Unit On and Off	7
4.2	Manual Tare.....	7
4.3	Pre-set Tare.....	7
4.4	Zero Operation.....	8
4.5	Sampling, Calculating Average Piece Weight (APW).....	8
4.6	Entering a Known Piece Weight	8
4.7	Storing Piece Weight into Memory	9
4.8	Recalling Piece Weight from Memory.....	9
4.9	Accumulation: Weight and Quantity.....	9
4.10	Check-Counting	10
4.11	Check-Weighing	10
5.	SCALE SETTINGS	11
5.1	Auto-Off	11
5.2	Zero Tracking Range	11
5.3	Zero Display Range	11
5.4	Filtering	11
5.5	Zero Return Range	12
5.6	Backlight	12
5.7	Unit Selection.....	12
5.8	APW Re-computing	12
5.9	Check-alarm Range.....	12
6.	CALIBRATION.....	13
7.	TROUBLESHOOTING.....	13
8.	TECHNICAL DATA.....	14

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ohaus/BC Series instruction manual.html](https://the-checkout-tech.com/manuals/ohaus/BC%20Series%20instruction%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)