





3000 Series Indicators

Instruction Manual

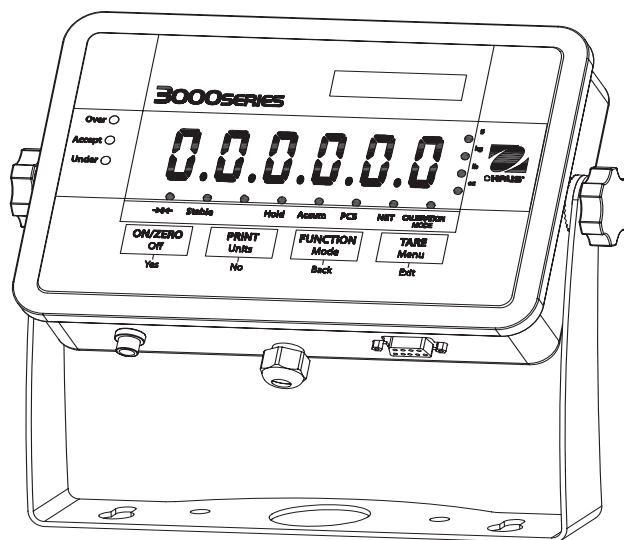

**T32ME Indicator
(LED)**

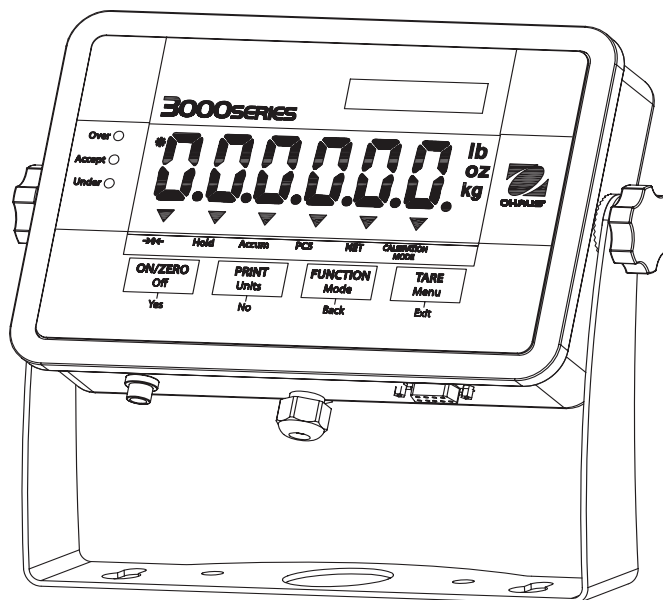

**T32MC Indicator
(LCD)**

TABLE OF CONTENTS

1. INTRODUCTION.....	EN-4
1.1 Safety Precautions	EN-4
1.2 Overview of Parts and Controls	EN-5
1.3 Control Functions.....	EN-9
2. INSTALLATION	EN-10
2.1 Unpacking	EN-10
2.2 External Connections.....	EN-10
2.2.1 RS232 Interface Cable to T32M.....	EN-10
2.2.2 AC Power to T32M	EN-10
2.2.3 Mounting Bracket to T32M.....	EN-10
2.3 Internal Connections.....	EN-11
2.3.1 Opening the Housing.....	EN-11
2.3.2 Scale Base to T32M	EN-11
2.4 Mounting Bracket	EN-12
3. SETTINGS.....	EN-13
3.1 Menu Structure	EN-13
3.2 Menu Navigation	EN-14
3.3 Calibration Menu	EN-14
3.3.1 Span Calibration.....	EN-15
3.3.2 Linearity Calibration	EN-15
3.3.3 Geographical Adjustment Factor	EN-16
3.3.4 End Calibration.....	EN-16
3.4 Setup Menu.....	EN-18
3.4.1 Reset.....	EN-18
3.4.2 Legal for trade	EN-18
3.4.3 Calibration Unit.....	EN-18
3.4.4 Capacity	EN-18
3.4.5 Graduation.....	EN-20
3.4.6 Power On Unit	EN-20
3.4.7 Zero Range	EN-20
3.4.8 RZD(Retain Zero Data)	EN-20
3.4.9 End Setup	EN-20

TABLE OF CONTENTS (Cont.)

3.5 Readout Menu EN-21

 3.5.1 Reset..... EN-21

 3.5.2 Stable..... EN-21

 3.5.3 Filter..... EN-21

 3.5.4 Auto-Zero Tracking EN-21

 3.5.5 Sleep(LED) EN-22

 3.5.6 Light(LED) EN-22

 3.5.7 Backlight(LCD)..... EN-22

 3.5.8 Auto Off Timer EN-22

 3.5.9 Expand Mode (For testing only)..... EN-22

 3.5.10End Readout EN-22

3.6 Mode Menu EN-23

 3.6.1 Reset..... EN-23

 3.6.2 Parts Counting Mode..... EN-23

 3.6.3 Display Hold Mode EN-23

 3.6.4 Checkweigh Mode EN-23

 3.6.5 Totalize Mode..... EN-23

 3.6.6 End Mode EN-23

3.7 Unit Menu EN-24

 3.7.1 Reset..... EN-24

 3.7.2 Kilogram Unit EN-24

 3.7.3 Pound Unit..... EN-24

 3.7.4 Gram Unit EN-24

 3.7.5 Ounce Unit..... EN-24

 3.7.6 Pound Ounce Unit..... EN-24

 3.7.7 End Unit EN-25

3.8 Print Menu EN-25

 3.8.1 Reset..... EN-25

 3.8.2 Baud EN-25

 3.8.3 Parity EN-25

 3.8.4 Stop Bit EN-26

 3.8.5 Handshake EN-26

 3.8.6 Print Stable Data Only EN-26

 3.8.7 Auto Print..... EN-26

 3.8.8 Content..... EN-26

 3.8.9 End Print EN-26

3.9 Menu Lock Menu EN-27

 3.9.1 Reset..... EN-27

 3.9.2 Lock Calibration EN-27

 3.9.3 Lock Setup..... EN-27

 3.9.4 Lock Readout EN-27

 3.9.5 Lock Mode..... EN-27

 3.9.6 Lock Unit EN-27

 3.9.7 Lock Print EN-28

 3.9.8 End Lock EN-28

TABLE OF CONTENTS (Cont.)

3.10 Security Switch EN-28

4. OPERATION EN-28

4.1 Turning Indicator On/Off EN-28

4.2 Zero Operation EN-28

4.3 Manual Tare EN-28

4.4 Changing Units of Measure EN-29

4.5 Printing Data EN-29

4.6 Application Modes EN-29

 4.6.1 Weighing EN-29

 4.6.2 Parts Counting EN-29

 4.6.3 Display-Hold EN-31

 4.6.4 Check Weighing EN-31

 4.6.5 Totalize EN-33

5. SERIAL COMMUNICATION EN-34

5.1 Interface Commands EN-34

5.2 Output Format EN-35

6. LEGAL FOR TRADE EN-36

6.1 Settings EN-36

6.2 Verification EN-36

6.3 Sealing EN-36

 6.3.1 Physical Seals EN-36

 6.3.2 Audit Trail Seal EN-37

7. MAINTENANCE EN-38

7.1 Model T32M Cleaning EN-38

7.2 Troubleshooting EN-38

7.4 Service Information EN-38

8. TECHNICAL DATA EN-40

8.1 Specifications EN-40

8.2 Accessories and Options EN-41

8.3 Drawings and Dimensions EN-41

8.4 Compliance EN-42

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ohaus/Defender 3000SS Indicator T32ME T32M](https://the-checkout-tech.com/manuals/ohaus/Defender%203000SS%20Indicator%20T32ME%20T32M)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)