



# SERVICE MANUAL

## 5000 Series

### T51 Indicators



**T51P**



**T51XW**

## TABLE OF CONTENTS

---

<b>CHAPTER 1 GETTING STARTED</b>	<b>Page No.</b>
1.1 Introduction .....	1-1
1.2 Service Facilities .....	1-1
1.3 Tools and Test Equipment Required .....	1-2
1.3.1 Special Tools and Test Equipment List .....	1-2
1.3.2 Standard Tools and Test Equipment List .....	1-2
1.4 Top and Bottom Housing .....	1-2
1.5 Specifications.....	1-4
1.6 Hardware Setup or Disassembly .....	1-5
1.6.1 Jumper Connections .....	1-5
1.6.2 RS232 Interface .....	1-6
1.7 Operation.....	1-7
1.7.1 Power Supply .....	1-7
1.8 Overview of the Controls .....	1-7
1.8.1 Overview of the Display Indicators .....	1-7
1.8.2 Overview of the Control Functions .....	1-8
1.8.3 Menu Setup .....	1-8
1.9 Calibration.....	1-10
1.9.1 Zero Calibration .....	1-10
1.9.2 Span Calibration .....	1-11
1.9.3 Linearity Calibration.....	1-12
1.9.4 Calibration Test .....	1-13
1.9.5 Geographical Adjustment Factor.....	1-13
1.10 RS232 Interface Connection.....	1-14
1.10.1 Setting Communications Parameters .....	1-14
1.10.2 Interface Commands .....	1-15
1.10.3 Output Format .....	1-15
1.11 Legal For Trade (LFT) .....	1-16
<b>CHAPTER 2 TROUBLESHOOTING</b>	
2.1 Introduction .....	2-1
2.2 Visual Inspection.....	2-1
2.3 Diagnostic Guide .....	2-2
2.2.1 Diagnosis.....	2-2
<b>CHAPTER 3 MAINTENANCE PROCEDURES</b>	
3.1 Preventive Maintenance .....	3-1
3.1.1 Preventive Maintenance Checklist .....	3-1
3.2 Replacement of Major Components .....	3-1
3.2.1 Main Printed Circuit Board (PCB) Replacement.....	3-2
3.2.1 Display Printed Circuit Board (PCB) Replacement.....	3-3
3.2.3 Membrane Replacement .....	3-4
<b>CHAPTER 4 TESTING</b>	
4.1. Testing.....	4-1
4.2 Power Test.....	4-1
4.3 Performance Tests Using a Scale Base .....	4-1
4.3.1 Increasing/Decreasing Load Test.....	4-2
4.3.2 Overload/Underload Test .....	4-2
4.4 Performance Tests Using a Load Cell Simulator.....	4-3

## TABLE OF CONTENTS

---

<b>CHAPTER 4 TESTING</b> ( <i>continued</i> )		<b>Page No.</b>
4.5 Calibration Retention Test .....	.....	4-3
4.6 RS232 Interface Test.....	.....	4.3
4.7 Print Test .....	.....	4-3

## CHAPTER 5 PARTS LISTS & DIAGRAMS

5-1 5000 Series T51P Indicator: Housing & Internal Parts .....	.....	5-2
5-2 5000 Series T51XW Indicator: Housing & Internal Parts.....	.....	5-4

## APPENDIX A SETUP & CALIBRATION VALUES

Appendix A. Geographical Adjustment Values .....	.....	A-1
--	-------	-----

### LIST OF TABLES

<b>TABLE NO.</b>	<b>TITLE</b>	<b>Page No.</b>
1-1	Specifications .....	1-4
1-2	T51P RS232 Pin Configuration .....	1-6
1-3	T51XW RS232 Terminal .....	1-6
1-4	Functions of Display Controls.....	1-8
1-5	T51 Menu Structure .....	1-9
1-6	Interface Command Table.....	1-15
1-7	Default Serial Output Format.....	1-15
2-1	Diagnostic Guide .....	2-3
4-1	Increasing/Decreasing Load Test.....	4-2
5-1	T51P Indicator: Housing & Internal Parts .....	5-3
5-2	T51XW Indicator: Housing & Internal Parts.....	5-5
A-1	Geographical Adjustment Values .....	A-1

### LIST OF ILLUSTRATIONS

<b>FIGURE NO.</b>	<b>TITLE</b>	
1-1	Top and Bottom Housing, and Rear Panel, T51P .....	1-2
1-2	Top and Bottom Housing, and Rear Panel, T51XW.....	1-3
1-3	Printed Circuit Board (PCB), T51 Indicator .....	1-4
1-4	Load Cell wiring.....	1-4
1-5	Open/shorted jumpers.....	1-4
1-6	RS232 Pins (T51P) .....	1-5
1-7	RS232 Terminal (T51XW) .....	1-5
1-8	Battery charge symbol.....	1-6
1-9	T51 Display .....	1-6
1-10	T51 Display Indicator.....	1-6
1-11	T51P Wire Seal .....	1-15
1-12	T51P Paper Seal.....	1-15
1-13	T51XW Wire Seal.....	1-15
1-14	T51XW Paper Seal.....	1-15
2-1	Visual Checking Procedures .....	2-1
5-1	Series 5000 T51P Indicator: Housing & Internal Parts .....	5-2
5-1	Series 5000 T51XW Indicator: Housing & Internal Parts .....	5-4

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : the biggest supplier of cash register and scale manuals on the net