



SERVICE MANUAL

Defender™ Bases:

- Rectangular (H Series)
- Square (Q Series)
- Square Washdown (W series)



TABLE OF CONTENTS

CHAPTER 1 INTRODUCTION	Page No.
1.1 Introduction.....	1-1
1.2 Service Facilities.....	1-1
1.3 Tools and Test Equipment Required.....	1-2
1.4 Test Masses Required.....	1-2
1.5 Service Strategy.....	1-2
1.6 Physical Description: Defender H-Q-W Bases.....	1-2
1.7 Specifications.....	1-3
1.8 How Load Cells Operate.....	1-6
 CHAPTER 2 TROUBLESHOOTING	
2.1 Troubleshooting.....	2-1
2.1.1 Checking Load Cells for Trouble.....	2-1
 CHAPTER 3 MAINTENANCE AND REPAIR PROCEDURES	
3.1 Preventive Maintenance.....	3-1
3.1.1 Preventive Maintenance Checklist.....	3-1
3.2 Replacing the Load Cell.....	3-1
3.3 Overload Stop Adjustments.....	3-2
 CHAPTER 4 TESTING	
4.1. Testing.....	4-1
4.2 Load Cell Resistance Checks.....	4-1
4.3 Calibration with an External Indicator.....	4-1
4.4 Consistency Check.....	4-2
4.5 Performance Tests.....	4-2
4.5.1 Off Center Load (Shift) Test.....	4-3
4.5.2 Adjusting Off Center Load.....	4-4
4.5.3 Full Load Test.....	4-5
 CHAPTER 5 DRAWINGS AND PARTS LISTS	
5-1 Defender H-Q-W Bases.....	5-2
 APPENDIX A: GLOSSARY	
A-1 Glossary.....	A-1

LIST OF TABLES

1-1	Specifications for Defender Rectangular Bases (Regular).....	1-3
1-2	Specifications for Defender Rectangular Bases (Large).....	1-3
1-3	Specifications for Defender Square Bases (Regular).....	1-4
1-4	Specifications for Defender Square Bases (Large).....	1-4
1-5	Specifications for Defender Square Washdown Bases (Regular).....	1-5
1-6	Specifications for Defender Square Washdown Bases (Large).....	1-5
3-2.	Overload Gap Settings For Defender H-Q-W Bases.....	3-3
4-1	Load Cell Resistance Readings.....	4-1
4-2	Load Cell Output Readings.....	4-3
5-1	Defender H-Q-W Bases: Housing & Internal Parts.....	5-3

(continued next page)

TABLE OF CONTENTS

	Page No.
LIST OF ILLUSTRATIONS	
1-1.	Typical Strain Gauge Load Cell..... 1-4
1-2	Downward force on the Platform bends the beam 1-4
1-3	Route of electrical Load Cell input and output..... 1-5
2-1	Removing plastic shipping tabs..... 2-1
3-1	Four Mounting Bolts that secure the Top Frame to the Load Cell..... 3-1
3-2	Four Mounting Bolts that secure the Bottom Frame to the Load Cell 3-2
3-3	Overload Gap Setting..... 3-2
3-4	Location of top Overload Stops 3-2
3-5	Location of bottom Overload Stops 3-3
4-1	Resistance elements on H and Q series Bases 4-1
4-2	Positions A, B, C and D are Centered..... 4-4
4-3	Off Center Load adjustment points..... 4-5
5-1	Defender H-Q-W Bases: Housing & Internal Parts 5-2

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*