





3000 Series Indicators

Instruction Manual

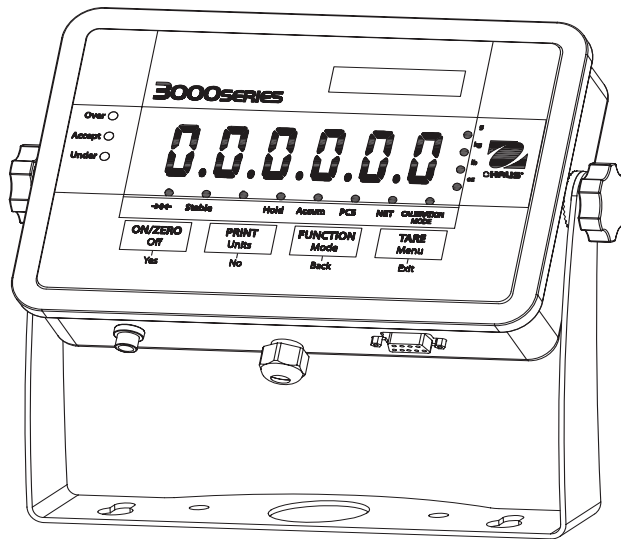

**T32ME Indicator
(LED)**

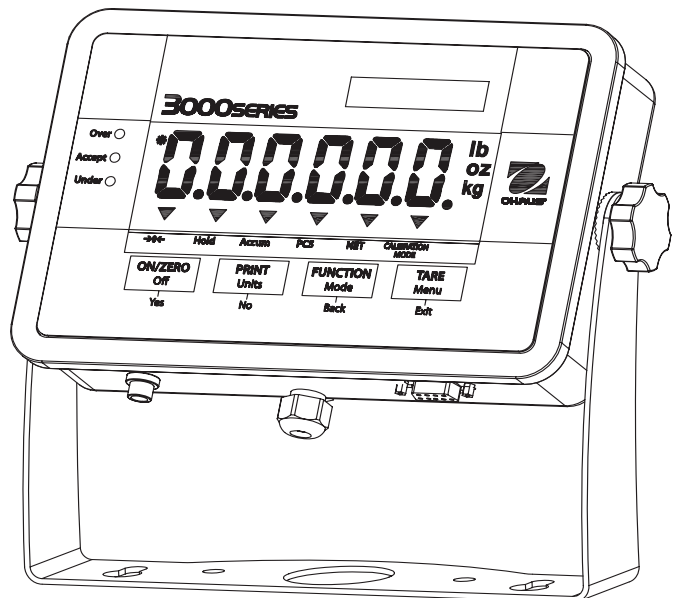

**T32MC Indicator
(LCD)**

TABLE OF CONTENTS

1. INTRODUCTION.....	EN-4
1.1 Safety Precautions	EN-4
1.2 Overview of Parts and Controls	EN-5
1.3 Control Functions.....	EN-9
2. INSTALLATION	EN-10
2.1 Unpacking	EN-10
2.2 External Connections.....	EN-10
2.2.1 RS232 Interface Cable to T32M.....	EN-10
2.2.2 AC Power to T32M	EN-10
2.2.3 Mounting Bracket to T32M.....	EN-10
2.3 Internal Connections.....	EN-11
2.3.1 Opening the Housing.....	EN-11
2.3.2 Scale Base to T32M	EN-11
2.4 Mounting Bracket	EN-12
3. SETTINGS.....	EN-13
3.1 Menu Structure	EN-13
3.2 Menu Navigation	EN-14
3.3 Calibration Menu	EN-14
3.3.1 Span Calibration.....	EN-15
3.3.2 Linearity Calibration	EN-15
3.3.3 Geographical Adjustment Factor	EN-16
3.3.4 End Calibration.....	EN-16
3.4 Setup Menu.....	EN-18
3.4.1 Reset.....	EN-18
3.4.2 Legal for trade	EN-18
3.4.3 Calibration Unit.....	EN-18
3.4.4 Capacity	EN-18
3.4.5 Graduation.....	EN-20
3.4.6 Power On Unit	EN-20
3.4.7 Zero Range	EN-20
3.4.8 RZD(Retain Zero Data)	EN-20
3.4.9 End Setup	EN-20

TABLE OF CONTENTS (Cont.)

3.5	Readout Menu	EN-21
3.5.1	Reset.....	EN-21
3.5.2	Stable.....	EN-21
3.5.3	Filter.....	EN-21
3.5.4	Auto-Zero Tracking	EN-21
3.5.5	Sleep(LED)	EN-22
3.5.6	Light(LED)	EN-22
3.5.7	Backlight(LCD).....	EN-22
3.5.8	Auto Off Timer	EN-22
3.5.9	Expand Mode (For testing only).....	EN-22
3.5.10	End Readout	EN-22
3.6	Mode Menu	EN-23
3.6.1	Reset.....	EN-23
3.6.2	Parts Counting Mode.....	EN-23
3.6.3	Display Hold Mode	EN-23
3.6.4	Checkweigh Mode	EN-23
3.6.5	Totalize Mode.....	EN-23
3.6.6	End Mode	EN-23
3.7	Unit Menu	EN-24
3.7.1	Reset.....	EN-24
3.7.2	Kilogram Unit	EN-24
3.7.3	Pound Unit.....	EN-24
3.7.4	Gram Unit	EN-24
3.7.5	Ounce Unit.....	EN-24
3.7.6	Pound Ounce Unit.....	EN-24
3.7.7	End Unit	EN-25
3.8	Print Menu	EN-25
3.8.1	Reset.....	EN-25
3.8.2	Baud	EN-25
3.8.3	Parity	EN-25
3.8.4	Stop Bit	EN-26
3.8.5	Handshake	EN-26
3.8.6	Print Stable Data Only	EN-26
3.8.7	Auto Print.....	EN-26
3.8.8	Content.....	EN-26
3.8.9	End Print	EN-26
3.9	Menu Lock Menu	EN-27
3.9.1	Reset.....	EN-27
3.9.2	Lock Calibration	EN-27
3.9.3	Lock Setup.....	EN-27
3.9.4	Lock Readout	EN-27
3.9.5	Lock Mode.....	EN-27
3.9.6	Lock Unit	EN-27
3.9.7	Lock Print	EN-28
3.9.8	End Lock	EN-28

TABLE OF CONTENTS (Cont.)

3.10 Security Switch EN-28

4. OPERATION EN-28

4.1 Turning Indicator On/Off EN-28

4.2 Zero Operation EN-28

4.3 Manual Tare EN-28

4.4 Changing Units of Measure EN-29

4.5 Printing Data EN-29

4.6 Application Modes EN-29

 4.6.1 Weighing EN-29

 4.6.2 Parts Counting EN-29

 4.6.3 Display-Hold EN-31

 4.6.4 Check Weighing EN-31

 4.6.5 Totalize EN-33

5. SERIAL COMMUNICATION EN-34

5.1 Interface Commands EN-34

5.2 Output Format EN-35

6. LEGAL FOR TRADE EN-36

6.1 Settings EN-36

6.2 Verification EN-36

6.3 Sealing EN-36

 6.3.1 Physical Seals EN-36

 6.3.2 Audit Trail Seal EN-37

7. MAINTENANCE EN-38

7.1 Model T32M Cleaning EN-38

7.2 Troubleshooting EN-38

7.4 Service Information EN-38

8. TECHNICAL DATA EN-40

8.1 Specifications EN-40

8.2 Accessories and Options EN-41

8.3 Drawings and Dimensions EN-41

8.4 Compliance EN-42

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*