



**EC Series
Instruction Manual**

**Serie EC
Manual de instrucciones**

**Serie EC
Guide de l'utilisateur**

**EC Serie
Bedienungsanleitung**

**Serie EC
Manuale d'istruzioni**





EC Series

EN-1

1 INTRODUCTION EN-2

 1.1 Product Description EN-2

 1.2 General Features EN-2

 1.3 Safety Precautions EN-2

2 INSTALLATION EN-3

 2.1 Unpacking EN-3

 2.2 Installing Components EN-3

 2.3 Selecting the Location EN-3

 2.4 Leveling the Scale EN-3

 2.5 Connecting Power EN-4

 2.6 Initial Calibration EN-4

3 OVERVIEW OF CONTROLS AND FUNCTIONS EN-5

 3.1 Display Symbols EN-5

 3.2 Controls and Functions EN-6

4 OPERATIONS EN-7

 4.1 Switching the Unit On and Off EN-7

 4.2 Manual Tare EN-7

 4.3 Pre-set Tare EN-7

 4.4 Zero Operation EN-8

 4.5 Sampling, Calculating Average Piece Weight (APW) EN-8

 4.6 Entering a Known Piece Weight EN-8

 4.7 Storing Piece Weight into Memory EN-9

 4.8 Recalling Piece Weight from Memory EN-9

 4.9 Accumulation: Weight and Quantity EN-9

5 SCALE SETTINGS EN-10

 5.1 Auto-Off EN-10

 5.2 Zero Tracking Range EN-10

 5.3 Zero Display Range EN-10

 5.4 Filtering EN-10

 5.5 Zero Return Range EN-11

 5.6 Backlight EN-11

 5.7 Unit Selection EN-11

 5.7 APW Re-computing EN-11

6 CALIBRATION EN-12

7 TROUBLESHOOTING EN-12

8 TECHNICAL DATA EN-13

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*