



# SERVICE MANUAL

## SD Series Scales



---

**TABLE OF CONTENTS**

---

	<b>Page No.</b>
<b>CHAPTER 1 GETTING STARTED</b>	
1.1 Introduction .....	1-1
1.2 Service Facilities .....	1-1
1.3 Tools and Test Equipment Required .....	1-2
1.4 Specifications .....	1-2
1.5 Operation .....	1-3
1.5.1 Power Supply .....	1-3
1.5.2 Overview of the Controls .....	1-3
1.5.3 Basic Functions .....	1-4
1.5.4 Dynamic Weighing .....	1-4
1.6 Calibration .....	1-5
<b>CHAPTER 2 TROUBLESHOOTING</b>	
2.1 Introduction .....	2-1
2.2 Visual Inspection .....	2-1
2.3 Diagnostic Guide .....	2-2
2.3.1 Diagnosis .....	2-2
2.4 Checking the Load Cell's Signal .....	2-4
2.4.1 Output Voltage Test .....	2-4
2.4.2 Resistance Test .....	2-5
2.4.3 Testing the Printed Circuit Board (PCB) .....	2-6
<b>CHAPTER 3 MAINTENANCE PROCEDURES</b>	
3.1 Preventive Maintenance .....	3-1
3.1.1 Preventive Maintenance Checklist .....	3-1
3.2 Replacement of Major Components .....	3-1
3.2.1 Main Printed Circuit Board (PCB) Replacement .....	3-2
3.2.2 Battery Replacement .....	3-3
3.2.3 Function Label Replacement .....	3-3
<b>CHAPTER 4 TESTING</b>	
4.1. Testing .....	4-1
4.2 Power Test .....	4-1
4.3 Performance Tests Using a Scale Base .....	4-1
4.3.1 Overload/Underload Test .....	4-2
4.4 Performance Tests Using a Load Cell Simulator .....	4-3
4.5 Calibration Retention Test .....	4-3
4.6 Repeatability Test .....	4-3
4.7 Off-Center Load Test .....	4-5
4.8 Linearity Test .....	4-6
<b>CHAPTER 5 PARTS LISTS &amp; DIAGRAMS</b>	
5-1 SD Series Scale: Small Model .....	5-3
5-2 SD Series Scale: Large Model .....	5-5

---

## TABLE OF CONTENTS

---

### LIST OF TABLES

TABLE NO.	TITLE	Page No.
1-1	Specifications .....	1-2
2-1	Diagnostic Guide Table .....	2-3
2-2	Color Code For Load Cell Wiring .....	2-4
2-3	Load Cell Output Readings (in mV with 3V Excitation) .....	2-5
2-4	Load Cell Resistance Readings (in Ohms) .....	2-5
4-1	Repeatability Worksheet .....	4-4
4-2	Linearity Test Masses .....	4-7
5-1	SD Series Scale: Small Model .....	5-3
5-2	SD Series Scale: Large Model .....	5-5

### LIST OF ILLUSTRATIONS

FIGURE NO.	TITLE	
1-1	Catapult 1000 Display .....	1-3
2-1	Visual Checking Procedures .....	2-1
2-2	Catapult 1000 PCB connections .....	2-4
3-1	Load Cell leads are soldered to the Printed Circuit Board .....	3-2
3-2	Open Battery Compartment door by pressing the inset latch lever .....	3-3
5-1	SD Series Scale: Small Model .....	5-2
5-2	SD Series Scale: Large Model .....	5-4

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*