



# SERVICE MANUAL

## SCOUT<sup>®</sup> PRO BALANCES

## TABLE OF CONTENTS

	Page No.
<b>CHAPTER 1 INTRODUCTION</b>	
1.1 Introduction .....	1-1
1.2 Service Facilities .....	1-1
1.3 Tools and Test Equipment Required.....	1-2
1.3.1 Special Tools and Test Equipment List .....	1-2
1.3.2 Standard Tools and Test Equipment List .....	1-2
1.4 Test Masses Required .....	1-2
1.5 Specifications .....	1-3
<b>CHAPTER 2 DIAGNOSIS</b>	
2.1 Troubleshooting .....	2-1
2.2 Diagnostic Guide.....	2-1
2.2.1 Diagnosis.....	2-1
2.3 Error Codes .....	2-4
<b>CHAPTER 3 REPAIR PROCEDURES</b>	
3.1 Repair Procedures .....	3-1
3.1.1 Cover Removal.....	3-1
3.1.2 Printed Circuit Board Replacement .....	3-2
3.1.3 Transducer Replacement .....	3-4
<b>CHAPTER 4 TESTING</b>	
4.1 Testing .....	4-1
4.1.1 Operation Test .....	4-1
4.1.2 Segment Display Test.....	4-1
4.2 Performance Tests .....	4-1
4.2.1 Repeatability Test .....	4-2
4.2.2 Off-Center Load Test.....	4-3
4.2.3 Linearity Test .....	4-3
4.3 Down Stop Adjustment.....	4-4
<b>CHAPTER 5 DRAWINGS AND PARTS LISTS</b>	
5.1 Drawings .....	5-1
5.2 Parts Lists.....	5-3
<b>APPENDIX A SERVICE TOOL INSTRUCTIONS</b>	
A. Service Tools Instructions .....	A-1
A.1 Requirements for Scout Pro Tools .....	A-1
A.2 Software Installation .....	A-1
A.3 Hardware Installation .....	A-1
A.4 Special Instructions for USB Interface .....	A-2
A.5 Using Configtool.Exe .....	A-3
A.6 Final Service Calibration .....	A-5

## APPENDIX B FACTORY CALIBRATIONS

	Page No.
B. Factory Calibrations .....	B-1
B.1 Service Calibration.....	B-1
B.2 Factory Calibration .....	B-3

## LIST OF TABLES

TABLE NO.	TITLE	Page No.
1-1	Calibration Points .....	1-2
1-2	Specifications .....	1-3
2-1	Diagnostic Guide .....	2-2
2-2	Error Codes .....	2-4
4-1	Types of Performance Tests .....	4-1
4-2	Test Masses .....	4-3
4-3	Test Mass Values .....	4-5
4-4	Transducer Adjustment Tolerances .....	4-5
5-1	Replacement Parts List .....	5-3

## LIST OF ILLUSTRATIONS

FIGURE	TITLE	Page No.
3-1	Shipping Lock.....	3-1
3-2	Bottom of Balance .....	3-1
3-3	Printed Circuit Board removal .....	3-2
3-4	Transducer Removal .....	3-4
4-1	LCD Full Display .....	4-1
4-2	Transducer Front View - Down Stop Adjustment .....	4-4
5-1	Scout Pro Exploded View .....	5-2
A-1	Screw and Housing Removal .....	A-2
A-2	Connector J3 Location .....	A-2
A-3	Connector J3 Shorted .....	A-2
A-4	Screen 1 .....	A-3
A-5	Screen 2 .....	A-4
A-6	Screen 3 .....	A-4
A-7	Screen 4 .....	A-5
B-1	IC U9 Connections .....	B-2

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ohaus/Scout pro service manual.html](https://the-checkout-tech.com/manuals/ohaus/Scout%20pro%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)