


SMART WEIGHING SOLUTIONS

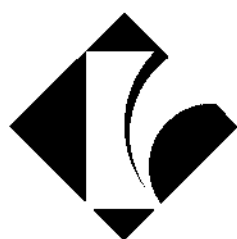

rinstrum

1203

**Weight Transmitter
Installation Manual**

For use with Software Versions 1.0 and above

1203-601-120

Table of Contents

1. INTRODUCTION	4
1.1. Approvals	4
1.2. Features	4
1.3. Manuals	5
1.4. Models	5
2. SPECIFICATIONS	6
3. INFORMATION	7
3.1. Digital Setup	7
3.2. Setpoints	7
3.3. Remote Input	7
3.4. LEDs	7
3.5. 1203 Viewer Software	7
4. WARNINGS	8
4.1. General	8
4.2. Power Supply	8
4.3. Load Cell Signals and Scale Build	8
4.4. 6-Wire Connection	9
4.5. 4-Wire Connection	9
4.6. Serial Ports	9
4.7. Cable Shield Connection and Earthing	10
5. CONNECTIONS	11
5.1. Load Cell: 6-Wire Connection (J4)	11
5.2. Load Cell: 4-Wire Connection (J4)	11
5.3. Communications: RS-232 Connection (J1)	12
5.4. Communications: RS-232 Connection (J6)	12
5.5. Communications: RS-485 Connection (J1)	13
5.6. Communications: RS-485 Connection (J6)	13
5.7. Analog Out (J8)	14
5.8. Input / Output: Setpoints (J10)	14
5.9. Input / Output: Inputs (J10)	14
5.10. Power (J12)	15
6. CONTROLS	15
7. COMMANDS	16
7.1. Query Error Status	16
7.2. Query Scale mV/V Value	17
7.3. Force Setpoint Outputs	17

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/rinstrum/1203 installation manual.html](https://the-checkout-tech.com/manuals/rinstrum/1203%20installation%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)