

5100
Digital Indicator
Communications Manual

For use with Software Versions 3.0 and above

Table of Contents

1. INTRODUCTION	4
2. CONNECTION OF THE 5100 NETWORK.....	5
2.1 RS232 CONNECTION	5
2.2 RS485/RS422 CONNECTION	5
3. COMMAND OVERVIEW	6
3.1 COMMANDS AND QUERIES	6
3.2 RESPONSES.....	6
3.3 PARAMETERS	6
3.4 TERMINATION	6
3.5 TRADE COUNTER:	6
4. COMMAND DETAILS.....	7
4.1 ADR SET ADDRESS	7
4.2 AFT AUTO OUTPUT FORMAT.....	7
4.3 ASF SET FILTERING	8
4.4 BAT BATCH CONTROL.....	9
4.5 BDR SET BAUD RATE.....	10
4.6 CDL SET ZERO.....	10
4.7 CLK SET CLOCK	11
4.8 COF SET OUTPUT FORMAT.....	11
4.9 CWT SET CALIBRATION WEIGHT.....	13
4.10 ENU SET UNITS.....	13
4.11 ESR? QUERY STATUS	14
4.12 FNC FUNCTION KEY SETTING	15
4.13 FOP FORCE OUTPUT	15
4.14 IAD SET SCALE BUILD	16
4.15 ICR SET MEASUREMENT RATE.....	17
4.16 IDN SET IDENTIFICATION	17
4.17 LBT BUTTON LOCK SETTINGS.....	18
4.18 LDW CALIBRATE ZERO DEAD WEIGHT.....	18
4.19 LIC LINEARISATION	19
4.20 LIM MATERIAL SETTINGS	20
4.21 LIR RECIPE SETTINGS	20
4.22 LIS GENERAL SETPOINT SETTINGS.....	21
4.23 LIT SET TARGET VALUE	22
4.24 LIV SETPOINT SETTINGS.....	22
4.25 LOG? RECIPE & MATERIAL LOGS	24
4.26 LWT CALIBRATE SPAN	25
4.27 MSV? QUERY MEASURED WEIGHT VALUE	26
4.28 MTD MOTION SETTINGS	27
4.29 PCD ENTER PASSCODE	27
4.30 PCE SET COUNTING SAMPLE	28
4.31 PFT PRINTED TICKET OUTPUT FORMAT	28
4.32 PRS PRINTER/SERIAL 2 SETTINGS.....	29
4.33 PRT PRINT	30
4.34 PST SET PRINTER HEADERS	31
4.35 RBT REMOTE BUTTON SETTINGS	31
4.36 REC SET CURRENT RECIPE	32
4.37 RES RESET	33
4.38 STP STOP CONTINUOUS TRANSFER	33
4.39 SXX SELECT UNIT	33
4.40 TAR TARE.....	34
4.41 TAS GROSS / NET	34
4.42 TAV SET TARE VALUE	35
4.43 TDD LOAD/SAVE SETUP	35
4.44 VAL? MV/V VALUE QUERY	35
4.45 WMD SET WEIGHING MODE	36
4.46 ZST ZERO SETTINGS.....	37
5. COMMAND SUMMARY	38
5.1 SET COMMUNICATION PARAMETERS.....	38

RANGER 5100 - Communications Manual – Rev 3.1

5.2	SET SCALE BUILD.....	38
5.3	CALIBRATION	38
5.4	SET SCALE OPTIONS.....	38
5.5	BATCHING SETTINGS	38
5.6	GENERAL COMMANDS	39
5.7	QUERIES.....	39
5.8	TEST COMMANDS.....	39
5.9	COMMON COMMANDS.....	39

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/rinstrum/5100 communications manual.html](https://the-checkout-tech.com/manuals/rinstrum/5100%20communications%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)