

**5100**  
**Digital Indicator**  
**Reference Manual**

**For use with Software Versions 3.1 and above**

5100-600-320

## TABLE OF CONTENTS

<b>1. INTRODUCTION .....</b>	<b>4</b>
1.1. THE MANUALS.....	4
<b>2. SPECIFICATIONS.....</b>	<b>5</b>
<b>3. INSTALLATION.....</b>	<b>6</b>
3.1. PANEL MOUNTING .....	6
3.2. DC POWER SUPPLY .....	6
3.3. AC POWER SUPPLY .....	6
3.4. LOAD CELL SIGNALS AND SCALE BUILD.....	6
3.5. LOAD CELL CONNECTION .....	7
3.6. SERIAL PORTS.....	7
3.7. THE OPTION CARDS.....	8
<b>4. DISPLAY AND CONTROLS.....</b>	<b>9</b>
4.1. FRONT PANEL .....	9
4.2. VISUAL DISPLAY.....	9
4.3. CONTROL BUTTONS (6) AND (7) .....	10
4.4. DATA ENTRY MODES.....	11
<b>5. BASIC OPERATION.....</b>	<b>13</b>
5.1. BASIC TERMINOLOGY .....	13
5.2. USING THE PRIMARY KEY FUNCTIONS .....	13
5.3. USING THE OPERATOR INTERFACE .....	15
<b>6. APPLICATION CONFIGURATION ISSUES .....</b>	<b>17</b>
6.1. GENERAL SETUP INFORMATION .....	17
<b>7. DIGITAL SETUP.....</b>	<b>21</b>
7.1. OPERATION OF THE DIGITAL SETUP MENUS.....	21
7.2. SCALE BUILD - (BUILD) .....	22
7.3. SCALE OPTIONS - (OPTION).....	23
7.4. SCALE CALIBRATION - (CAL) .....	25
7.5. SPECIAL SETTINGS MENU - (SPEC).....	25
7.6. COMMUNICATIONS OPTIONS - (SERIAL).....	27
7.7. SET POINTS - (SET.PTS).....	31
7.8. ANALOGUE SETTINGS - (ANALOG).....	33
7.9. CLOCK SETTINGS - (CLOC) .....	34
7.10. SPECIAL TEST SECTION - (TEST) .....	35
7.11. FACTORY ADJUSTMENT MENU - (FACTRY) .....	35
7.12. LEAVING DIGITAL SETUP - (-END-).....	36
<b>8. CALIBRATION .....</b>	<b>37</b>
8.1. PERFORMING A DIGITAL CALIBRATION WITH TEST WEIGHTS .....	37
8.2. DIRECT MV/V CALIBRATION .....	38
8.3. USING THE LINEARISATION .....	39

<b>9. THE SERIAL OUTPUTS .....</b>	<b>41</b>
9.1. SINGLE AND AUTOMATIC WEIGHT OUTPUT FROM THE 5100.....	41
9.2. NETWORKING THE 5100.....	44
9.3. PRINTER DRIVING .....	45
9.4. PLC OUTPUT DRIVING .....	49
<b>10. SETPOINTS.....</b>	<b>50</b>
10.1. CONNECTION.....	50
10.2. BASIC SETPOINT OPERATION .....	50
10.3. SETPOINT TYPES AND OPTIONS (SET.TYP) .....	53
10.4. GENERAL CONFIGURATION .....	56
10.5. OPERATOR PARAMETERS .....	59
10.6. FUNCTION KEY, EXTERNAL KEYS AND INTERLOCK .....	60
10.7. SETPOINT MESSAGES .....	62
10.8. SETPOINT PRINTING .....	62
10.9. PLC OUTPUT MODULE .....	63
<b>11. EXTENDED FUNCTIONS.....</b>	<b>64</b>
11.1. INTRODUCTION.....	64
11.2. EXTENDED FUNCTION DETAILS.....	64
<b>12. ACCESSORIES AND OPTIONS .....</b>	<b>66</b>
12.1. INTRODUCTION.....	66
12.2. INSTALLING OPTION CARDS .....	66
12.3. THE SETPOINT CARD.....	66
12.4. THE 'COMBO' CARD .....	67
12.5. SOFTWARE OPTIONS.....	69
<b>13. ERROR MESSAGES .....</b>	<b>70</b>
13.1. WEIGHING ERRORS.....	70
13.2. SETUP ERRORS.....	70
13.3. CALIBRATION ERRORS .....	70
13.4. DIAGNOSTIC ERRORS.....	71
<b>14. SETUP MENU QUICK REFERENCE .....</b>	<b>72</b>

**SPECIAL NOTE  
TRADE USE OF THE RANGER 5100**

This manual may occasionally make reference to Trade Use settings of the **5100**. Only properly marked Trade Certified versions of the **5100** can be used in "Legal for Trade" applications.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/rinstrum/5100 reference manual.html](https://the-checkout-tech.com/manuals/rinstrum/5100%20reference%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)