

RANGER



INSTRUMENTS

RANGER

**5200
DIGITAL
INDICATOR**
(Totaliser/Checkweigher)
Reference Manual

**For use with Software
Versions 1.0 & above**

Table of Contents

1.	INTRODUCTION	8
1.1.	The Manuals	9
1.2.	Document Conventions.....	9
2.	SPECIFICATIONS	10
3.	INSTALLATION	11
3.1.	Introduction	11
3.2.	Electrical Safety	11
3.3.	Panel Mounting	11
3.4.	DC Power Supply.....	12
3.5.	AC Power Supply.....	12
3.6.	Load Cell Signals and Scale Build	12
3.7.	Connecting Shields	12
3.7.1.	Cable Shield Connection and Earthing.....	13
3.8.	Unused Pins.....	13
3.9.	Load Cell Connection.....	13
3.9.1.	6-Wire Connection	13
3.9.2.	4-Wire Connection	14
3.9.3.	Serial Ports.....	14
3.10.	“RANGER SMART” Software Option	17
3.10.1.	Procedure to Enter a Software Option Code into the 5200	17
4.	DATA ENTRY (KEYPAD)	18
4.1.	Editing Annunciators	18
4.2.	Numeric Entry	19
4.3.	Selections and Options	19
4.3.1.	Selection Methods.....	20
4.3.2.	Items with Multiple Options	20
4.4.	Alphanumeric Keypad Entry.....	21
4.4.1.	Basic Entry	21
4.4.2.	Advanced Entry	22
5.	BASIC OPERATION (KEYPAD).....	23
5.1.	5200 Specific Weighing Terminology	23
5.2.	Display and Controls	23
5.2.1.	Front Panel: Visual Display	24
5.3.	Function Keys	25
5.3.1.	Primary Function	25
5.3.2.	Editing Function	25
5.3.3.	Stability Considerations.....	26
5.3.4.	ZERO Key	26
5.3.5.	TARE Key	26
5.3.6.	GROSS/NET Key.....	26
5.3.7.	PRINT Key	27
5.3.8.	OK (FRONT FUNCTION) Key.....	27
5.3.9.	TOTALS Product, Session, Grand Keys	27
5.3.10.	TARGET Key	27
5.3.11.	ID Key	28
5.3.12.	FIND Key.....	28
5.3.13.	ESC/C Key	28
6.	TOTALISING DESCRIPTION	29
6.1.	Overview	29
6.2.	5200 Totals	29
6.2.1.	Product Totals	29
6.2.2.	Session Total	29

6.2.3.	Grand Total	29
6.3.	Information Stored For Each Total	29
6.4.	Operator Procedures	30
6.5.	Totalising Printing	30
6.6.	Ranger Smart Software Option	30
7.	CHECKWEIGHING DESCRIPTION.....	31
7.1.	Connection.....	31
7.2.	Checkweigh Operation.....	31
7.3.	Multiple Product Checkweighing	32
7.4.	Checkweigh Totalising	32
7.5.	Viewing Results	32
7.6.	Setpoint Targets.....	32
7.7.	Operator Procedures	32
7.8.	Checkweigh Printing	32
7.9.	Ranger Smart Software Option	32
8.	OPERATOR PROCEDURES (KEYPAD).....	33
8.1.	Managing Product Names.....	33
8.1.1.	Create New Product Name	33
8.1.2.	Delete Product Name	33
8.1.3.	Search and Select Existing Product Name.....	33
8.2.	Managing Targets and User Strings	34
8.2.1.	Setting Targets for Each Product (via the Operator Menu)	34
8.2.2.	Setting User Strings (via the Operator Menu)	34
8.3.	Totalising Procedures	35
8.3.1.	Add Weight to Product Total	35
8.3.2.	Search for Product Name/Add Weight to Product Total (Combined Steps)	35
8.3.3.	Undo the Last Add to the Current Product Total	35
8.3.4.	Viewing Totals and Displaying Other Totalising Information	35
8.4.	Checkweigh Procedures	36
8.4.1.	Checkweigh Using Weight Trigger	36
8.4.2.	Checkweigh Using Input Trigger	36
8.4.3.	Change Checkweigh Display	36
8.4.4.	Viewing Totals and Displaying Other Checkweigh Total Information	36
8.5.	Clearing Totals	37
8.5.1.	Clear Product Total	37
8.5.2.	Clear Session Total	37
8.5.3.	Clear Grand Total.....	37
8.6.	View Printed Output	38
9.	CONFIGURATION ISSUES	39
9.1.	General Setup Information	39
9.2.	Basic Weighing Terminology.....	39
9.3.	Dual Interval and Dual Range Operation	40
9.4.	Direct mV/V Calibration.....	40
9.5.	Filtering Techniques.....	40
9.5.1.	FIR (Finite Impulse Response) Filter.....	41
9.5.2.	Digital Averaging	41
9.6.	Trade vs Industrial Mode.....	41
9.7.	Setup Counter.....	42
9.8.	Passcodes	42
9.8.1.	Operator Passcode	42
9.8.2.	Safe Setup Passcode.....	42
9.8.3.	Full Setup Passcode	42
10.	SETUP (KEYPAD)	43
10.1.	Accessing Setup	43

10.2.	Exiting Full or Safe Setup.....	44
10.3.	Exiting Operator Menu Setup.....	44
10.4.	Groups and Items	44
10.4.1.	GRP (Groups)	44
10.4.2.	ITM (Items).....	44
10.4.3.	SEL (Select Sub-Items).....	44
10.5.	Setup Menus.....	45
10.5.1.	BUILD (Scale Build Menu)	45
10.5.2.	OPTION (Scale Options Menu).....	46
10.5.3.	CAL (Scale Calibration Menu)	47
10.5.4.	SPEC (Special Settings Menu)	48
10.5.5.	SER.P1 and SER.P2 (Serial 1 and Serial 2 Communications Menu).....	50
10.5.6.	SET.PTS (Setpoints)	55
10.5.7.	ANALOG (Analog Settings).....	57
10.5.8.	CLOC (Clock Options).....	59
10.5.9.	TEST (Special Test Functions)	60
10.5.10.	FACTRY (Factory Adjustment Menu).....	61
10.5.11.	-End- (Leaving Setup)	61
11.	5200 VIEWER	62
11.1.	Keypad vs Viewer (Keystroke Equivalents).....	62
11.2.	Connecting Viewer to Instrument.....	62
11.3.	Disconnecting Viewer from Instrument	63
11.4.	Reading Instrument Settings into Viewer	64
11.5.	Exiting (Closing) the Viewer	64
11.6.	Tour of the Viewer.....	65
11.6.1.	Data Entry	65
11.6.2.	Menu	66
11.6.3.	Viewer Toolbar	67
11.7.	Viewer Tabs	67
11.7.1.	Tabs, Sections and Fields	67
11.7.2.	Display Tab	67
11.7.3.	Settings / Build Tab	68
11.7.4.	Settings / Option Tab	70
11.7.5.	Settings / Special Tab	73
11.7.6.	Settings / Serial / Port 1 and Port 2 Tabs	75
11.7.7.	Settings / Setpoint Tab	85
11.7.8.	Settings / Clock Tab	89
11.7.9.	Products Tab.....	91
11.7.10.	Calibration Tab.....	94
11.7.11.	Log Tab.....	96
11.7.12.	Test Tab	98
12.	OPERATOR PROCEDURES (VIEWER).....	99
12.1.	Save and Restore Viewer Settings and Log Data	99
12.1.1.	Read Settings from Instrument.....	99
12.1.2.	Write Settings to Instrument	99
12.1.3.	Open Settings from a File	99
12.1.4.	Save Settings to a File	99
12.1.5.	Open Log File Data from a File	99
12.1.6.	Save Log File Data to a File	100
12.2.	User Configuration Files.....	100
12.2.1.	Import Config Files	100
12.2.2.	Export Config Files	101
12.2.3.	Load Default Config.....	102
12.2.4.	Save Default Config	102
12.3.	Managing Product Names.....	103

12.3.1.	Create New Product Name	103
12.3.2.	Rename Product	103
12.3.3.	Delete Product	103
12.4.	Search and Select Existing Product Name	103
12.5.	Managing Targets and User Strings	103
12.5.1.	Setting Targets for Each Product	103
12.5.2.	Setting User Strings	104
12.6.	Totalising Procedures	104
12.6.1.	Viewing Totals and Displaying Other Totalising Information	104
12.7.	Checkweigh Procedures	104
12.7.1.	Viewing Totals and Displaying Other Checkweigh Total Information	104
12.8.	Clearing Totals	104
12.8.1.	Clear Product Total	104
12.8.2.	Clear Session Total (Clear Only).....	104
12.8.3.	Clear Grand Total.....	105
12.8.4.	Delete All Product Names	105
13.	CALIBRATION.....	106
13.1.	Write Settings to Instrument / Read Settings from Instrument	106
13.2.	Performing a Digital Calibration with Test Weights	106
13.2.1.	ZERO (Zero Calibration Routine)	107
13.2.2.	SPAN (Span Calibration Routine)	107
13.3.	Direct m/V Calibration (Zero Calibration Routine).....	108
13.4.	Direct m/V Calibration (Span Calibration Routine).....	108
13.5.	Using Linearisation	109
13.5.1.	Set or Edit Linearisation Points	109
13.5.2.	Clear Linearisation Points	110
13.6.	Restore Factory Calibration	110
14.	SERIAL OUTPUTS	111
14.1.	Automatic Weight Output	111
14.1.1.	Auto Weight Format String.....	111
14.1.2.	Automatic Formats	112
14.2.	Printer Output.....	113
14.2.1.	Print Formats.....	113
14.2.2.	Printer Modes	113
14.2.3.	Printer Space	113
14.2.4.	Headers and Footers.....	114
14.2.5.	Custom Formats.....	114
14.3.	Networking the 5200	116
14.3.1.	Basic Commands	116
15.	OTHER CHARACTERS / CODES	117
15.1.	Viewing and Entering Other Characters/Codes with the Viewer	117
15.2.	Preset Tokens	117
15.2.1.	Events Tokens	117
15.2.2.	Format Tokens	118
15.2.3.	Product Tokens	118
15.2.4.	Session Total Tokens.....	119
15.2.5.	Grand Total Tokens	119
15.2.6.	Reading Tokens	119
15.2.7.	User Strings Tokens.....	120
15.2.8.	Other Tokens (Status)	120
15.2.9.	Other Tokens (Misc).....	120
15.2.10.	ASCII Codes	120
16.	SETPOINTS	122
16.1.	Connection.....	122

16.2.	Basic Setpoint Operation	122
16.2.1.	Configuring a Setpoint.....	122
16.3.	Setpoint Types (SET.TYP).....	123
16.3.1.	None.....	123
16.3.2.	Active	123
16.3.3.	Check	123
16.3.4.	Error	123
16.3.5.	Motion	123
16.3.6.	Zero.....	124
16.3.7.	Net	124
16.3.8.	Hold.....	124
16.4.	Setpoint Options (SET.TYP)	124
16.4.1.	Source (Gross, Net, Reading)	124
16.4.2.	Direction (Over, Under)	124
16.4.3.	Logic (High, Low, Pulse, Repeat).....	124
17.	SPECIAL FUNCTIONS	125
17.1.	Introduction	125
17.2.	Front Panel Keys (ZERO, TARE, GROSS/NET, PRINT) ®	125
17.3.	Front Panel Function Key (FRONT) ®	125
17.4.	Remote Keys (Remote 1 (REM 1) to Remote 4 (REM 4))	125
17.5.	Special Functions.....	125
17.5.1.	None.....	125
17.5.2.	Zero, Tare, Gross/Net, Print, Func	125
17.5.3.	® Blank	125
17.5.4.	® Lock.....	126
17.5.5.	Check (Checkweigh)	126
17.5.6.	Total	126
17.5.7.	Hold and Peak Hold	126
17.5.8.	Count.....	126
18.	ACCESSORIES AND OPTIONS.....	127
18.1.	Introduction	127
18.2.	Installing Option Cards.....	127
18.3.	Setpoint Card	127
18.3.1.	Output Drivers	128
18.3.2.	Remote Inputs.....	128
18.4.	Combo Card.....	129
18.4.1.	Fine Adjustment of Analog Outputs.....	129
19.	APPENDIX	130
19.1.	ASCII Codes	130
19.2.	Error Messages.....	131
19.2.1.	Weighing Errors	131
19.2.2.	Setup Errors	132
19.2.3.	Calibration Errors	132
19.2.4.	Diagnostic Errors.....	133
19.3.	Glossary Terms.....	134
19.4.	List of Figures	135
19.5.	List of Tables.....	135
20.	INDEX	136

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/rinstrum/5200 reference manual.html](https://the-checkout-tech.com/manuals/rinstrum/5200%20reference%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)