

**RANGER**



**INSTRUMENTS**

**RANGER**

**5200**

**DIGITAL**

**INDICATOR**

**(Totaliser/Checkweigher)**

**Reference Manual**

**For use with Software  
Versions 1.0 & above**

## Table of Contents

<b>1. INTRODUCTION</b>	<b>8</b>
1.1. The Manuals	9
1.2. Document Conventions	9
<b>2. SPECIFICATIONS</b>	<b>10</b>
<b>3. INSTALLATION</b>	<b>11</b>
3.1. Introduction	11
3.2. Electrical Safety	11
3.3. Panel Mounting	11
3.4. DC Power Supply	12
3.5. AC Power Supply	12
3.6. Load Cell Signals and Scale Build	12
3.7. Connecting Shields	12
3.7.1. Cable Shield Connection and Earthing	13
3.8. Unused Pins	13
3.9. Load Cell Connection	13
3.9.1. 6-Wire Connection	13
3.9.2. 4-Wire Connection	14
3.9.3. Serial Ports	14
3.10. "RANGER SMART" Software Option	17
3.10.1. Procedure to Enter a Software Option Code into the 5200	17
<b>4. DATA ENTRY (KEYPAD)</b>	<b>18</b>
4.1. Editing Annunciators	18
4.2. Numeric Entry	19
4.3. Selections and Options	19
4.3.1. Selection Methods	20
4.3.2. Items with Multiple Options	20
4.4. Alphanumeric Keypad Entry	21
4.4.1. Basic Entry	21
4.4.2. Advanced Entry	22
<b>5. BASIC OPERATION (KEYPAD)</b>	<b>23</b>
5.1. 5200 Specific Weighing Terminology	23
5.2. Display and Controls	23
5.2.1. Front Panel: Visual Display	24
5.3. Function Keys	25
5.3.1. Primary Function	25
5.3.2. Editing Function	25
5.3.3. Stability Considerations	26
5.3.4. ZERO Key	26
5.3.5. TARE Key	26
5.3.6. GROSS/NET Key	26
5.3.7. PRINT Key	27
5.3.8. OK (FRONT FUNCTION) Key	27
5.3.9. TOTALS Product, Session, Grand Keys	27
5.3.10. TARGET Key	27
5.3.11. ID Key	28
5.3.12. FIND Key	28
5.3.13. ESC/C Key	28
<b>6. TOTALISING DESCRIPTION</b>	<b>29</b>
6.1. Overview	29
6.2. 5200 Totals	29
6.2.1. Product Totals	29
6.2.2. Session Total	29

6.2.3.	Grand Total .....	29
6.3.	Information Stored For Each Total .....	29
6.4.	Operator Procedures .....	30
6.5.	Totalising Printing .....	30
6.6.	Ranger Smart Software Option .....	30
<b>7.</b>	<b>CHECKWEIGHING DESCRIPTION.....</b>	<b>31</b>
7.1.	Connection.....	31
7.2.	Checkweigh Operation.....	31
7.3.	Multiple Product Checkweighing .....	32
7.4.	Checkweigh Totalising .....	32
7.5.	Viewing Results .....	32
7.6.	Setpoint Targets.....	32
7.7.	Operator Procedures .....	32
7.8.	Checkweigh Printing .....	32
7.9.	Ranger Smart Software Option .....	32
<b>8.</b>	<b>OPERATOR PROCEDURES (KEYPAD).....</b>	<b>33</b>
8.1.	Managing Product Names.....	33
8.1.1.	Create New Product Name .....	33
8.1.2.	Delete Product Name .....	33
8.1.3.	Search and Select Existing Product Name.....	33
8.2.	Managing Targets and User Strings .....	34
8.2.1.	Setting Targets for Each Product (via the Operator Menu) .....	34
8.2.2.	Setting User Strings (via the Operator Menu) .....	34
8.3.	Totalising Procedures .....	35
8.3.1.	Add Weight to Product Total .....	35
8.3.2.	Search for Product Name/Add Weight to Product Total (Combined Steps) .	35
8.3.3.	Undo the Last Add to the Current Product Total .....	35
8.3.4.	Viewing Totals and Displaying Other Totalising Information .....	35
8.4.	Checkweigh Procedures .....	36
8.4.1.	Checkweigh Using Weight Trigger .....	36
8.4.2.	Checkweigh Using Input Trigger .....	36
8.4.3.	Change Checkweigh Display .....	36
8.4.4.	Viewing Totals and Displaying Other Checkweigh Total Information .....	36
8.5.	Clearing Totals.....	37
8.5.1.	Clear Product Total .....	37
8.5.2.	Clear Session Total.....	37
8.5.3.	Clear Grand Total.....	37
8.6.	View Printed Output .....	38
<b>9.</b>	<b>CONFIGURATION ISSUES .....</b>	<b>39</b>
9.1.	General Setup Information .....	39
9.2.	Basic Weighing Terminology.....	39
9.3.	Dual Interval and Dual Range Operation .....	40
9.4.	Direct mV/V Calibration.....	40
9.5.	Filtering Techniques.....	40
9.5.1.	FIR (Finite Impulse Response) Filter.....	41
9.5.2.	Digital Averaging .....	41
9.6.	Trade vs Industrial Mode.....	41
9.7.	Setup Counter.....	42
9.8.	Passcodes .....	42
9.8.1.	Operator Passcode .....	42
9.8.2.	Safe Setup Passcode.....	42
9.8.3.	Full Setup Passcode .....	42
<b>10.</b>	<b>SETUP (KEYPAD) .....</b>	<b>43</b>
10.1.	Accessing Setup .....	43

10.2.	Exiting Full or Safe Setup.....	44
10.3.	Exiting Operator Menu Setup.....	44
10.4.	Groups and Items .....	44
10.4.1.	GRP (Groups) .....	44
10.4.2.	ITM (Items).....	44
10.4.3.	SEL (Select Sub-Items).....	44
10.5.	Setup Menus.....	45
10.5.1.	BUILD (Scale Build Menu) .....	45
10.5.2.	OPTION (Scale Options Menu).....	46
10.5.3.	CAL (Scale Calibration Menu) .....	47
10.5.4.	SPEC (Special Settings Menu) .....	48
10.5.5.	SER.P1 and SER.P2 (Serial 1 and Serial 2 Communications Menu).....	50
10.5.6.	SET.PTS (Setpoints).....	55
10.5.7.	ANALOG (Analog Settings).....	57
10.5.8.	CLOC (Clock Options).....	59
10.5.9.	TEST (Special Test Functions) .....	60
10.5.10.	FACTRY (Factory Adjustment Menu).....	61
10.5.11.	-End- (Leaving Setup) .....	61
<b>11.</b>	<b>5200 VIEWER .....</b>	<b>62</b>
11.1.	Keypad vs Viewer (Keystroke Equivalents).....	62
11.2.	Connecting Viewer to Instrument .....	62
11.3.	Disconnecting Viewer from Instrument .....	63
11.4.	Reading Instrument Settings into Viewer .....	64
11.5.	Exiting (Closing) the Viewer .....	64
11.6.	Tour of the Viewer.....	65
11.6.1.	Data Entry .....	65
11.6.2.	Menu .....	66
11.6.3.	Viewer Toolbar .....	67
11.7.	Viewer Tabs.....	67
11.7.1.	Tabs, Sections and Fields .....	67
11.7.2.	Display Tab .....	67
11.7.3.	Settings / Build Tab .....	68
11.7.4.	Settings / Option Tab .....	70
11.7.5.	Settings / Special Tab .....	73
11.7.6.	Settings / Serial / Port 1 and Port 2 Tabs .....	75
11.7.7.	Settings / Setpoint Tab.....	85
11.7.8.	Settings / Clock Tab .....	89
11.7.9.	Products Tab.....	91
11.7.10.	Calibration Tab.....	94
11.7.11.	Log Tab.....	96
11.7.12.	Test Tab.....	98
<b>12.</b>	<b>OPERATOR PROCEDURES (VIEWER).....</b>	<b>99</b>
12.1.	Save and Restore Viewer Settings and Log Data .....	99
12.1.1.	Read Settings from Instrument.....	99
12.1.2.	Write Settings to Instrument.....	99
12.1.3.	Open Settings from a File.....	99
12.1.4.	Save Settings to a File .....	99
12.1.5.	Open Log File Data from a File .....	99
12.1.6.	Save Log File Data to a File .....	100
12.2.	User Configuration Files.....	100
12.2.1.	Import Config Files .....	100
12.2.2.	Export Config Files .....	101
12.2.3.	Load Default Config.....	102
12.2.4.	Save Default Config .....	102
12.3.	Managing Product Names.....	103

12.3.1.	Create New Product Name .....	103
12.3.2.	Rename Product .....	103
12.3.3.	Delete Product .....	103
12.4.	Search and Select Existing Product Name .....	103
12.5.	Managing Targets and User Strings .....	103
12.5.1.	Setting Targets for Each Product .....	103
12.5.2.	Setting User Strings .....	104
12.6.	Totalising Procedures .....	104
12.6.1.	Viewing Totals and Displaying Other Totalising Information .....	104
12.7.	Checkweigh Procedures .....	104
12.7.1.	Viewing Totals and Displaying Other Checkweigh Total Information .....	104
12.8.	Clearing Totals .....	104
12.8.1.	Clear Product Total .....	104
12.8.2.	Clear Session Total (Clear Only).....	104
12.8.3.	Clear Grand Total.....	105
12.8.4.	Delete All Product Names .....	105
<b>13.</b>	<b>CALIBRATION.....</b>	<b>106</b>
13.1.	Write Settings to Instrument / Read Settings from Instrument .....	106
13.2.	Performing a Digital Calibration with Test Weights .....	106
13.2.1.	ZERO (Zero Calibration Routine) .....	107
13.2.2.	SPAN (Span Calibration Routine) .....	107
13.3.	Direct mV/V Calibration (Zero Calibration Routine).....	108
13.4.	Direct mV/V Calibration (Span Calibration Routine).....	108
13.5.	Using Linearisation .....	109
13.5.1.	Set or Edit Linearisation Points .....	109
13.5.2.	Clear Linearisation Points .....	110
13.6.	Restore Factory Calibration .....	110
<b>14.</b>	<b>SERIAL OUTPUTS .....</b>	<b>111</b>
14.1.	Automatic Weight Output .....	111
14.1.1.	Auto Weight Format String.....	111
14.1.2.	Automatic Formats .....	112
14.2.	Printer Output.....	113
14.2.1.	Print Formats.....	113
14.2.2.	Printer Modes.....	113
14.2.3.	Printer Space .....	113
14.2.4.	Headers and Footers.....	114
14.2.5.	Custom Formats.....	114
14.3.	Networking the 5200 .....	116
14.3.1.	Basic Commands .....	116
<b>15.</b>	<b>OTHER CHARACTERS / CODES .....</b>	<b>117</b>
15.1.	Viewing and Entering Other Characters/Codes with the Viewer .....	117
15.2.	Preset Tokens.....	117
15.2.1.	Events Tokens .....	117
15.2.2.	Format Tokens .....	118
15.2.3.	Product Tokens .....	118
15.2.4.	Session Total Tokens.....	119
15.2.5.	Grand Total Tokens .....	119
15.2.6.	Reading Tokens .....	119
15.2.7.	User Strings Tokens.....	120
15.2.8.	Other Tokens (Status).....	120
15.2.9.	Other Tokens (Misc).....	120
15.2.10.	ASCII Codes .....	120
<b>16.</b>	<b>SETPOINTS .....</b>	<b>122</b>
16.1.	Connection.....	122

16.2.	Basic Setpoint Operation .....	122
16.2.1.	Configuring a Setpoint.....	122
16.3.	Setpoint Types (SET.TYP).....	123
16.3.1.	None.....	123
16.3.2.	Active .....	123
16.3.3.	Check.....	123
16.3.4.	Error .....	123
16.3.5.	Motion .....	123
16.3.6.	Zero.....	124
16.3.7.	Net .....	124
16.3.8.	Hold.....	124
16.4.	Setpoint Options (SET.TYP) .....	124
16.4.1.	Source (Gross, Net, Reading) .....	124
16.4.2.	Direction (Over, Under) .....	124
16.4.3.	Logic (High, Low, Pulse, Repeat) .....	124
<b>17.</b>	<b>SPECIAL FUNCTIONS .....</b>	<b>125</b>
17.1.	Introduction .....	125
17.2.	Front Panel Keys (ZERO, TARE, GROSS/NET, PRINT) ® .....	125
17.3.	Front Panel Function Key (FRONT) ® .....	125
17.4.	Remote Keys (Remote 1 (REM 1) to Remote 4 (REM 4)) .....	125
17.5.	Special Functions.....	125
17.5.1.	None.....	125
17.5.2.	Zero, Tare, Gross/Net, Print, Func .....	125
17.5.3.	® Blank .....	125
17.5.4.	® Lock.....	126
17.5.5.	Check (Checkweigh) .....	126
17.5.6.	Total .....	126
17.5.7.	Hold and Peak Hold .....	126
17.5.8.	Count.....	126
<b>18.</b>	<b>ACCESSORIES AND OPTIONS.....</b>	<b>127</b>
18.1.	Introduction .....	127
18.2.	Installing Option Cards.....	127
18.3.	Setpoint Card.....	127
18.3.1.	Output Drivers .....	128
18.3.2.	Remote Inputs.....	128
18.4.	Combo Card.....	129
18.4.1.	Fine Adjustment of Analog Outputs.....	129
<b>19.</b>	<b>APPENDIX .....</b>	<b>130</b>
19.1.	ASCII Codes .....	130
19.2.	Error Messages.....	131
19.2.1.	Weighing Errors .....	131
19.2.2.	Setup Errors .....	132
19.2.3.	Calibration Errors .....	132
19.2.4.	Diagnostic Errors.....	133
19.3.	Glossary Terms.....	134
19.4.	List of Figures .....	135
19.5.	List of Tables.....	135
<b>20.</b>	<b>INDEX .....</b>	<b>136</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*