

RANGER



INSTRUMENTS

RANGER

5230

DIGITAL

INDICATOR

(Truck Weigher)

Reference Manual

**For use with Software
Versions 2.0 & above**

Table of Contents

1. INTRODUCTION	7
1.1. The Manuals	8
1.2. Document Conventions	8
2. SPECIFICATIONS	9
3. OVERVIEW	10
3.1. Single Weight Ticketing (One Pass Only)	10
3.2. Single Weighing (In-Out)	10
3.3. Single Weighing with Preset Tare (In-Out)	10
3.4. Batch Single Weighing (In-Out)	11
3.5. Multiple Axle Weighing (In-Out)	11
3.6. Variable Axle Weighing (In-Out)	11
3.7. Automatic Multiple Axle Weighing (In-Out)	11
4. INSTALLATION	12
4.1. Introduction	12
4.2. Electrical Safety	12
4.3. Panel Mounting	12
4.4. DC Power Supply	13
4.5. AC Power Supply	13
4.6. Load Cell Signals and Scale Build	13
4.7. Connecting Shields	13
4.7.1. Cable Shield Connection and Earthing	14
4.8. Unused Pins	14
4.9. Load Cell Connection	14
4.9.1. 6-Wire Connection	14
4.9.2. 4-Wire Connection	15
4.9.3. Serial Ports	16
5. CONFIGURATION ISSUES	19
5.1. General Setup Information	19
5.2. Basic Weighing Terminology	19
5.3. Dual Interval and Dual Range Operation	20
5.4. Direct mV/V Calibration	20
5.5. Filtering Techniques	20
5.5.1. FIR (Finite Impulse Response) Filter	21
5.5.2. Digital Averaging	21
5.6. Trade vs Industrial Mode	22
5.7. Setup Counter	22
5.8. Passcodes	22
5.8.1. Operator Passcode	23
5.8.2. Safe Setup Passcode	23
5.8.3. Full Setup Passcode	23
5.9. Data Entry	23
5.9.1. Viewer	23
5.9.2. Keypad	24
6. MANAGING THE 5230 VIEWER	28
6.1. Connecting Viewer to Instrument	28
6.2. Disconnecting Viewer from Instrument	29
6.3. Reading Instrument Settings into Viewer	29
6.4. Exiting (Closing) the Viewer	30
6.5. Tour of the Viewer	31
6.5.1. Menu	31
6.5.2. Toolbar	32
6.5.3. Save and Restore Viewer Settings and Log Data	32

6.6.	The Viewer Tabs.....	33
7.	BASIC OPERATION	34
7.1.	Basic Weighing Terminology.....	34
7.2.	Display and Controls.....	34
7.2.1.	Keypad vs Viewer (Keystroke Equivalents).....	34
7.2.2.	Front Panel: Visual Display	35
7.3.	Function Keys	36
7.4.	Primary Functions	36
7.4.1.	Stability Considerations.....	36
7.4.2.	ZERO Key	37
7.4.3.	FIRST Key.....	37
7.4.4.	SECOND Key.....	37
7.4.5.	PRINT Key	37
7.4.6.	ACCEPT/OK Key	37
7.4.7.	REPORT Truck, Product or Dest. Keys.....	38
7.4.8.	TARGET Key	38
7.4.9.	ID Key	38
7.4.10.	FIND Key.....	39
7.4.11.	ESC/C Key	39
7.5.	Managing Trucks, Products and Destinations.....	39
7.5.1.	Manage IDs - Using the Keypad	39
7.5.2.	Manage IDs - Using the Viewer.....	42
7.6.	Truck ID Operations.....	46
7.6.1.	Single Axle Weighing	46
7.6.2.	Multiple or Variable Axle Weighing.....	48
7.6.3.	Batching Process (Remote Fill).....	50
7.7.	View Printed Output.....	51
7.8.	Maintenance	51
8.	KEYPAD SETUP.....	52
8.1.	General Information	52
8.1.1.	Accessing Setup	52
8.1.2.	Clear / Abort Function	52
8.1.3.	Data Entry	52
8.1.4.	Groups and Items.....	53
8.1.5.	Using the Editing Key Functions	53
8.1.6.	Exiting Setup	53
8.2.	Menus and Parameters.....	54
8.2.1.	BUILD (Scale Build)	54
8.2.2.	OPTION (Scale Options).....	55
8.2.3.	CAL (Scale Calibration).....	56
8.2.4.	SPEC (Special Settings Menu)	57
8.2.5.	TRUCK (Truck Weighing Settings).....	58
8.2.6.	SER.P1 (Serial 1 Communications Options).....	59
8.2.7.	SER.P2 (Serial 2 Communications Options).....	61
8.2.8.	SET.PTS (Setpoints).....	63
8.2.9.	ANALOG (Analog Settings).....	65
8.2.10.	CLOC (Clock Options).....	66
8.2.11.	TEST (Special Test Functions)	67
8.2.12.	FACTRY (Factory Adjustment Menu).....	68
8.2.13.	-End- (Leaving Setup)	68
9.	VIEWER SETUP	69
9.1.	General Information	69
9.1.1.	Managing the 5230 Viewer.....	69
9.1.2.	Tabs, Sections and Fields	69
9.1.3.	Data Entry	69

9.2.	Tabs and Parameters	69
9.2.1.	DISPLAY TAB	69
9.2.2.	SETTINGS / BUILD TAB.....	70
9.2.3.	SETTINGS / OPTION TAB.....	72
9.2.4.	SETTINGS / SPECIAL TAB	74
9.2.5.	SETTINGS / TRUCK.....	77
9.2.6.	SETTINGS / SERIAL 1 TAB.....	80
9.2.7.	SETTINGS / SERIAL 2 TAB.....	82
9.2.8.	SETTINGS / SETPOINT TAB	85
9.2.9.	SETTINGS / CLOCK TAB	88
9.2.10.	CALIBRATION TAB	90
9.2.11.	LOG TAB.....	92
9.2.12.	TEST TAB.....	94
10.	CALIBRATION.....	95
10.1.	Write Settings to Instrument / Read Settings from Instrument	95
10.2.	Performing a Digital Calibration with Test Weights	95
10.2.1.	ZERO (Zero Calibration Routine).....	96
10.2.2.	SPAN (Span Calibration Routine)	96
10.3.	Direct mV/V Calibration (Zero Calibration Routine).....	97
10.4.	Direct mV/V Calibration (Span Calibration Routine).....	97
10.5.	Using Linearisation	98
10.5.1.	Set or Edit Linearisation Points	98
10.5.2.	Clear Linearisation Points	99
10.6.	Restore Factory Calibration	99
11.	SERIAL OUTPUTS	100
11.1.	Automatic Weight Output	100
11.1.1.	Auto Weight Format String.....	101
11.2.	Networking the 5230	103
11.3.	Printer Output Formats	103
11.3.2.	Printer Space	106
11.3.3.	Header and Footer Text	106
11.3.4.	Custom Header, Footer and Ticket Formatting	107
12.	SETPOINTS	109
12.1.	Connection.....	109
12.2.	Basic Setpoint Operation	109
12.2.1.	Configuring a Setpoint.....	109
12.3.	Setpoint Types	110
12.3.1.	None.....	110
12.3.2.	Active	110
12.3.3.	Fill Material Setpoints: Slow, Medium, Fast, Finish	110
12.3.4.	Tolerance	111
12.3.5.	Run.....	111
12.3.6.	Pause.....	111
12.3.7.	Error	111
12.3.8.	Motion	112
12.3.9.	Zero.....	112
12.3.10.	Axle	112
12.4.	Setpoint Options	112
12.4.1.	Source (Gross, Net)	112
12.4.2.	Direction (Over, Under)	112
12.4.3.	Logic (High, Low)	112
12.4.4.	Alarm (None, Single, Double).....	112
12.4.5.	Correction (None, Auto Jogging).....	113
12.4.6.	Target.....	113
12.4.7.	In-flight (IN.FLT).....	113

12.4.8.	Tolerance (TOL) (Hysteresis).....	113
12.4.9.	General Options (GEN.OPT).....	114
12.4.10.	Tolerance Action (TOL.ACT).....	114
12.4.11.	Delay Options (DELAY).....	115
12.4.12.	Jogging Options (JOG).....	115
12.5.	Function Keys, External Keys and Interlock.....	116
12.6.	Setpoint Messages	116
13.	EXTENDED FUNCTIONS	117
13.1.	Introduction	117
13.2.	Extended Function Details	117
13.2.1.	Front Panel Keys: (ZERO, FIRST, SECOND, PRINT, ACCEPT).....	117
13.2.2.	Blank®.....	117
13.2.3.	Lock®.....	117
13.2.4.	Extended Setpointing Batch Control®.....	117
14.	ACCESSORIES AND OPTIONS.....	118
14.1.	Introduction	118
14.2.	Installing Option Cards.....	118
14.3.	Setpoint Card	118
14.3.1.	Output Drivers	118
14.3.2.	Remote Inputs.....	119
14.4.	Combo Card.....	119
14.4.1.	Fine Adjustment of Analog Outputs.....	120
15.	APPENDIX	121
15.1.	Keypad and Viewer Settings (Availability).....	121
15.2.	Error Messages.....	123
15.2.1.	Weighing Errors	124
15.2.2.	Setup Errors	124
15.2.3.	Calibration Errors	125
15.3.	Diagnostic Errors	125
15.4.	Glossary Terms.....	126
15.5.	List of Figures	127
15.6.	List of Tables.....	127
16.	INDEX	128

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/rinstrum/5230 reference manual.html](https://the-checkout-tech.com/manuals/rinstrum/5230%20reference%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)