

**6500
REMOTE
DISPLAY**

**Reference
Manual**

**For use with Software
Versions 1.5+**

TABLE OF CONTENTS

1 INTRODUCTION	3
1.1 THE MANUALS	3
1.2 OPERATING MODES.....	3
2 INSTALLATION.....	4
2.1 MOUNTING.....	4
2.2 ACCESSING CONNECTIONS / FITTING THE DECIMAL POINT	5
2.3 FITTING THE DECIMAL POINT	5
2.4 POWER CONNECTION	6
2.5 SERIAL CONNECTIONS.....	6
2.6 REASSEMBLY OF THE UNIT.....	7
3 DISPLAY AND CONTROLS.....	8
3.1 WEIGHT DISPLAY	8
3.2 UNITS INDICATOR PLATE.....	8
3.3 ANNUNCIATORS	8
3.4 SETUP BUTTONS.....	8
3.5 DATA ENTRY MODES	9
3.6 GROUPS, ITEMS, SUBITEMS AND THE SETTING BUTTONS	10
4 OPERATING MODE SETUP	11
4.1 PASSCODES	11
4.2 ENTERING OPERATING MODE SETUP.....	11
4.3 REMOTE OPERATING MODE SETUP MENUS.....	12
4.4 SUMMING MASTER OPERATING MODE SETUP MENUS	14
4.5 RANGER 1200 REMOTE DISPLAY OPERATING MODE SETUP MENUS - (R1200).....	15
5 CONFIGURING FOR REMOTE DISPLAY MODE	17
5.1 WIRING DIAGRAM FOR REMOTE DISPLAY MODE	17
5.2 CONFIGURING THE 5000 INDICATOR	17
5.3 CONFIGURING THE 6500 AS A REMOTE DISPLAY FOR A RANGER INDICATOR	17
5.4 CONFIGURING THE 6500 AS A REMOTE DISPLAY FOR A SUPPORTED INDICATOR	18
5.5 CONFIGURING THE 6500 AS A REMOTE DISPLAY FOR OTHER INDICATORS	18
5.6 PC MODE.....	23
6 CONFIGURING FOR SUMMING MODE.....	24
6.1 WIRING DIAGRAM FOR SUMMING MODE.....	24
6.2 CONFIGURING THE SLAVE 5000s OR 5100s.....	24
6.3 CONFIGURING THE 6500	24
7 CONFIGURING AS A RANGER 1200 DISPLAY	25
7.1 WIRING DIAGRAM FOR RANGER 1200 DISPLAY MODE	25
7.2 CONFIGURING THE 6500 AS A 1200 REMOTE DISPLAY.....	25
8 GENERAL SETUP	26
8.1 PASSCODES	26
8.2 ENTERING GENERAL SETUP	26
8.3 DISPLAY OPTIONS - (OPTION).....	26
8.4 SERIAL PORT 2 SETTINGS (SER 2)	27
8.5 AUTO TRANSMIT OPTIONS (AUTOFT)	27

8.6 TEST MENU - (TEST)	28
8.7 FACTORY ADJUSTMENT MENU - (FACTRY)	29
8.8 LEAVING GENERAL SETUP MENUS - (- End -)	29
9 CONFIGURING FOR SLAVE MODES.....	30
9.1 WIRING DIAGRAMS FOR SLAVE MODES	30
9.2 NETWORK SLAVE (SECONDARY PORT)	30
9.3 MODBUS SLAVE (SECONDARY PORT)	30
9.4 AUTOMATIC WEIGHT OUTPUT FROM THE 6500	31
10 SOFTWARE OPTIONS	34
10.1 6500 SOFTWARE OPTIONS	34
11 ERROR MESSAGES.....	35
11.1 CONFIGURATION ERRORS	35
11.2 WEIGHING ERRORS	35
11.3 OPERATING ERRORS.....	35
12 SPECIFICATIONS.....	36
13 ASCII CODES.....	37
14 SETUP MENU QUICK REFERENCE.....	38

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/rinstrum/6500 reference manual.html](https://the-checkout-tech.com/manuals/rinstrum/6500%20reference%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)