

6500
REMOTE
DISPLAY
Reference
Manual

For use with Software
Versions 1.5+

TABLE OF CONTENTS

| | | |
|----------|---|-----------|
| 1 | INTRODUCTION | 3 |
| 1.1 | THE MANUALS | 3 |
| 1.2 | OPERATING MODES | 3 |
| 2 | INSTALLATION..... | 4 |
| 2.1 | MOUNTING..... | 4 |
| 2.2 | ACCESSING CONNECTIONS / FITTING THE DECIMAL POINT | 5 |
| 2.3 | FITTING THE DECIMAL POINT | 5 |
| 2.4 | POWER CONNECTION | 6 |
| 2.5 | SERIAL CONNECTIONS..... | 6 |
| 2.6 | REASSEMBLY OF THE UNIT..... | 7 |
| 3 | DISPLAY AND CONTROLS..... | 8 |
| 3.1 | WEIGHT DISPLAY | 8 |
| 3.2 | UNITS INDICATOR PLATE..... | 8 |
| 3.3 | ANNUNCIATORS | 8 |
| 3.4 | SETUP BUTTONS..... | 8 |
| 3.5 | DATA ENTRY MODES..... | 9 |
| 3.6 | GROUPS, ITEMS, SUBITEMS AND THE SETTING BUTTONS | 10 |
| 4 | OPERATING MODE SETUP..... | 11 |
| 4.1 | PASSCODES | 11 |
| 4.2 | ENTERING OPERATING MODE SETUP..... | 11 |
| 4.3 | REMOTE OPERATING MODE SETUP MENUS..... | 12 |
| 4.4 | SUMMING MASTER OPERATING MODE SETUP MENUS | 14 |
| 4.5 | RANGER 1200 REMOTE DISPLAY OPERATING MODE SETUP MENUS - (R1200)..... | 15 |
| 5 | CONFIGURING FOR REMOTE DISPLAY MODE | 17 |
| 5.1 | WIRING DIAGRAM FOR REMOTE DISPLAY MODE | 17 |
| 5.2 | CONFIGURING THE 5000 INDICATOR | 17 |
| 5.3 | CONFIGURING THE 6500 AS A REMOTE DISPLAY FOR A RANGER INDICATOR | 17 |
| 5.4 | CONFIGURING THE 6500 AS A REMOTE DISPLAY FOR A SUPPORTED INDICATOR | 18 |
| 5.5 | CONFIGURING THE 6500 AS A REMOTE DISPLAY FOR OTHER INDICATORS | 18 |
| 5.6 | PC MODE..... | 23 |
| 6 | CONFIGURING FOR SUMMING MODE..... | 24 |
| 6.1 | WIRING DIAGRAM FOR SUMMING MODE..... | 24 |
| 6.2 | CONFIGURING THE SLAVE 5000S OR 5100S..... | 24 |
| 6.3 | CONFIGURING THE 6500..... | 24 |
| 7 | CONFIGURING AS A RANGER 1200 DISPLAY | 25 |
| 7.1 | WIRING DIAGRAM FOR RANGER 1200 DISPLAY MODE..... | 25 |
| 7.2 | CONFIGURING THE 6500 AS A 1200 REMOTE DISPLAY..... | 25 |
| 8 | GENERAL SETUP | 26 |
| 8.1 | PASSCODES | 26 |
| 8.2 | ENTERING GENERAL SETUP | 26 |
| 8.3 | DISPLAY OPTIONS - (OPTION)..... | 26 |
| 8.4 | SERIAL PORT 2 SETTINGS (SER 2) | 27 |
| 8.5 | AUTO TRANSMIT OPTIONS (AUTOPT) | 27 |

| | |
|--|-----------|
| 8.6 TEST MENU - (TEST) | 28 |
| 8.7 FACTORY ADJUSTMENT MENU - (FACTRY) | 29 |
| 8.8 LEAVING GENERAL SETUP MENUS - (-END-) | 29 |
| 9 CONFIGURING FOR SLAVE MODES | 30 |
| 9.1 WIRING DIAGRAMS FOR SLAVE MODES | 30 |
| 9.2 NETWORK SLAVE (SECONDARY PORT) | 30 |
| 9.3 MODBUS SLAVE (SECONDARY PORT) | 30 |
| 9.4 AUTOMATIC WEIGHT OUTPUT FROM THE 6500 | 31 |
| 10 SOFTWARE OPTIONS | 34 |
| 10.1 6500 SOFTWARE OPTIONS | 34 |
| 11 ERROR MESSAGES | 35 |
| 11.1 CONFIGURATION ERRORS | 35 |
| 11.2 WEIGHING ERRORS | 35 |
| 11.3 OPERATING ERRORS | 35 |
| 12 SPECIFICATIONS | 36 |
| 13 ASCII CODES | 37 |
| 14 SETUP MENU QUICK REFERENCE | 38 |

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*