

LED and Electromechanical Remote Displays Reference Manual

Table of Contents

1.	INTRODUCTION	3
1.1.	Overview	3
1.2.	Document Scope	3
2.	SPECIFICATIONS.....	4
3.	DISPLAY	5
4.	INSTALLATION.....	6
4.1.	Overview	6
4.2.	Installation Preparation	6
4.3.	Dipswitches.....	7
4.4.	Unit Addressing.....	7
4.5.	Protocol Grouping.....	8
4.6.	Display Timeout	8
4.7.	Decimal Point.....	8
4.7.1.	LED Unit.....	8
4.7.2.	Electromechanical Unit	9
4.8.	Serial Connection.....	10
4.8.1.	Baud Rate and Parity.....	10
4.8.2.	Earthing Requirements for Cable Shields	11
4.8.3.	Powering Indicator from Remote Display (Pins 8 and 9)	11
4.8.4.	Dim LED Display (Pins 10 and 11).....	11
4.8.5.	RS232 Receive Only.....	11
4.8.6.	RS485 Receive Only.....	12
4.8.7.	20mA Current Loop Receive Only	12
4.9.	Power Connection.....	13
4.10.	Mounting	13
4.10.1.	Clip Attachment.....	13
4.10.2.	Wall Mounting	14
4.11.	Weather Hood	14
4.12.	Mounting Options.....	14
5.	PROTOCOL GROUP 0.....	15
5.1.	Overview	15
5.2.	Protocol 1	15
5.3.	Protocol 2	16
5.4.	Protocol 3.....	17
5.5.	Protocol 4.....	18
5.6.	Protocol 5.....	19
5.7.	Protocol 6.....	20
5.8.	Protocol 7	21
5.9.	Protocol 8	22
5.10.	Protocol 9.....	23
5.11.	Protocol 10.....	24
5.12.	Protocol 11.....	25
6.	PROTOCOL GROUP 1 – TEXT ONLY	26
7.	ERROR MESSAGES	27
7.1.	Weighing Errors	27

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/rinstrum/D640 reference manual.html](https://the-checkout-tech.com/manuals/rinstrum/D640%20reference%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)