

LED and Electromechanical Remote Displays Reference Manual

Table of Contents

1.	INTRODUCTION	3
1.1.	Overview	3
1.2.	Document Scope	3
2.	SPECIFICATIONS	4
3.	DISPLAY	5
4.	INSTALLATION	6
4.1.	Overview	6
4.2.	Installation Preparation	6
4.3.	Dipswitches	7
4.4.	Unit Addressing	7
4.5.	Protocol Grouping	8
4.6.	Display Timeout	8
4.7.	Decimal Point	8
4.7.1.	LED Unit	8
4.7.2.	Electromechanical Unit	9
4.8.	Serial Connection	10
4.8.1.	Baud Rate and Parity	10
4.8.2.	Earthing Requirements for Cable Shields	11
4.8.3.	Powering Indicator from Remote Display (Pins 8 and 9)	11
4.8.4.	Dim LED Display (Pins 10 and 11)	11
4.8.5.	RS232 Receive Only	11
4.8.6.	RS485 Receive Only	12
4.8.7.	20mA Current Loop Receive Only	12
4.9.	Power Connection	13
4.10.	Mounting	13
4.10.1.	Clip Attachment	13
4.10.2.	Wall Mounting	14
4.11.	Weather Hood	14
4.12.	Mounting Options	14
5.	PROTOCOL GROUP 0	15
5.1.	Overview	15
5.2.	Protocol 1	15
5.3.	Protocol 2	16
5.4.	Protocol 3	17
5.5.	Protocol 4	18
5.6.	Protocol 5	19
5.7.	Protocol 6	20
5.8.	Protocol 7	21
5.9.	Protocol 8	22
5.10.	Protocol 9	23
5.11.	Protocol 10	24
5.12.	Protocol 11	25
6.	PROTOCOL GROUP 1 – TEXT ONLY	26
7.	ERROR MESSAGES	27
7.1.	Weighing Errors	27

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*