

**R300 Series  
(R310, R320 and R321)  
Digital Indicator  
Reference Manual**

**For use with Software Versions 1.1 and above**

## Table of Contents

<b>1.</b>	<b>INTRODUCTION .....</b>	<b>5</b>
1.1.	The Manuals Set .....	6
1.2.	This Reference Manual .....	6
1.3.	Document Conventions .....	6
<b>2.</b>	<b>SPECIFICATIONS .....</b>	<b>7</b>
<b>3.</b>	<b>OVERVIEW .....</b>	<b>8</b>
3.1.	R310 .....	8
3.2.	R320 (including R321) .....	8
<b>4.</b>	<b>INSTALLATION .....</b>	<b>9</b>
4.1.	Introduction .....	9
4.2.	Electrical Safety .....	9
4.3.	R310/R320 Panel Mount Template .....	9
4.4.	Cable Connections .....	9
4.5.	DC Power (DC PWR + , DC PWR -) .....	10
4.6.	Load Cell Connection .....	10
4.6.1.	Load Cell Signals and Scale Build .....	10
4.6.2.	4-Wire Connection .....	10
4.6.3.	6-Wire Connection .....	11
4.7.	Auxiliary Connections (R320 only) .....	11
4.7.1.	RS-232 Serial .....	11
4.7.2.	Remote Input .....	12
4.7.3.	Outputs .....	13
4.8.	rin-LINK (Optional) .....	14
4.9.	Connecting Shields .....	15
4.9.1.	Cable Shield Connection and Earthing .....	15
4.10.	Regulatory Sealing Requirements .....	15
<b>5.</b>	<b>DATA ENTRY .....</b>	<b>16</b>
5.1.	Editing Annunciators .....	16
5.2.	Numeric Entry .....	17
5.3.	Selections and Options .....	17
<b>6.</b>	<b>BASIC OPERATION .....</b>	<b>18</b>
6.1.	Display and Controls .....	18
6.1.1.	Front Panel: Visual Display .....	18
6.2.	Operation Keys .....	19
6.2.1.	Primary Function .....	20
6.2.2.	Editing Function .....	20
6.3.	Stability Considerations .....	20
6.4.	POWER Key .....	20
6.4.1.	Automatic Operation .....	20
6.5.	ZERO Key .....	21
6.6.	TARE Key .....	21
6.7.	GROSS/NET Key .....	21
6.7.1.	rin-LINK Activation .....	21
6.8.	PRINT Key (R320 only) .....	22
6.9.	TEST Key (R310 only) .....	22
6.10.	FUNCTION Key (R320 only) .....	22
<b>7.</b>	<b>CONFIGURATION ISSUES .....</b>	<b>23</b>
7.1.	General Setup Information .....	23
7.2.	Basic Weighing Terminology .....	23
7.3.	Filtering Techniques .....	24
7.4.	Industrial vs OIML and NTEP Modes .....	25
7.5.	Calibration Counter .....	25
7.6.	Passcodes .....	26
7.6.1.	Full Setup Passcode .....	26
7.6.2.	Safe Setup Passcode .....	26
7.6.3.	Setup Lock-Out .....	26
<b>8.</b>	<b>SETUP .....</b>	<b>27</b>
8.1.	Accessing Setup .....	27
8.1.1.	R310 .....	27
8.1.2.	R320 .....	27
8.1.3.	Setup Display Prompts .....	28
8.2.	Exiting Full or Safe Setup .....	28
8.3.	Groups and Items .....	28
8.3.1.	GRP (Group) .....	28

8.4.	8.3.2. ITM (Item).....	29
	Setup Menus .....	29
	8.4.1. BUILD (Scale Build) .....	29
	8.4.2. OPTION (Scale Options).....	30
	8.4.3. CAL (Scale Calibration).....	31
	8.4.4. SPEC (Special Settings Menu) .....	32
	8.4.5. SERIAL (Serial Communications Options) (R320 only) .....	34
	8.4.6. SET.PTS (Setpoint Settings) (R320 only) .....	35
	8.4.7. CLOCK (Clock Settings) (R320 only) .....	36
	8.4.8. TEST (Special Test Functions) .....	36
	8.4.9. FACTRY (Factory Adjustment Menu) .....	37
	8.4.10. – End – (Leaving Setup).....	37
<b>9.</b>	<b>CALIBRATION .....</b>	<b>38</b>
	9.1. Performing a Digital Calibration with Test Weights.....	38
	9.1.1. ZERO (Zero Calibration Routine).....	39
	9.1.2. SPAN (Span Calibration Routine) .....	39
	9.2. Performing a Calibration with Direct mV/V Entry (R320 only) .....	39
	9.2.1. DIR.ZER (Direct Zero Calibration Entry) .....	39
	9.2.2. DIR.SPN (Direct Span Calibration Entry) .....	39
	9.3. Using Linearisation (R320 only) .....	40
	9.3.1. ED.LIN (Edit Linearisation Points).....	40
	9.3.2. CLR.LIN (Clear Linearisation) .....	41
<b>10.</b>	<b>SERIAL OUTPUTS (R320 ONLY).....</b>	<b>42</b>
	10.1. Automatic Weight Output .....	42
	10.2. Master Serial Output .....	43
<b>11.</b>	<b>SETPOINTS (R320 ONLY).....</b>	<b>44</b>
	11.1. Setpoint Connection .....	44
	11.2. Setpoint Operation .....	44
<b>12.</b>	<b>SPECIAL FUNCTIONS (R320 ONLY).....</b>	<b>45</b>
	12.1. Introduction.....	45
	12.1.1. Cleaning .....	45
	12.2. Key Functions.....	45
	12.2.1. NONE .....	45
	12.2.2. TEST .....	45
	12.2.3. COUNT .....	45
	12.2.4. UNITS.....	46
	12.2.5. HOLD and PEAK HOLD .....	46
	12.2.6. LIVE.WT .....	46
	12.2.7. SHOW.T .....	47
<b>13.</b>	<b>APPENDIX .....</b>	<b>48</b>
	13.1. R300 Series Dimensions.....	48
	13.1.1. R310 and R320 Dimension Specifications .....	48
	13.1.2. R321 Dimension Specifications .....	49
	13.2. Sealing Details .....	50
	13.2.1. R310 and R320 Sealing (R320 shown) .....	50
	13.2.2. R321 Sealing .....	51
	13.3. Setup Menu Quick Reference .....	52
	13.4. Error Messages .....	53
	13.4.1. Weighing Errors .....	53
	13.4.2. Setup and Calibration Errors .....	53
	13.5. Diagnostic Errors.....	54
	13.6. Glossary Terms .....	55
	13.7. List of Figures.....	55
	13.8. List of Tables .....	55
<b>14.</b>	<b>INDEX .....</b>	<b>56</b>

---

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/rinstrum/R300 Series R301 R320 R321 reference](https://the-checkout-tech.com/manuals/rinstrum/R300%20Series%20R301%20R320%20R321%20reference.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)