


**SMART WEIGHING SOLUTIONS**

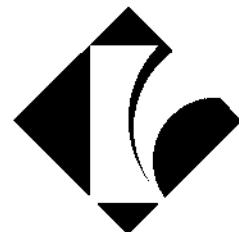

**rinstrum**

**R320**  
**Digital Indicator**  
**Communications**  
**Manual**

**For use with Software Versions 1.2 and above**

**R300-603-100**

## Table of Contents

<b>1. INTRODUCTION .....</b>	<b>5</b>
1.1. Intended Audience .....	6
1.2. Scope.....	6
1.3. The Manuals Set.....	6
1.4. This Communications Manual .....	6
1.5. Document Conventions.....	6
<b>2. CONNECTING TO THE R300 SERIES .....</b>	<b>7</b>
2.1. rin-LINK.....	7
2.1.1. rin-LINK Activation .....	7
2.1.2. rin-LINK Communications Settings.....	8
2.2. RS-232 Connection.....	8
2.2.1. Direct Personal Computer Link (RXD, TXD, GND).....	8
2.2.2. RS-232 Communications Settings.....	8
2.3. rin-LINK vs RS-232 .....	9
<b>3. GETTING STARTED .....</b>	<b>10</b>
3.1. Using ViewR300 .....	10
3.2. Protocol Summary .....	10
3.3. Reading Gross Weight as Literal Value .....	11
3.4. Read Gross Weight as Final Value .....	11
3.5. Setting Values.....	11
3.6. Remote Key Press .....	11
<b>4. PROTOCOL OVERVIEW.....</b>	<b>12</b>
4.1. Message Structure .....	12
4.1.1. Address Field .....	13
4.1.2. Command Field.....	13
4.1.3. Register Id Field.....	14
4.1.4. Optional Parameters .....	14
4.1.5. Return Value .....	14
4.1.6. CRC Calculation.....	14
4.2. Error Handling .....	14
4.3. Register Types.....	15
4.4. Permissions .....	16
4.4.1. Register Access .....	16
4.4.2. Calibration and Configuration Counters .....	17
<b>5. REGISTER OPERATIONS AND PROPERTIES.....</b>	<b>18</b>
5.1. Register Operations .....	18
5.2. Common Properties .....	18
5.2.1. Type.....	18
5.2.2. Menu Text .....	18
5.2.3. Full Text .....	18
5.2.4. Permission .....	19
5.3. Type Specific Properties .....	19
5.3.1. RangeMin, RangeMax.....	19
5.3.2. Final Value .....	20
5.3.3. Literal Value .....	20
5.3.4. Default Value .....	20
5.3.5. Execute .....	20
5.3.6. Read Items.....	21
<b>6. READING STATUS AND ERROR CODES .....</b>	<b>22</b>
6.1. REG_SYSTEM_STATUS.....	22
6.2. REG_SYSTEM_ERROR.....	23
<b>7. REMOTE KEY INTERFACE.....</b>	<b>24</b>
7.1. Operation .....	24
7.2. Key-Codes .....	24

7.2.1.	Physical Codes .....	24
7.2.2.	Example .....	25
7.2.3.	Logical Keys.....	25
<b>8.</b>	<b>EXECUTE FUNCTIONS.....</b>	<b>26</b>
8.1.	Calibration.....	26
8.1.1.	Span .....	27
8.1.2.	Linearisation.....	28
8.2.	Save Settings to EEPROM.....	28
<b>9.</b>	<b>STREAMING.....</b>	<b>29</b>
9.1.	Basic Operation .....	29
9.2.	Registers Available to Stream.....	29
9.3.	Example.....	30
<b>10.</b>	<b>ADVANCED TYPE HANDLING (TYPE_MENU).....</b>	<b>31</b>
<b>11.</b>	<b>APPENDIX – PROGRAM CONSTANTS .....</b>	<b>32</b>
11.1.	Register Types.....	32
11.2.	Commands .....	32
11.3.	Error Codes .....	33
11.4.	Register Identifiers .....	33
11.5.	Key Codes .....	35
11.6.	Decimal, Binary and Hexadecimal Conversion.....	36
11.7.	Setup and Calibration Errors.....	37
11.8.	Glossary Terms.....	38
11.9.	List of Figures .....	38
11.10.	List of Tables .....	38
<b>12.</b>	<b>INDEX .....</b>	<b>39</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/rinstrum/R320 communications manual.html](https://the-checkout-tech.com/manuals/rinstrum/R320%20communications%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)