



## ***Model 304 BP Series***

# Operation & Calibration Manual

Revision 1.0  
July, 2003

Contents subject to change without notice.

Salter Brecknell Weighing Products.  
1000 Armstrong Drive  
Fairmont, MN 56031  
Tel (800) 637-0529  
Tel (507) 238-8702  
Fax (507) 238-8271  
E-mail: [sales@salterbrecknell.com](mailto:sales@salterbrecknell.com)  
Web: [www.salterbrecknell.com](http://www.salterbrecknell.com).

# TABLE OF CONTENTS

	<u>Page</u>
Chapter 1: Introduction to the Salter Brecknell 304-BP Series Precision Balance .....	5
Chapter 2: Getting Started .....	6
Chapter 3: Operation .....	7
3.1 Display .....	7
3.1.1 Liquid Crystal Display (LCD) .....	7
3.2 Keyboard .....	8
3.2.1 Function Keys .....	8
3.3 General Scale Operation .....	8
3.3.1 Weighing an Item .....	8
3.3.2 Taring an Item .....	9
3.3.3 Clearing a Tare .....	9
Chapter 4: Advanced Features and Operation .....	10
4.1 Piece Counting .....	10
4.2 Clearing the Piece Count .....	11
4.3 Memory Accumulator .....	11
4.3.1 Displaying the Memory Accumulator .....	11
4.3.2 Adding to the Memory Accumulator .....	11
4.3.3 Clearing the Memory Accumulator .....	11
4.4 Percentage Mode .....	11
4.5 Display APW Mode .....	12
Chapter 5: Scale Configuration .....	13
5.1 Scale Configuration Overview .....	13
5.2 User ("A") Menu .....	13
5.2.1 Entering the User Menu .....	13
5.2.2 Navigating in the User Menu .....	13
5.2.3 Notes on the User Menu .....	14
5.2.4 Units Selection Procedure (A6) .....	15
5.2.5 Custom Unit Procedure (A7) .....	16
5.2.6 Exiting the User Menu .....	16
5.3 Factory Setup ("F") Menu .....	16
6.1 Scale Calibration Procedure .....	19
6.2 Calibration adjustment .....	20

Appendix A: Specifications .....	21
Appendix B: Serial Port Information .....	23
B.1 Serial Port Hardware.....	23
B.2 Serial Port Modes .....	23
B.2.1 Demand Mode .....	23
B.2.2 Continuous Mode.....	25
B.2.3 Recognized Host Commands .....	26
B.3 Transmit APW Mode.....	26
Appendix C: Error Messages.....	27
C.1 Error Messages.....	27
C.1.1 Operator Errors .....	27

## LIST OF FIGURES

1-1 304-BP Series Front Panel .....	5
2-1 304-BP Back Panel.....	6
3-1 304-BP Display Detail .....	7
3-2 Function Keys Layout .....	8
5-1 User Menu Key Assignments .....	13
5-2 User Menu Chart .....	14
6-1 Calibration Mode Key Assignments.....	19
B-1 Pin Assignments for DSUB9 serial port connector .....	22
B-2 Cable Diagram for Scale to PC.....	22
B-3 Cable Diagram for Scale to Printer .....	22
B-4 Demand Mode Output Format for Print Command .....	23
B-5 Demand Mode Output Format for M+ Command.....	23
B-6 Demand Mode Output Format for MR Command .....	24
B-7 Continuous Mode Output Format .....	24

## LIST OF TABLES

1-1 304-BP Series Product Matrix .....	5
3-1 304-BP Series Annunciator Definitions.....	7
4-1 304-BP Piece Counting Sampling Limits .....	10
4-3 304-BP Percentage Sampling Limits .....	12
5-1 User Menu Chart .....	14
6-1 304-BP Calibration Test Weight .....	19

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*