



Model 308 BP Family

Operation & Calibration Manual

Revision 1.0
July, 2003

Contents subject to change without notice.

Salter Brecknell Weighing Products.
1000 Armstrong Drive
Fairmont, MN 56031
Tel (800) 637-0529
Tel (507) 238-8702
Fax (507) 238-8271

E-mail: sales@salterbrecknell.com

Web: www.salterbrecknell.com.

TABLE OF CONTENTS

	<u>Page</u>
Chapter 1: Introduction to the Salter Brecknell 308-BP Series Precision Balance	1-1
Chapter 2: Getting Started	2-1
Chapter 3: Operation	3-1
3.1 Display	3-1
3.1.1 Liquid Crystal Display (LCD).....	3-1
3.2 Keyboard	3-2
3.2.1 Function Keys.....	3-2
3.3 General Scale Operation	3-2
3.3.1 Weighing an Item	3-2
3.3.2 Taring an Item	3-3
3.3.3 Clearing a Tare.....	3-3
Chapter 4: Advanced Features and Operation.....	4-1
4.1 Piece Counting	4-1
4.2 Clearing the Piece Count.....	4-1
4.3 Memory Accumulator	4-2
4.3.1 Displaying the Memory Accumulator	4-2
4.3.2 Adding to the Memory Accumulator	4-2
4.3.3 Clearing the Memory Accumulator	4-2
4.4 Percentage Mode	4-2
Chapter 5: Scale Configuration	5-1
5.1 Scale Configuration Overview	5-1
5.2 User (“A”) Menu.....	5-1
5.2.1 Entering the User Menu.....	5-1
5.2.2 Navigating in the User Menu	5-1
5.2.3 Notes on the User Menu	5-2
5.2.4 Units Selection Procedure (A6)	5-3
5.2.5 Custom Unit Procedure (A7)	5-4
5.2.6 Exiting the User Menu	5-4
5.2 Factory Setup (“F”) Menu	5-3
Chapter 6: Scale Calibration	6-1
6.1 Scale Calibration Overview	6-1
6.2 Scale Calibration Procedure.....	6-1
6.3 Adjust Calibration Procedure.....	6-2

Appendix A: Specifications	A-1
Appendix B: Serial Port Information.....	B-1
B.1 Serial Port Hardware	B-1
B.2 Serial Port Modes	B-1
B.2.1 Demand Mode	B-1
B.2.2 Continuous Mode	B-3
B.2.3 Recognized Host Commands.....	B-4
Appendix C: Error Messages	C-1
C.1 Error Messages	C-1
C.1.1 Operator Errors	C-1
Appendix D: Notes on Optional Battery	D-1
D.1 Overview.....	D-1
D.2 When to charge the internal battery	D-1
D.3 How to charge the internal battery.....	D-1
D.4 How long to charge the internal battery.....	D-1

LIST OF FIGURES

1-1 308-BP Series Front Panel.....	1-1
2-1 308-BP Back Panel	2-1
3-1 308-BP Display Detail.....	3-1
3-2 Function Keys Layout.....	3-2
5-1 User Menu Key Assignments	5-1
5-2 User Menu Chart	5-2
6-1 Calibration Mode Key Assignments	6-1
B-1 Pin Assignments for DSUB9 serial port connector.....	B-1
B-2 Cable Diagram for Scale to PC	B-1
B-3 Cable Diagram for Scale to Printer	B-1
B-4 Demand Mode Output Format for Print Command.....	B-2
B-5 Demand Mode Output Format for M+ Command	B-2
B-6 Demand Mode Output Format for MR Command.....	B-3
B-7 Continuous Mode Output Format.....	B-4

LIST OF TABLES

1-1 308-BP Series Product Matrix.....	1-1
3-1 308-BP Series Annunciator Definitions	3-1
4-1 308-BP Piece Counting Sampling Limits	4-1
4-2 308-BP Percentage Sampling Limits	4-3
5-1 User Menu Chart.....	5-3

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Salter Brecknell/308BP operation and calibration>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)