



# ***800 Series***

## *Digital Indicator*

### Setup / Operation Manual

Revision 1.4  
June 29, 2005

© 1999-2005 Salter Brecknell, Inc.

Contents subject to change without notice.

Salter Brecknell Weighing Products  
1000 Armstrong Drive  
Fairmont, MN 56031  
Tel (800) 637-0529  
Tel (507) 238-8702  
Fax (507) 238-8271

E-mail: [sales@salterbrecknell.com](mailto:sales@salterbrecknell.com)  
Web: [www.salterbrecknell.com](http://www.salterbrecknell.com)

## TABLE OF CONTENTS

|   | <u>Page</u> |
|---|-------------|
| Chapter 1: Introduction to the 800 Series Indicators .....            | 1-1         |
| Chapter 2: Installation.....  | 2-1         |
| 2.1 ABS Enclosure (800/800S).....                                     | 2-1         |
| 2.1.1 Connecting the Weigh Platform.....                              | 2-1         |
| 2.1.2 Connecting the Serial Printer, Remote Display or Computer ..... | 2-2         |
| 2.1.3 Connecting the Power Supply .....                               | 2-2         |
| Chapter 3: Configuration.....   | 3-1         |
| 3.1 Configuration Overview .....                                      | 3-1         |
| 3.2 Setup (“F”) Menu.....   | 3-1         |
| 3.2.1 Entering the Setup Menu – ABS Enclosure.....                    | 3-1         |
| 3.2.3 Navigating in the Setup Menu.....                               | 3-2         |
| 3.2.4 Notes on the Setup Menu .....                                   | 3-3         |
| 3.2.5 Exiting the Setup Menu – ABS Enclosure .....                    | 3-3         |
| 3.3 User (“A”) Menu .....   | 3-4         |
| 3.3.1 Entering the User Menu.....                                     | 3-4         |
| 3.3.2 Navigating in the User Menu .....                               | 3-4         |
| 3.3.3 Notes on the User Menu.....                                     | 3-5         |
| 3.3.4 Exiting the User Menu .....                                     | 3-5         |
| Chapter 4: Setup Menu Descriptions and Procedures .....               | 4-1         |
| 4.1 Setup Menu Descriptions.....                                      | 4-1         |
| 4.2 Setup Menu Procedures .....                                       | 4-3         |
| 4.2.1 Custom Unit Multiplier (F11).....                               | 4-3         |

|             |   |     |
|-------------|---|-----|
| Chapter 5:  | User Menu Descriptions and Procedures .....         | 5-1 |
| 5.1         | User Menu Descriptions .....                        | 5-1 |
| 5.2         | User Menu Procedures .....                          | 5-2 |
| 5.2.1       | ID Number Entry (A5) .....                          | 5-2 |
| 5.2.2       | Line Feeds Entry (A6) .....                         | 5-2 |
| 5.2.3       | Time Entry (A10) .....                              | 5-3 |
| 5.2.4       | Date Entry (A13) .....                              | 5-3 |
| Chapter 6:  | Calibration .....                                   | 6-1 |
| 6.1         | Calibration Overview .....                          | 6-1 |
| 6.2         | Zero Calibration (F16) .....                        | 6-1 |
| 6.3         | Span Calibration (F17) .....                        | 6-1 |
| 6.4         | View Calibration Values (F18) .....                 | 6-2 |
| 6.5         | Key-in Zero Calibration Value (F19) .....           | 6-2 |
| 6.6         | Key-in Span Calibration Value (F20) .....           | 6-3 |
| Chapter 7:  | Operation .....                                     | 7-1 |
| 7.1         | Display .....                                       | 7-1 |
| 7.1.1       | Light Emitting Diode (LED) Display .....            | 7-1 |
| 7.2         | Keyboard .....                                      | 7-2 |
| 7.2.1       | Function Keys .....                                 | 7-2 |
| 7.3         | General Scale Operation .....                       | 7-3 |
| 7.3.1       | Weighing an item .....                              | 7-3 |
| 7.3.2       | Taring an item of unknown weight .....              | 7-4 |
| 7.3.3       | Taring an item of known weight .....                | 7-4 |
| 7.3.4       | Clearing the tare weight value .....                | 7-4 |
| 7.3.5       | Piece Counting – Unknown average piece weight ..... | 7-5 |
| 7.3.6       | Piece Counting – Known average piece weight .....   | 7-6 |
| 7.3.7       | Clearing the average piece weight value .....       | 7-6 |
| 7.3.8       | Entering an ID number .....                         | 7-6 |
| Chapter 8:  | Legal for Trade Sealing .....                       | 8-1 |
| 8.1         | ABS Enclosure .....                                 | 8-1 |
| Appendix A: | Specifications .....                                | A-1 |

|  |     |
|--|-----|
| Appendix B: Serial Port Information .....          | B-1 |
| B.1 COM1 Modes .....                               | B-1 |
| B.1.1 Full Duplex Mode .....                       | B-1 |
| B.1.1.1 Recognized Host Commands.....              | B-2 |
| B.1.2 Print Ticket Mode .....                      | B-2 |
| B.2 COM2 Mode.....                                 | B-3 |
| B.2.1 Simplex Mode .....                           | B-3 |
| Appendix C: Determining Proper Span Gain (F2)..... | C-1 |
| C.1 Span Gain Overview .....                       | C-1 |
| C.2 Setting the initial value for span gain.....   | C-1 |
| C.3 Viewing the internal counts.....               | C-1 |
| Appendix D: Displayed Error Codes.....             | D-1 |

## LIST OF FIGURES

|   |     |
|---|-----|
| 1-1 800 Front Panel .....   | 1-2 |
| 2-1 800/800S Rear Panel .....   | 2-1 |
| 2-2 Color Codes for Shielded Load Cell Cable.....                       | 2-1 |
| 2-3 Pin Assignments for the Load Cell Port.....                         | 2-1 |
| 2-4 Pin Assignments for the DSUB9 serial port connector.....            | 2-2 |
| 2-5 800/800S Main Circuit Board Overview .....                          | 2-3 |
| 2-6 Connection Assignments for the Load Cell Terminal .....             | 2-4 |
| 2-7 Connection Assignments for all serial communication Terminals ..... | 2-4 |
| 2-7 Connection Assignments for all serial communication Terminals ..... | 2-4 |
| 3-1 Setup Menu Key Assignments .....                                    | 3-2 |
| 3-2 Setup Menu Chart.....   | 3-2 |
| 3-3 User Menu Key Assignments .....                                     | 3-4 |
| 3-4 User Menu Chart .....   | 3-5 |
| 7-1 800/800S LED Display Detail .....                                   | 7-1 |
| 7-2 Function Keys Layout .....  | 7-2 |
| 8-1 800/800S ABS Rear Panel .....                                       | 8-1 |
| B-1 Cable Diagram for Indicator to IBM PC .....                         | B-1 |
| B-2 Consolidated Controls Demand Mode .....                             | B-1 |
| B-3 Print Ticket.....   | B-3 |
| B-4 Cable Diagram for Indicator to Printer.....                         | B-3 |
| B-5 Consolidated Controls Continuous Mode.....                          | B-3 |

## LIST OF TABLES

|  |     |
|--|-----|
| 1-1 800 Series Product Matrix .....                            | 1-1 |
| 4-1 Invalid Setup Selections for commercial applications ..... | 4-3 |
| 6-1 Calibration Value Table .....                              | 6-2 |
| 7-1 800 Series Annunciator Definitions .....                   | 7-2 |
| C-1 Minimum Recommended Span Gain Table .....                  | C-2 |

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Salter Brecknell/800 operation and setup manual>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)