



# ***800 Series***

## *Digital Indicator*

### Setup / Operation Manual

Revision 1.4  
June 29, 2005

© 1999-2005 Salter Brecknell, Inc.

Contents subject to change without notice.

Salter Brecknell Weighing Products  
1000 Armstrong Drive  
Fairmont, MN 56031  
Tel (800) 637-0529  
Tel (507) 238-8702  
Fax (507) 238-8271

E-mail: [sales@salterbrecknell.com](mailto:sales@salterbrecknell.com)  
Web: [www.salterbrecknell.com](http://www.salterbrecknell.com)

## TABLE OF CONTENTS

	<u>Page</u>
Chapter 1: Introduction to the 800 Series Indicators .....	1-1
Chapter 2: Installation.....	2-1
2.1 ABS Enclosure (800/800S).....	2-1
2.1.1 Connecting the Weigh Platform.....	2-1
2.1.2 Connecting the Serial Printer, Remote Display or Computer .....	2-2
2.1.3 Connecting the Power Supply .....	2-2
Chapter 3: Configuration.....	3-1
3.1 Configuration Overview .....	3-1
3.2 Setup (“F”) Menu.....	3-1
3.2.1 Entering the Setup Menu – ABS Enclosure.....	3-1
3.2.3 Navigating in the Setup Menu.....	3-2
3.2.4 Notes on the Setup Menu .....	3-3
3.2.5 Exiting the Setup Menu – ABS Enclosure .....	3-3
3.3 User (“A”) Menu .....	3-4
3.3.1 Entering the User Menu.....	3-4
3.3.2 Navigating in the User Menu .....	3-4
3.3.3 Notes on the User Menu.....	3-5
3.3.4 Exiting the User Menu .....	3-5
Chapter 4: Setup Menu Descriptions and Procedures .....	4-1
4.1 Setup Menu Descriptions.....	4-1
4.2 Setup Menu Procedures .....	4-3
4.2.1 Custom Unit Multiplier (F11).....	4-3

Chapter 5:	User Menu Descriptions and Procedures .....	5-1
5.1	User Menu Descriptions .....	5-1
5.2	User Menu Procedures .....	5-2
5.2.1	ID Number Entry (A5) .....	5-2
5.2.2	Line Feeds Entry (A6) .....	5-2
5.2.3	Time Entry (A10) .....	5-3
5.2.4	Date Entry (A13) .....	5-3
Chapter 6:	Calibration .....	6-1
6.1	Calibration Overview .....	6-1
6.2	Zero Calibration (F16) .....	6-1
6.3	Span Calibration (F17) .....	6-1
6.4	View Calibration Values (F18) .....	6-2
6.5	Key-in Zero Calibration Value (F19) .....	6-2
6.6	Key-in Span Calibration Value (F20) .....	6-3
Chapter 7:	Operation .....	7-1
7.1	Display .....	7-1
7.1.1	Light Emitting Diode (LED) Display .....	7-1
7.2	Keyboard .....	7-2
7.2.1	Function Keys .....	7-2
7.3	General Scale Operation .....	7-3
7.3.1	Weighing an item .....	7-3
7.3.2	Taring an item of unknown weight .....	7-4
7.3.3	Taring an item of known weight .....	7-4
7.3.4	Clearing the tare weight value .....	7-4
7.3.5	Piece Counting – Unknown average piece weight .....	7-5
7.3.6	Piece Counting – Known average piece weight .....	7-6
7.3.7	Clearing the average piece weight value .....	7-6
7.3.8	Entering an ID number .....	7-6
Chapter 8:	Legal for Trade Sealing .....	8-1
8.1	ABS Enclosure .....	8-1
Appendix A:	Specifications .....	A-1

Appendix B: Serial Port Information .....	B-1
B.1 COM1 Modes .....	B-1
B.1.1 Full Duplex Mode .....	B-1
B.1.1.1 Recognized Host Commands.....	B-2
B.1.2 Print Ticket Mode .....	B-2
B.2 COM2 Mode.....	B-3
B.2.1 Simplex Mode .....	B-3
Appendix C: Determining Proper Span Gain (F2).....	C-1
C.1 Span Gain Overview .....	C-1
C.2 Setting the initial value for span gain.....	C-1
C.3 Viewing the internal counts.....	C-1
Appendix D: Displayed Error Codes.....	D-1

## LIST OF FIGURES

1-1 800 Front Panel .....	1-2
2-1 800/800S Rear Panel .....	2-1
2-2 Color Codes for Shielded Load Cell Cable.....	2-1
2-3 Pin Assignments for the Load Cell Port.....	2-1
2-4 Pin Assignments for the DSUB9 serial port connector.....	2-2
2-5 800/800S Main Circuit Board Overview .....	2-3
2-6 Connection Assignments for the Load Cell Terminal .....	2-4
2-7 Connection Assignments for all serial communication Terminals .....	2-4
2-7 Connection Assignments for all serial communication Terminals .....	2-4
3-1 Setup Menu Key Assignments .....	3-2
3-2 Setup Menu Chart.....	3-2
3-3 User Menu Key Assignments .....	3-4
3-4 User Menu Chart .....	3-5
7-1 800/800S LED Display Detail .....	7-1
7-2 Function Keys Layout .....	7-2
8-1 800/800S ABS Rear Panel .....	8-1
B-1 Cable Diagram for Indicator to IBM PC .....	B-1
B-2 Consolidated Controls Demand Mode .....	B-1
B-3 Print Ticket.....	B-3
B-4 Cable Diagram for Indicator to Printer.....	B-3
B-5 Consolidated Controls Continuous Mode.....	B-3

## LIST OF TABLES

1-1 800 Series Product Matrix .....	1-1
4-1 Invalid Setup Selections for commercial applications .....	4-3
6-1 Calibration Value Table .....	6-2
7-1 800 Series Annunciator Definitions .....	7-2
C-1 Minimum Recommended Span Gain Table .....	C-2

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*