



B220 Counting Scale User's Manual

Table of Contents

Introduction	5
Installation	5
Sleep Mode	5
Error Messages	5
B220 Front Panel	6
Using the Scale	9
Zeroing the Scale	9
Using the Clear Key	9
Clearing a Numeric Entry	9
Using Tares	9
Sampling Parts for Counting	10
Resampling	12
Using Piece Weights	12
Using the High Limit Alarm	13
Using Part Look Up (PLU) Keys	13
Recalling a PLU Using the PLU key	15
Recalling a PLU Using a PLU ^x hot key	15
Clearing a PLU	15
Clearing a PLU Using a PLU ^x hot key	15
Accumulator Function	16
Management Mode	17
Beeper Alarm	18
Keyboard Beeper	18
Weight Limit Beeper	18
Error Beeper	18
Changing Beeper Volume	18
Changing Backlight Time	19
Changing Sleep Time	19
Changing Duration of a Long Press	19
Changing Minimum Sample Weight	19
Changing Manual Resampling Range	20
Changing Automatic Resampling Range	20
Changing a PLU Item Weight	20
Changing a PLU Tare	20
Protecting a PLU	21
Calibration	21
To Calibrate the B220	21
To Revert to Factory Calibration	21
Acceptable Calibration Weights	22

Pages are numbered consecutively beginning with the cover page.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Salter Brecknell/B220 user and calibration manual/>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)