

Pegasus Floor Scale Installation Guide

For Shear Beam, Mild and Stainless Steel Scales and Poly Top Floor Scales

Installation

Proper scale installation provides accurate and reliable system operation. It is essential to mount the scale on a flat, level, and solid surface. The load-bearing surface areas should be within $\pm 1/16$ inch of the same level plane. Minor irregularities in the floor may be compensated for with the feet adjustments. The scale should not rock on the load-bearing surface areas and these areas should not give under loads.

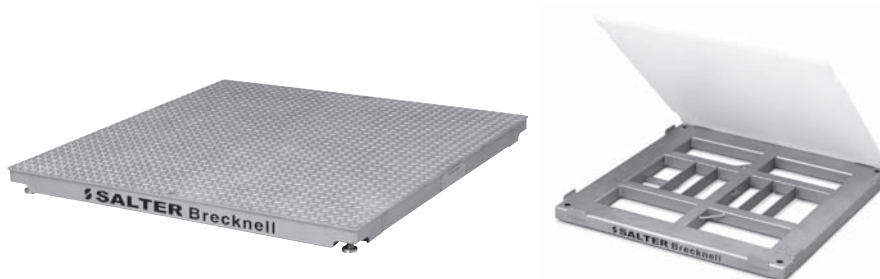


Figure 1
Pegasus scales

This scale is precalibrated and is ready for installation and use.

- Place the Pegasus deck on a solid, level surface. Use the leveling feet to eliminate any rocking of the deck.
- Mount the indicator using the bracket provided. This will accommodate desk or wall mounting.
- Uncoil the cable from under the scale and route it to the indicator. The cable should be protected from traffic to avoid damage. Connect the cable to the indicator. See note at left.
- Apply power to the indicator and verify proper scale performance.

Washdown systems will need to have the cable connected to the junction box. Use the indicator manual to insure proper wiring.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Salter Brecknell/Pegasus installation guide manu>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)