



Model S200 Series

Operation & Set-up Manual

Revision 1.0
July, 2003

Contents subject to change without notice.

Salter Brecknell Weighing Products
1000 Armstrong Drive
Fairmont, MN 56031
Tel (800) 637-0529
Tel (507) 238-8702
Fax (507) 238-8271

E-mail: sales@salterbrecknell.com

Web: www.salterbrecknell.com.

TABLE OF CONTENTS

		<u>Page</u>
Chapter 1:	Introduction To The S200 Series Indicator	1-1
Chapter 2:	Installation	2-1
2.1	ABS Enclosure	2-1
2.1.1	Connecting the weigh platform	2-1
2.1.2	Connecting the serial printer, remote display or computer	2-2
2.1.3	Connecting the power supply	2-2
2.2	Stainless Steel Enclosure	2-3
2.2.1	Connecting the weigh platform	2-4
2.2.2	Connecting the serial printer, remote display or computer	2-4
2.2.3	Connecting the power supply	2-5
Chapter 3:	Configuration	3-1
3.1	Configuration Overview	3-1
3.2	Setup (“F”) Menu	3-1
3.2.1	Entering the Setup Menu – ABS Enclosure.....	3-1
3.2.2	Entering the Setup Menu – Stainless Steel Enclosure	3-1
3.2.3	Navigating in the Setup Menu	3-2
3.2.4	Notes on the Setup Menu.....	3-3
3.2.5	Exiting the Setup Menu – ABS Enclosure	3-3
3.2.6	Exiting the Setup Menu – Stainless Steel Enclosure.....	3-4
3.3	User (“A”) Menu.....	3-4
3.3.1	Entering the User Menu.....	3-4
3.3.2	Navigating in the User Menu	3-4
3.3.3	Notes on the User Menu	3-6
3.3.4	Exiting the User Menu	3-6
Chapter 4:	Setup Menu Descriptions and Procedures	4-1
4.1	Setup Menu Descriptions	4-1
Chapter 5:	User Menu Descriptions and Procedures.....	5-1
5.1	User Menu Descriptions	5-1
5.2	User Menu Procedures	5-3
5.2.1	ID Number Entry (A8).....	5-3
5.2.2	Line Feeds Entry (A9).....	5-3

Chapter 6:	Calibration	6-1
6.1	Calibration Overview	6-1
6.2	Zero Calibration (F16)	6-1
6.3	Span Calibration (F17)	6-1
6.4	View Calibration Values (F18)	6-2
6.5	Key-in Zero Calibration Value (F19)	6-2
6.6	Key-in Span Calibration Value (F20)	6-3
Chapter 7:	Operation	7-1
7.1	Display	7-1
7.1.1	Liquid Crystal Display (LCD)	7-1
7.1.2	Light Emitting Diode (LED) Display	7-1
7.2	Keyboard	7-2
7.2.1	Function Keys	7-2
7.3	General Scale Operation	7-3
7.3.1	Weighing an item	7-3
7.3.2	Taring an item	7-3
7.3.3	Piece Counting	7-4
7.3.4	Peak Hold Option	7-4
Chapter 8:	Legal for Trade Sealing	8-1
8.1	ABS Enclosure	8-1
8.2	Stainless Steel Enclosure	8-1
Appendix A:	Specifications	A-1
Appendix B:	Serial Port Information	B-1
B.1	Serial Port Modes	B-1
B.1.1	Full Duplex Mode	B-1
B.1.1.1	Recognized Host Commands	B-2
B.1.2	Print Ticket Mode	B-2
B.1.3	Simplex Mode	B-3
Appendix C:	Determining Proper Span Gain (F2)	C-1
C.1	Span Gain Overview	C-1
C.2	Setting the initial value for span gain	C-1
C.3	Viewing the internal counts	C-1
Appendix D:	Displayed Error Codes	D-1
Appendix E:	Addendum for 4-20 mA Option	D-2

LIST OF FIGURES

1-1	S200 Front Panel	1-2
1-2	S200E Front Panel.....	1-2
1-3	S200E-SS Front Panel.....	1-2
1-4	S200-BW Front Panel.....	1-3
1-5	S200-SSB Front Panel.....	1-3
1-6	S200-SL Front Panel.....	1-4
2-1	S200/S200E ABS Enclosure Rear Panel.....	2-1
2-1a	S200-BW ABS Enclosure Rear Panel.....	2-1
2-2	Color Codes for Shielded Load Cell Cable.....	2-1
2-3	Pin Assignments for the Load Cell Port	2-2
2-4	Pin Assignments for the D-SUB9 serial port connector	2-2
2-5	S200E-SS Main Circuit Board Overview	2-3
2-5a	S200-SSB Main Circuit Board Overview	2-3
2-5b	S200-SL Main Circuit Board Overview.....	2-4
2-6	Connection Assignments for the Load Cell Terminal (J8).....	2-4
2-7	Connection Assignments for the serial communication Terminal	2-5
3-1	Setup Menu Key Assignments	3-2
3-2	Setup Menu Chart	3-3
3-3	User Menu Key Assignments	3-5
3-4	User Menu Chart	3-5
5-1	User Menu Key Assignments	5-3
6-1	Setup Menu Key Assignments	6-1
7-1	S200 Series LCD Detail	7-1
7-2	S200 Series LED Display Detail.....	7-1
7-3	Function Keys Layout – non-battery powered units	7-2
7-3a	Function Keys Layout – battery powered units.....	7-2
8-1	S200 and S200E ABS Rear Panel	8-1
8-1a	S200-BW ABS Rear Panel.....	8-1
B-1	Cable Diagram for Indicator to IBM PC.....	B-1
B-2	Consolidated Controls Demand Mode	B-1
B-3	Print Ticket	B-2
B-4	Cable Diagram for Indicator to Printer.....	B-2
B-5	Consolidated Controls Continuous Mode.....	B-3

LIST OF TABLES

1-1	S200 Series Product Matrix.....	1-1
4-1	Invalid Setup Selections for commercial applications	4-3
6-1	Calibration Value Table	6-2
7-1	S200 Series Annunciator Definitions.....	7-2
C-1	Minimum Recommended Span Gain Table	C-2
C-1a	Minimum Recommended Span Gain Table	C-3

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Salter Brecknell/S-200 operation and setup manual>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)