



***Model S610 Digital
Counting Scale***

Operation & Calibration Manual

Revision 1.0
July, 2003

Contents subject to change without notice.

Salter Brecknell Weighing Products.
1000 Armstrong Drive
Fairmont, MN 56031
Tel (800) 637-0529
Tel (507) 238-8702
Fax (507) 238-8271

E-mail: sales@salterbrecknell.com

Web: www.salterbrecknell.com

TABLE OF CONTENTS

	<u>Page</u>
Chapter 1: Introduction to the Salter Brecknell S610 Series Digital Counting Scale.....	1-1
Chapter 2: Getting Started	2-1
Chapter 3: Basics of Operation	3-1
3.1 Display.....	3-1
3.1.1 Light Emitting Diode (LED) Display	3-1
3.2 Keyboard	3-2
3.2.1 Function and Numeric Keys	3-2
3.3 General Scale Operation	3-3
3.3.1 Weighing an Item	3-3
3.3.2 Taring an Item of Unknown Weight.....	3-3
3.3.3 Taring an Item of Known Weight.....	3-3
3.3.4 Clearing a Tare.....	3-3
3.3.5 Piece Counting	3-3
3.3.6 Clearing the Piece Count.....	3-4
Chapter 4: Advanced Features and Operation.....	4-1
4.1 Average Piece Weight (APW) Entry.....	4-1
4.1.1 Average Piece Weight (APW) Entry.....	4-1
4.2 Alternative Sampling Method.....	4-1
4.3 Memory Accumulator	4-1
4.3.1 Displaying the Memory Accumulator	4-1
4.3.2 Adding to the Memory Accumulator	4-1
4.3.3 Clearing the Memory Accumulator	4-1
4.4 Using the Target Value.....	4-2
Chapter 5: Configuration	5-1
5.1 Configuration Overview	5-1
5.2 Setup ("F") Menu	5-1
5.3 User ("A") Menu.....	5-1
5.3.1 Entering the User Menu.....	5-1
5.3.2 Navigating in the User Menu	5-1
5.3.3 Exiting the User Menu	5-2
5.4 User Menu Procedures	5-3
5.4.1 ID Number Entry (A8).....	5-3
5.4.2 LF (Line Feeds) Number Entry (A9)	5-4

Chapter 6:	Calibration	6-1
6.1	Calibration Overview	6-1
6.2	Calibration Mode	6-1
Appendix A:	Specifications	A-1
Appendix B:	Serial Port Information.....	B-1
B.1	COM1 Serial Port	B-1
B.1.1	Connecting the Serial Device	B-1
B.1.2	Default Print Format	B-2
B.1.3	Full Duplex Modes for COM1	B-2
B.1.3.1	Demand Mode.....	B-2
B.1.3.2	Continuous Mode	B-3
B.1.4	Transmit APW Mode	B-3
Appendix C:	Error Messages	C-1
C.1	Error Messages	C-1
C.1.1	Operator Errors	C-1
C.1.2	Calibration Errors.....	C-1

LIST OF FIGURES

1-1	S610 Series Front Panel	1-1
2-1	S610 Back Panel.....	2-1
2-2	Latitude Compensation Zones (USA)	2-2
3-1	S610 Display Detail	3-1
3-2	Function and Numeric Keys Layout	3-2
5-1	User Menu Key Assignments	5-1
5-2	User Menu Chart.....	5-2
B-1	Pin Assignments for COM1 Serial Port	B-1
B-2	Cable Diagram for Scale to Dot Matrix Printer	B-1
B-3	Cable Diagram for Scale to Computer	B-1
B-4	Default Print Format	B-2
B-5	Consolidated Controls Demand Mode	B-2
B-6	Consolidated Controls Continuous Mode.....	B-3

LIST OF TABLES

1-1	S610 Series Product Matrix.....	1-1
3-1	S610 Series Annunciator Definitions.....	3-1
3-2	S610 Sampling Limits	3-4
5-1	User Menu Descriptions	5-3
6-1	Minimum / Recommended Calibration Test Weights.....	6-2
B-1	Recognized Host Commands	B-2

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Salter Brecknell/S-610 operation and calibration>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)