



# ***WEIGHBLOK***

## *Digital Scale*

### Setup & Operation Manual

Revision 0502  
4-2-03

Contents subject to change without notice.

Salter Brecknell Weighing Products  
1000 Armstrong Drive  
Fairmont, MN 56031  
Tel (800) 637-0529  
Tel (507) 238-8702  
Fax (507) 238-8271

E-mail: [sales@salterbrecknell.com](mailto:sales@salterbrecknell.com)

Web: [www.salterbrecknell.com](http://www.salterbrecknell.com).

<b>Table of contents</b>	<b>Page</b>
Introduction	1,2
Keyboard Functions	3
Configuration and Setup Menu. Display	4
Parameters	5,6
Calibration	7
Specifications and Displayed Error Codes	8
Troubleshooting	9
Scale use	10
Communication port	11

## **Introduction**

---

The Weighblok series are a rugged digital scale casted in strong aluminum. It comes standard with a large (.75") LCD screen for easy readout. All setup parameters may be entered via the membrane panel keys. The Scale has an "intelligent" auto power off function and can be operated with 6 alkaline 1,5 V batteries. If the battery is not good enough to ensure a correct value the scale will turn off.

The scale is developed especially for weighing of refrigerant cylinders, and to control when transferring refrigerants to other cylinders or equipments. The scales setup parameters are altered through the Setup menu while a few other parameters are altered through the User menu. The configuration section of the manual explains how to use the five front panel keys to maneuver and save settings in both menus.

The Weighblok scale can be used as a Batching Scale or regular weighing scale

**The Weighblok is suitable for use in weighing applications as: refrigeration cylinders, fire protection cylinders, CO2, cylinders, parcels, persons, etc.**

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*