




MP 26 - Transmitter

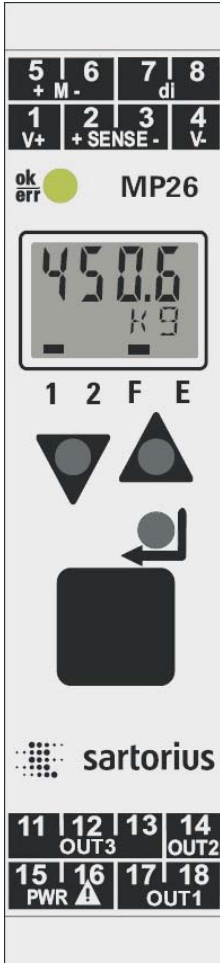

The image shows the control panel of the MP26 Transmitter. It features a digital display showing "450.6" and "kg". Above the display are two rows of buttons: the top row has buttons labeled "5 + M -", "6", "7 di", and "8"; the bottom row has buttons labeled "1 V+", "2 + SENSE -", "3", and "4 V-". Below the display are four buttons labeled "1", "2", "F", and "E". There are also two triangular buttons (one pointing down, one pointing up) and a square button with a left-pointing arrow. The Sartorius logo is visible below the buttons. At the bottom of the panel, there are two rows of output ports: the top row has "11 OUT3" and "13 OUT2", and the bottom row has "15 PWR" with a warning triangle and "17 OUT1".

MP26 Transmitter
MP26 Transmitter
MP26 Transmitter
MP26 Transmitter

Operating manual
English
9408-800-260x1
valid from: 06/2008

Content

1. General	5
2. Safety hints	6
2.1 MAINTENANCE, REPAIR AND MODIFICATION	7
2.2 Cleaning	7
3. Mounting	8
3.1 Connectors	9
4. Electrical connections	10
4.1 Connecting diagram	10
4.2 Terminal connections	10
4.3 Connecting diagram	11
4.4 Connection examples	12
4.5 Hints for installation	12
5. Operation	13
5.1 Front view	13
5.2 Operating structure	14
5.3 Behaviour after supply voltage switch-on	14
5.4 Displays in the operating level	15
5.4.1 Display line 1	15
5.4.2 Display line 2	15
5.4.3 Switch-over with the enter-key	15
5.4.4 Slave pointer function	16
5.4.5 Selecting the units	16
5.4.6 Extended operating level	17
6. Functions	18
6.1 Measuring input INP	18
6.2 Input scaling	19
6.3 Linearization	19
6.4 Filter	20
6.5 Substitute value for inputs	20
6.6 Set zero	21
6.7 Tare function	21
6.8 Limit value processing	21
6.8.1 Input value monitoring	21
6.9 Analog output configuration	23
6.9.1 Analog output	23
6.10 Maintenance manager / error list	24
6.11 Detection and display of sensor and wiring errors	25
6.12 Resetting to factory setting	25
7. Configuration level	26
7.1 Configuration survey	26
7.2 <u>Adjustment</u>	26
7.3 Configurations	27

8. Parameter-level	31
8.1 Parameter-survey	31
8.2 Adjustment:	31
8.3 Parameters	32
9. Installation and calibration	33
9.1 Initial setting (SET)	33
9.2 Calibration (CAL)	33
9.3 Scaling (SCALE)	34
10. Engineering Tool MP26/10	35
11. Versions	36
12. Technical data	37
13. Index	39

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*