

Weight transmitter PR 1591/00 and /10

Instruction manual



C O N T E N T S		Page
1.	GENERAL	E 1-1
1.1	Features	E 1-1
1.2	Description	E 1-1
	1.2.1 General	E 1-1
	1.2.2 PR 1591/10	E 1-3
2.	SAFETY INSTRUCTIONS	E 2-1
2.1	Initial inspection	E 2-1
2.2	Before commissioning	E 2-1
	2.2.1 General	E 2-1
	2.2.2 Mounting	E 2-1
	2.2.3 Dismantling the instrument	E 2-1
	2.2.4 Type of protection	E 2-2
	2.2.5 Supply voltages / Mains connection	E 2-2
	2.2.6 Earthing	E 2-2
2.3	Repair and maintenance	E 2-2
	2.3.1 Failure and excessive stress	E 2-2
	2.3.2 Repairs	E 2-3
	2.3.3 For special attention	E 2-3
	2.3.4 Electrotatically sensitive components	E 2-3
	2.3.5 Replacing fuses	E 2-3
3.	TECHNICAL DATA	E 3-1
3.1	Performance Characteristics, Specifications	E 3-1
3.2	General Data	E 3-1
3.3	Specifications	E 3-1
	3.3.1 Loadcell connection	E 3-1
	3.3.2 Outputs	E 3-2
3.4	Accuracy	E 3-3
3.5	Data of the PR 1591/10 Display Module	E 3-4
3.6	Environmental conditions	E 3-4
	3.6.1 Ambient temperature	E 3-4
	3.6.2 Relative humidity	E 3-4
	3.6.3 EMC	E 3-5
	3.6.4 General data	E 3-5
3.7	Dimensions/Weight	E 3-5
3.8	Accessories	E 3-5

C O N T E N T S	Page
4. MOUNTING AND CONNECTION	E 4-1
4.1 Opening the instrument	E 4-1
4.2 Mounting	E 4-1
4.3 General installation instruction	E 4-1
4.4 Terminal assignment	E 4-2
4.5 Mains connection	E 4-2
4.6 Connection of loadcells	E 4-3
4.7 Interfacing the instrument	E 4-4
4.7.1. Voltage output	E 4-4
4.7.2. Current output	E 4-6
4.7.3. Setpoints (Limit Detectors)	E 4-7
5. ADJUSTMENTS AND CALIBRATION	E 5-1
5.1 Adjustment to local mains supply	E 5-1
5.2 Presetting of the SPAN	E 5-1
5.3 Alteration of current output	E 5-2
5.4 Measuring voltage filter	E 5-2
5.5 Matching the Display Unit of the PR 1591/10 to the scale range	E 5-2
5.5.1 Setting the decimal point	E 5-3
5.6 Commissioning, final calibration	E 5-3
5.6.1 Switching on and off the instrument	E 5-4
5.6.2 Compensation of dead loads	E 5-4
5.6.3 SPAN-fine adjustment	E 5-4
5.6.4 Setpoint adjustment	E 5-5
6. MAINTENANCE	E 6-1
6.1 General	E 6-1
6.2 Dismounting the PR 1591/10 display unit	E 6-1
6.3 Fuse	E 6-1
7. FIGURES	7-1
7.1 Spantable	7-3
7.2 Blockdiagram	7-4
7.3 Dimensions	7-4
7.4 Connection with 4-wire extension cable	7-4
7.5 Connection with 6-wire extension cable	7-4

C O N T E N T S**Page**

7.6	Connection diagram	7-5
7.7	Setting and connection facilities	7-6
7.8	Instrument opened (top view)	7-7
7.9	PR 1591/10 Supply PCB	7-8
7.10	PR 1591/10 Supply PCB (electrical drawing)	7-8
7.11	PR 1591/10 LCD-Display Unit	7-8

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sartorius/PR-1591 operating manual.html](https://the-checkout-tech.com/manuals/sartorius/PR-1591_operating_manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)