


# System Weight Indicators

## PR 1613/00, .. /04

### Operating Manual

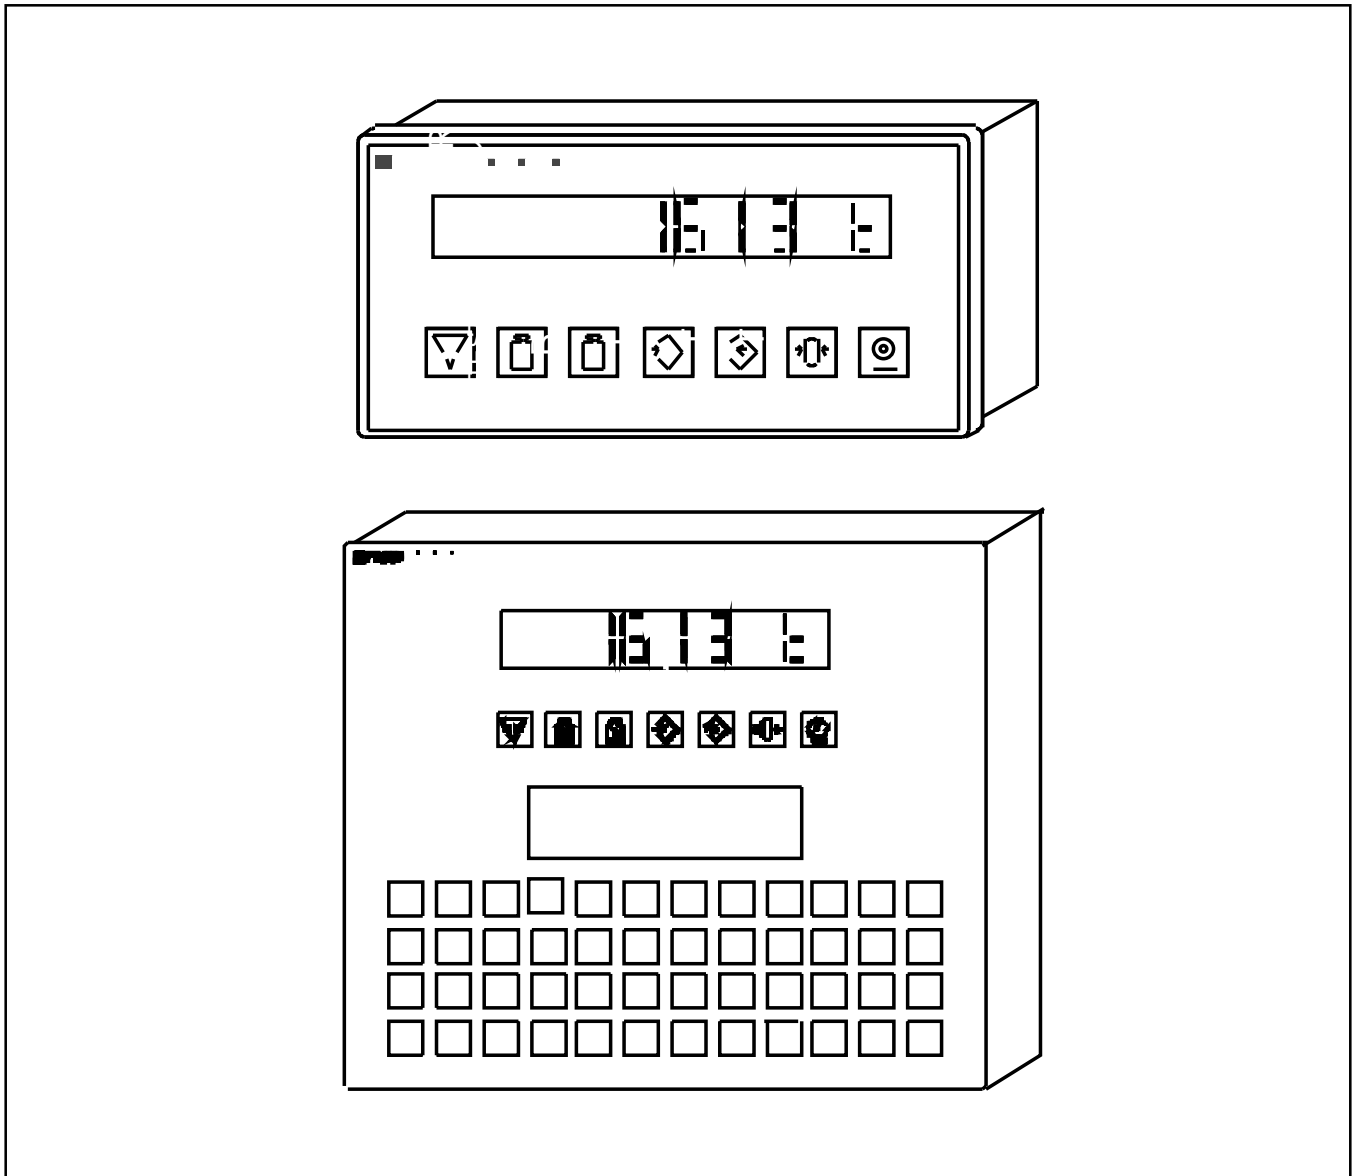

9499 050 37510

Edition 3

99-09-27

**CONTENTS**

|            |   |
|------------|---|
| PART 1     | PREFACE, DESCRIPTION  |
| PART 2     | SAFETY INSTRUCTIONS   |
| PART 3     | TECHNICAL DATA  |
| PART 4     | MOUNTING, INSTALLATION AND LOADCELL CONNECTION                        |
| PART 5     | OPERATION   |
| PART 6     | SETTING AND CALIBRATION   |
| PART 7     | HW-OPTIONS, APPLICATION, and INTERFACING                              |
| PART 8     | COMMUNICATING WITH SUPERORDINATE OR SUBORDINATE INSTRUMENTS / SYSTEMS |
| PART 9     | SHORT FORM DESCRIPTION FOR SETTING AND CALIBRATION                    |
| PART 10    | INDEX   |
| APPENDIX 1 | CORNER POINT ADJUSTMENT   |
| APPENDIX 2 | INCREMENTAL CALIBRATION WITH MAKE-UP WEIGHT                           |

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sartorius/PR-1613 operating manual.html](https://the-checkout-tech.com/manuals/sartorius/PR-1613%20operating%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)