

# System Weighing Controller

## PR 1713

### Installation Manual



Installation manual

9499 053 45710

Edition 3

Dat. 2000808

for PR1713/..

Release: 1.10

**GLOBAL Weighing**

GWT GLOBAL Weighing Technologies GmbH , P.O.B. 730 370, 22123 Hamburg / Germany Tel:++49-40-67960-303 Fax:++49-40-67960-383



●●● sartorius group

## Contents

<b>1 SAFETY HINTS, ELECTRICAL PROTECTION CLASS .....</b>	<b>1</b>
1.1 APPLICATION OF THE INSTRUMENT.....	1
1.2 INITIAL INSPECTION.....	1
1.3 BEFORE COMMISSIONING .....	1
1.3.1 Installation .....	1
1.3.2 Electrostatically sensitive components.....	2
1.3.3 Opening the instrument.....	2
1.3.4 Earthing.....	2
1.3.5 Protective earth.....	2
1.3.6 Power connection PR1713/00.....	2
1.4 REPAIR AND MAINTENANCE .....	3
1.4.1 Failure and excessive stress.....	3
1.4.2 For special attention.....	3
1.4.3 Fuse.....	3
1.4.4 Soldering work.....	4
1.4.5 Battery replacement.....	4
1.4.6 Disposal .....	4
1.5 CLEANING .....	4
<b>2 SYSTEM WEIGHING CONTROLLER PR1713.....</b>	<b>5</b>
2.1 BASIC INSTRUMENT SURVEY .....	5
2.2 OPTIONS.....	6
2.2.1 Program extensions (optional).....	7
2.2.2 Plug-in cards and modules (optional) .....	7
2.3 HOUSING .....	8
<b>3 INSTALLING THE INSTRUMENT AND OPTIONS .....</b>	<b>9</b>
3.1 MECHANICAL PREPARATION .....	9
3.2 HARDWARE CONSTRUCTION .....	9
3.2.1 Installing the options .....	10
3.2.2 Cable gland and connection .....	11
3.3 ON THE CONNECTING BOARD.....	12
3.3.1 Load cell cable/ cable junction box.....	12
3.3.2 External PC-AT keyboard.....	13
3.3.3 RS 232 Builtin interface.....	13
3.3.4 PR1713/04 Serial I/O.....	14
3.3.5 PR1713/06 analog output card .....	18
3.3.6 PR 1713/07 Analog I/O.....	19
3.3.7 Control I/O: PR1713/12 Opto-, PR1713/15 Relay-Output.....	20
3.3.8 PR1713/08 BCD output .....	22
3.3.9 PR1713/13 DIOS master.....	24
3.3.10 PR1713/14 Ethernet.....	26
3.4 ON MAIN PRINT 2 .....	27
3.4.1 Activating the battery .....	27
3.4.2 PR1713/05 RAM-extension .....	27
3.4.3 PR 1721 field bus interface.....	28
3.4.4 Installation of the fieldbus interface.....	28
<b>4 PR1713/00 COMMISSIONING .....</b>	<b>31</b>
4.1 DATA SAVING/ POWER FAILURE.....	31
4.1.1 Calibration data .....	31
4.1.2 Configuration data .....	32
4.1.3 Programming with PR1750.....	32
4.1.4 Cold start.....	32

4.2 DISPLAY ELEMENTS AND CONTROLS ON THE BUILT-IN CONSOLE.....	32
4.2.1 Control signals .....	33
4.2.2 Language.....	33
4.2.3 Operating concept: Commissioning .....	33
4.3 MAIN MENU .....	34
4.3.1 Configuration area Setup.....	34
4.3.2 Boot menu .....	36
4.4 CALIBRATION, WEIGHINGPOINT PARAMETERS.....	39
4.4.1 Calibration sequence .....	39
4.4.2 Start messages .....	39
4.4.3 Set Parameters.....	43
4.4.4 External Wp.....	44
4.5 CONFIGURATION OF NOT WEIGHINGPOINT PARAMETERS .....	44
4.5.1 Set Clock .....	44
4.5.2 Serial Ports.....	45
4.5.3 Software parameters .....	45
4.5.4 Fieldbus Parameter .....	47
4.5.5 Show Boardnumber.....	47
4.5.6 Licence Setup .....	48
4.5.7 Print Setupdata.....	48
4.5.8 Refresh Display .....	48
4.5.9 Show Version.....	48
4.5.10 Reboot .....	48
4.6 CONFIG PROGRAM (SET-UP MENU).....	49
4.6.1 Production report parameters.....	49
4.6.2 Layout of printed reports .....	49
4.6.3 Batch parameters.....	49
4.6.4 Limit values .....	50
4.6.5 Printer interface .....	51
4.6.6 Digital I/O Coding.....	52
4.7 ENTER FIX-TARE WEIGHTS .....	52
4.8 COUNT FACTORS .....	52
<b>5 COMMISSIONING WITH TERMINAL .....</b>	<b>53</b>
5.1 SYSTEM CONSOLE: CONNECTING MENU STRUCTURE.....	53
5.1.1 Connecting PR1713-PC.....	53
5.1.2 Terminal program.....	53
5.1.3 Main-Command-Level - menu structure .....	54
5.1.4 General operating notes .....	56
5.2 CONFIGURATION .....	57
5.2.1 Set date.....	57
5.2.2 Set time.....	58
5.2.3 Serial interface configuration.....	58
5.2.4 Entry of the software licence number .....	60
5.2.5 Entry of software parameters .....	61
5.2.6 Fieldbus parameter.....	62
5.2.7 Entry of user-defined units.....	62
5.2.8 Printing all configuration data .....	62
5.3 WEIGHING POINT MASK .....	63
5.4 WEIGHING POINT PARAMETERS: STORING, SAVING, PROTECTING .....	64
5.4.1 Access protection: CAL switch.....	64
5.4.2 Saving the weighing point parameters in EAROM.....	66
5.4.3 Saving the weighing point parameters temporarily.....	66
5.5 WEIGHING POINT CONFIGURATION .....	66
5.5.1 Editing functions for parameter entry .....	66
5.5.2 Filter: Analog Filter.....	67
5.5.3 Analog test mode: Testmode .....	67
5.5.4 Measuring time: Measime.....	68
5.5.5 Standstill detection .....	68

5.5.6 Zero set range: <i>Zeroset.rn</i> .....	68
5.5.7 Automatic zero tracking.....	68
5.5.8 Automatic zero correction switch-on/off.....	68
5.5.9 Zero tracking range: <i>Zerotrk.rn</i> .....	68
5.5.10 Zero tracking stepwidth: <i>Zerotrk.st</i> .....	68
5.5.11 Zero tracking interval: <i>Zerotrk.ti</i> .....	69
5.5.12 Multirange scale.....	69
5.5.13 Tare time-out: <i>Tare timot</i> .....	69
5.5.14 Maximum permissible overload: <i>Overload</i> .....	69
5.5.15 Min. weight limit for print-out: <i>no p below</i> .....	69
5.5.16 Stepwidth (scale divisions): <i>Stepwidth</i> .....	69
5.5.17 W&M mode: <i>W &amp; M</i> .....	69
5.6 WEIGHING POINT CALIBRATION.....	69
5.6.1 Weighing point calibration parameters.....	70
5.6.2 Editing functions for parameter entry.....	70
5.6.3 Adjusting the full scale value: <i>Fullscale</i> .....	71
5.6.4 Default span.....	71
5.6.5 Weighing point calibration procedure/sequence.....	71
5.6.6 Weighing point calibration with weights.....	72
5.6.7 Weighing point calibration without weights.....	77
5.6.8 Error messages in the calibration menu.....	80
5.7 ADDITIONAL WEIGHING POINTS.....	81
5.7.1 <i>PR1720 as second WP</i> .....	82
5.7.2 <i>Customer-specific weighing point</i> .....	82
5.8 SUB-MENU SERVICE.....	85
5.8.1 <i>Available memory in PR1713</i> .....	86
5.8.2 <i>Show hardware configuration</i> .....	87
5.8.3 <i>Testing the input and output modules</i> .....	87
5.8.4 <i>Printing all configuration data</i> .....	91
5.9 PROLOC OPERATING LEVEL.....	92
<b>6 TECHNICAL DATA.....</b>	<b>93</b>
6.1 ANALOG PART, A/D CONVERSION.....	93
6.1.1 <i>Accuracy and stability</i> .....	93
6.1.2 <i>Sensitivity</i> .....	93
6.1.3 <i>Load cells</i> .....	93
6.1.4 <i>Safe condition</i> .....	93
6.1.5 <i>Certificate of type approval</i> .....	94
6.1.6 <i>Location of seals</i> .....	95
6.2 DIGITAL PART.....	96
6.2.1 <i>Display</i> .....	96
6.2.2 <i>Keyboard</i> .....	96
6.2.3 <i>External keyboard</i> .....	96
6.2.4 <i>Built-in RS 232 interface</i> .....	96
6.2.5 <i>Power supply PR1713/00</i> .....	96
6.3 ENVIRONMENTAL EFFECTS.....	97
6.3.1 <i>Power voltage sags</i> .....	97
6.3.2 <i>Environmental conditions</i> .....	97
6.3.3 <i>Electromagnetic immunity</i> .....	97
6.3.4 <i>RF interference suppression</i> .....	97
6.3.5 <i>CE conformity marking</i> .....	97
6.4 MECHANICAL DATA.....	98
6.4.1 <i>Construction type</i> .....	98
6.4.2 <i>Dimensions</i> .....	98
6.4.3 <i>Connections</i> .....	98
6.4.4 <i>Accessories</i> .....	98
6.4.5 <i>Weight</i> .....	98
6.5 OPTIONS.....	99
6.5.1 <i>Analog output</i> .....	99

---

6.5.2 Digital inputs.....	99
6.5.3 Digital outputs.....	99
6.5.4 Serial interfaces.....	99
6.6 FIELD BUSES .....	100
6.6.1 Interbus-S/ Profibus-DP/ DeviceNet .....	100
6.6.2 GSD file for PR1721 Profibus DP.....	101
6.6.3 EDS-file for PR1721 DeviceNet.....	102
<b>7 ANNEX.....</b>	<b>103</b>
7.1 PR1713 /00 SPARE PARTS .....	103
7.2 OTHER PR1713 DOCUMENTS .....	103
7.3 GLOSSARY .....	103
7.4 INDEX.....	104
7.5 HINT FOR CUSTOMER FEEDBACK .....	107

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*