

# Operating manual PR 1713/00



**Operating manual**    9499-050-42910    Release 1.x

Other Manuals for PR1713:

**Installation manual**    9499-053-43010    Release 1.0  
**System manual**    9499-054-43110    Release 1.x

(general)

**Batching manual**    9499-057-43210    Release 1.x  
**Programming**    9499-053-35410    Release 1.x

## CONTENTS

<b>1 INTRODUCTION .....</b>	<b>4</b>
<b>1.1 GENERAL .....</b>	<b>4</b>
1.1.1 Manual repartition.....	4
1.1.2 Instrument description.....	4
<b>2 DESCRIPTION OF CONTROLS .....</b>	<b>6</b>
<b>2.1 DISPLAY .....</b>	<b>6</b>
<b>2.2 KEYBOARD.....</b>	<b>7</b>
<b>2.3 OPERATING CONCEPT .....</b>	<b>8</b>
2.3.1 Operation via 'soft'-key.....	9
2.3.2 Selecting from selection boxes.....	10
2.3.3 Editing with alphanumeric characters .....	11
<b>3 MAIN MENU .....</b>	<b>13</b>
<b>3.1 BOOT MENU .....</b>	<b>13</b>
<b>4 FIXTARE .....</b>	<b>15</b>
<b>5 COUNTING SCALE.....</b>	<b>17</b>
<b>6 BATCHING.....</b>	<b>19</b>
<b>6.1 INPUT MENU FOR COMPONENT EDITING.....</b>	<b>20</b>
6.1.1 Editing.....	20
6.1.2 Component parameters.....	23
6.1.2.1 Batch Mode.....	23
6.1.2.2 SPM output address .....	27
6.1.2.3 SPM input address .....	27
6.1.2.4 Preset Point .....	27
6.1.2.5 Overshoot.....	27
6.1.2.6 + Tolerance, - Tolerance.....	27
6.1.2.7 Minimum Flowrate .....	28
6.1.2.8 Calming time.....	28
6.1.2.9 Restart mode .....	29
6.1.3 Deleting.....	31
6.1.4 Printing .....	31
<b>6.2 INPUT MENU FOR RECIPE EDITING .....</b>	<b>32</b>
6.2.1 Editing.....	32
6.2.2 Recipe total mode.....	35
6.2.3 Setpoint scaling.....	36
6.2.4 Simulation.....	36
6.2.5 Deleting.....	37
6.2.6 Printing .....	37

---

<b>6.3 STARTING A BATCH PROCESS.....</b>	<b>38</b>
6.3.1 <i>Status display</i> .....	38
6.3.2 <i>Stopping the batch process</i> .....	38
6.3.3 <i>Continue, skip, abort</i> .....	39
6.3.4 <i>Messages during batching</i> .....	39
<b>6.4 SELECTING A REPORT .....</b>	<b>40</b>
6.4.1 <i>Consumption</i> .....	40
6.4.2 <i>Production report</i> .....	41
6.4.3 <i>Last batch report</i> .....	42
<b>6.5 ADDRESS LAYOUT OF SIGNALS .....</b>	<b>43</b>
6.5.1 <i>Digital in- and outputmodules PR1713/12.</i> .....	43
6.5.2 <i>SPM-addresses for addressing the digital outputs</i> .....	45
<b>7 ANALOG TEST.....</b>	<b>47</b>
<b>8 SETUP.....</b>	<b>49</b>
<b>9 WHAT CAN BE DONE IN CASE OF TROUBLE.....</b>	<b>51</b>
<b>9.1 ERROR MESSAGES.....</b>	<b>51</b>
9.1.1 <i>Error messages on the weight display</i> .....	51
<b>9.2 ERROR MESSAGES ON THE TEXT DISPLAY .....</b>	<b>52</b>
<b>10 INDEX.....</b>	<b>53</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*