


Weighing and Batching System

PR 1730/00

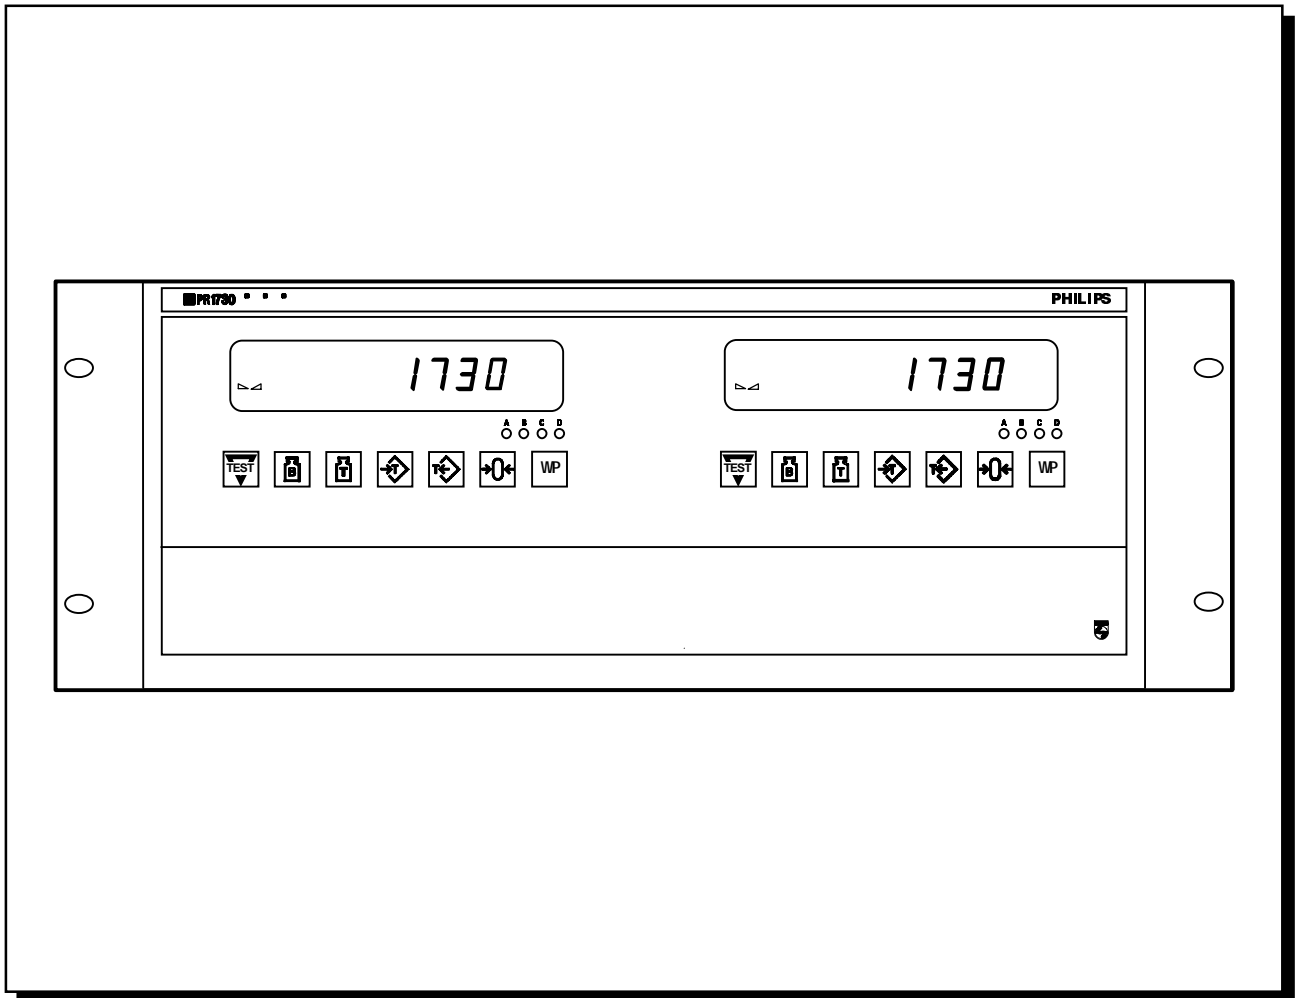

Hardware Documentation



PR 1730/00 Weighing and Batching System
9405 317 30001

CONTENT

1	SAFETY INSTRUCTIONS	1
1.1	Initial inspection	1
1.2	Before commissioning	1
	1.2.1 Visual inspection	1
	1.2.2 Mounting	1
	1.2.3 Dismantling the instrument	1
	1.2.4 Protection class	1
	1.2.5 Supply voltages / power supply connection	2
	1.2.6 Earthing	2
1.3	Maintenance and repair	2
	1.3.1 Failure and excessive stress	2
	1.3.2 Replacing fuses	2
	1.3.3 Special instructions for soldering	3
	1.3.4 Replacing the battery	3
	1.3.5 Electrostatically sensitive components	3
	1.3.6 Cleaning	3
2	PREFACE	5
3	GENERAL HARDWARE DESCRIPTION	7
3.1	Design and construction	7
	3.1.1 Front view	7
	3.1.2 Module sockets - all components fitted, rear view	7
	3.1.3 Mounting and removing the modules	8
3.2	Block diagram	12
3.3	Instrument configuration	14
3.4	Technical data	16
	3.4.1 Characteristics, specifications	16
	3.4.2 Module data: see section 'Projecting - engineering'	17
	3.4.3 Technical data of the instrument	18
3.5	Scope of delivery	20
4	OPERATOR INTERFACE	21
4.1	Displays and controls	21
	4.1.1 Display functions	21
4.2	Allocation: operating unit / weighing point	22
	4.2.1 LED for indication of the weighing point number	22
	4.2.2 Weighing point selection	22
4.3	Weight display	22
	4.3.1 Status information	23

4.3.2	Numeric display	24
4.3.3	Weight dimension	24
4.4	Function keys	24
4.5	Weighing point errors and messages	28
4.5.1	Weighing point error	28
4.5.2	Messages	28
5	PROJECTING - ENGINEERING	31
5.1	Basic unit	31
5.1.1	Description - view	31
5.1.2	Power supply / Selecting the supply voltage	33
5.1.3	Instrument number / software licence	33
5.1.4	Memory unit / memory capacity	34
5.1.5	Battery / factory setting	34
5.1.6	SIO module carrier / SIO supply voltage	34
5.2	PR1730/10 Weighing point module	35
5.2.1	Description	35
5.2.2	Pin allocation	35
5.2.3	Technical data	36
5.2.4	Configuration - installation	38
5.3	PR1730/12 digital I/O module	39
5.3.1	Description	39
5.3.2	Block diagram - DB37 pin allocation	40
5.3.3	Technical data	41
5.3.4	Configuration - installation	42
5.3.5	Application examples / projecting documentation	42
5.4	PR1730/13 INTERBUS-S master interface	48
5.4.1	Description	48
5.4.2	Block diagram - DB15 pin allocation	49
5.4.3	Technical data	49
5.4.4	Configuration - installation	50
5.4.5	Application examples / projecting documents	52
5.5	PR1601/00 current loop interface	53
5.5.1	Description	53
5.5.2	Block diagram - DB9 pin allocation	54
5.5.3	Technical data	54
5.5.4	Configuration - installation	56
5.5.5	Application example / projecting documentation	58
5.6	PR1602/00 RS 232 interface	60
5.6.1	Description	60
5.6.2	Circuit diagram - DB9 pin allocation	60
5.6.3	Technical data	61
5.6.4	Configuration - installation	62
5.6.5	Application examples / projecting documentation	64
5.7	PR1603/00 current loop a. RS232 interface	69
5.7.1	Description	69
5.7.2	Block diagram – pin allocation DB15	70
5.7.3	Technical data	70
5.7.4	Configuration - installation	72
5.7.5	Application example / projecting documentation	74

5.8	PR1604/00	RS 422/485 interface	75
	5.8.1	Description	75
	5.8.2	Block diagram - DB9 pin allocation	76
	5.8.3	Technical data	76
	5.8.4	Configuration - installation	78
	5.8.5	Application examples / projecting documentation	81
5.9	PR1606/00	Analog output module	88
	5.9.1	Description	88
	5.9.2	Block diagram - DB15 pin allocation	88
	5.9.3	Technical data	89
	5.9.4	Configuration - installation	90
	5.9.5	Application examples / projecting documentation	90
5.10	PR1607/00	analog input module	91
	5.10.1	Description	91
	5.10.2	Block diagram - DB15 pin allocation	92
	5.10.3	Technical data	92
	5.10.4	Configuration - installation	93
	5.10.5	Application examples / projecting documents	95
5.11	PR1608/00	BCD module	96
	5.11.1	Description	96
	5.11.2	Block diagram - DB37 pin allocation	97
	5.11.3	Technical data	98
	5.11.4	Configuration - Installation	99
	5.11.5	Application examples / Projecting documentation	102
5.12	PR1608/10	BCD module – common GND	105
	5.12.1	Description	105
	5.12.2	Block diagram - DB37 pin allocation	106
	5.12.3	Technical data	107
	5.12.4	Configuration - Installation	108
	5.12.5	Application examples / Projecting documentation	110
6	MOUNTING AND INSTALLATION		113
6.1	Mounting instructions		113
	6.1.1	Hints for installation	113
	6.1.2	Installation in a 19-inch frame	113
	6.1.3	Panel mounting	114
	6.1.4	Cable retaining plate	115
	6.1.5	Telescopic rail option	115
6.2	Hints for installation		116
	6.2.1	Supply voltage connection and selection	116
	6.2.2	Earthing and potential compensation	116
	6.2.3	Laying the cables – screening	117
	6.2.4	Interference suppression of relays and contactors	118
6.3	Load cell connection		118
	6.3.1	6 - wire technology	119
	6.3.2	6 – wire technology in explosion – protected installations	120
6.4	Location of verification labels		121

INDEX**123**

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sartorius/PR-1730 hardware manual.html](https://the-checkout-tech.com/manuals/sartorius/PR-1730%20hardware%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)