


Operating Manual

X3 Process Indicator PR 5410

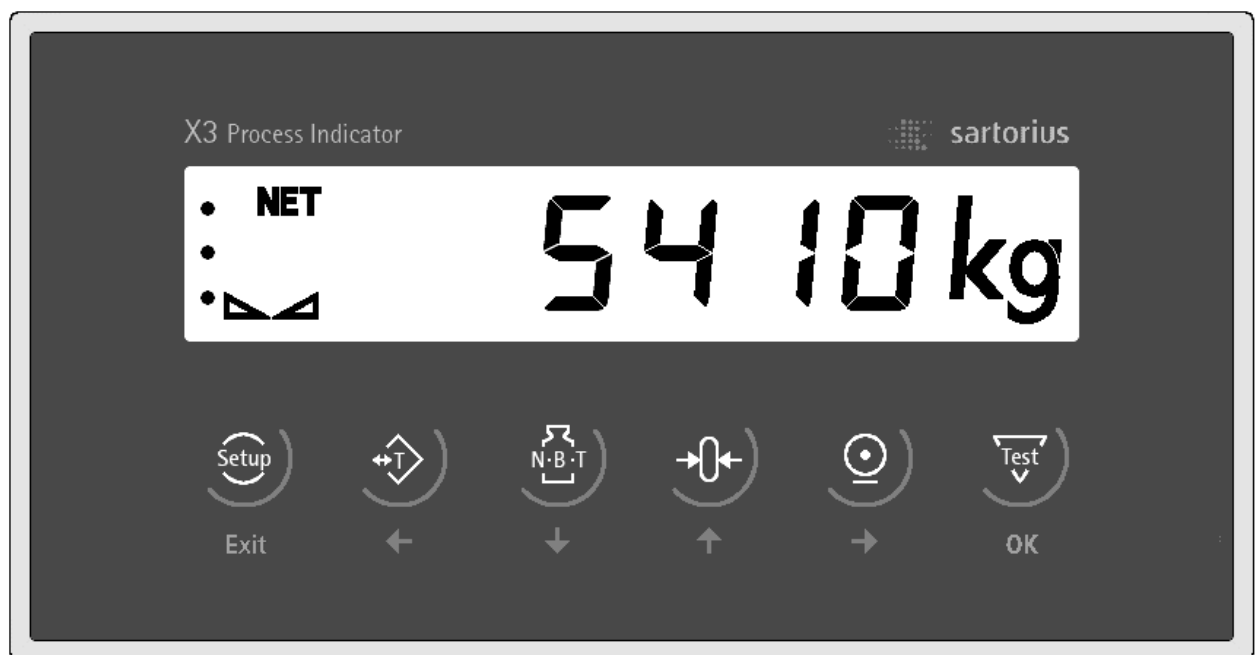

Operating Manual

9499 050 54102

Edition 2

01.02.2008

for PR 5410

Release: 1.30

Contents

1	Warnings and Safety Precautions.....	7
1.1	Intended Use	7
1.2	Initial Inspection	7
1.3	Before Commissioning	7
1.3.1	Installation	7
1.3.2	Opening the Instrument	7
1.3.3	Grounding and Shock Prevention PR 5410/00	8
1.3.4	Power Connection and Power Supply PR 5410/00	8
1.3.5	Failure and Excessive Stress	8
1.3.6	Important Note	8
2	Process Indicator	9
2.1	Overview of the Instrument	9
2.2	Housing	10
2.3	Display and Controls	11
2.3.1	Display	11
2.3.2	Front-Panel Keys	11
2.3.3	Selection Using the Navigation Keys (VNC)	12
2.3.4	Tool Tip (VNC)	12
2.3.5	System Messages during Input (VNC)	13
2.3.6	Overview of Accessories	14
2.3.7	Plug-in Cards	15
3	Installing the Instrument and Plug-in Cards	16
3.1	Mechanical Preparation.....	16
3.2	Hardware Construction	16
3.3	Main Board.....	16
3.3.1	Network Port	17
3.3.2	Standard RS-232 Interface	17
3.3.3	Optocoupler Inputs	19
3.3.4	Optocoupler Outputs	20
3.4	Accessories.....	21
3.4.1	Installing Plug-in Cards	21
3.4.2	Cable Connection in the D-Sub Connector Mating Plug	22
3.4.3	PR 5510/02 Serial I/O	23
3.4.4	PR 5510/04 Serial I/O	24
3.4.5	PR 5510/07 Analog Input/Output Card	28
3.4.6	PR 5510/08 BCD Output (Open Emitter)	30
3.4.7	PR 5510/09 BCD Output (Open Collector)	33
3.4.8	PR 5510/12 6 Optocoupler Inputs / 12 Optocoupler Outputs	38
3.4.9	PR 1721/31 Profibus Interface	43
3.4.10	PR 1721/32 Interbus Interface	44
3.4.11	PR 1721/34 DeviceNet Interface	45
3.4.12	PR 1721/37 EtherNet/IP Schnittstelle	46
3.4.13	PR 5510/14 ModBus TCP Interface	47
3.5	Connecting Load Cells.....	48
3.5.1	Connecting a Load Cell with 4-Wire Cable	48
3.5.2	Connecting PR 6221 Load Cells	48
3.5.3	Connecting up to 8 Load Cells (650 Ohms) Using 6-Wire Connecting Cable	49
3.5.4	Connecting Load Cells with External Supply	50
3.5.5	Connecting Load Cells via Intrinsically Safe Load Cell Interface PR 1626/60	51
3.5.6	Connecting Platforms (CAP...)	52
4	Commissioning	53
4.1	Data Protection/Power Failure	53
4.1.1	CAL Switch	53
4.2	Switching on the Instrument.....	54

4.2.1	Display Test	54
4.2.2	Front-Panel Key Test	54
4.2.3	Resetting the Instrument to the Factory Settings	54
4.2.4	Setting the Network Address Using Front-Panel Keys	55
4.2.5	Viewing the Network Address via Front-Panel Keys	55
4.2.6	Searching the Instrument in the Network Using 'IndicatorBrowser'	55
4.2.7	Loading New Software	56
4.3	Konfiguration and Calibration using Front Keys	57
4.3.1	Meaning of Front Keys	57
4.3.2	Entering Date and Time	57
4.3.3	Parameter Table	58
4.3.4	New Calibration using Front Keys	60
4.3.5	Subsequent Change of Deadload using Front Keys	61
4.3.6	View Calibration Data	61
4.3.7	View Calibration Data for Deadload and Maximum Load	62
4.3.8	PIN Code	62
4.4	Operation Using a PC	63
4.4.1	Operation Using the VNC Program	63
4.4.2	Operation Using Internet Browser	64
4.4.3	INFO Function	65
4.4.4	Setup Function (VNC)	66
4.4.5	Setup Menu (VNC): Overview	66
4.4.6	Calibration Menu	67
4.5	Calibration	68
4.5.1	Displaying Calibration Data	68
4.5.2	Selecting the Calibration Mode	69
4.5.3	Determining the Maximum Capacity (Max)	70
4.5.4	Determining the Scale Interval	71
4.5.5	Determining the Dead Load	72
4.5.6	Calibration with Weight (by Load)	73
4.5.7	Calibration with mV/V Value	74
4.5.8	Calibration with Load Cell Data ("Smart Calibration")	75
4.5.9	Subsequent Dead Load Correction	76
4.5.10	Linearization	76
4.5.11	Test Value Determination / Display	77
4.5.12	Finishing / Saving the Calibration	77
4.5.13	Parameter Input	78
4.6	Error Messages	81
4.6.1	Measuring Circuit Error Messages	81
4.6.2	General Error Messages	81
4.7	Configuring General Parameters	82
4.7.1	Date and Time	82
4.7.2	Serial Ports	82
4.7.3	SMA Protocol	84
4.7.4	EW Protocol	84
4.7.5	Operating Parameters	85
4.7.6	Printing Parameters	86
4.7.7	Fieldbus Parameters	87
4.7.8	Network Parameters	88
4.8	Limit Values, Digital Inputs and Outputs	89
4.8.1	Conditions for Limit Values and Digital Inputs, States for Outputs	89
4.8.2	Configuring Digital Inputs and Outputs	90
4.8.3	Configuring Outputs	90
4.8.4	Configuring Inputs	91
4.8.5	Configuring Limit Values	93
4.8.6	BCD Output	95
4.9	Analog Output	96
4.9.1	Adapting the Analog Output	97
4.10	Alibi Memory	98
4.11	ConfigureIt Professional	99

4.11.1	Installation	99
4.11.2	Program Start	101
4.11.3	Establish Communication to the Instrument	103
4.11.4	Transfer Dataset from Instrument to PC	104
4.11.5	Store Current Dataset on PC	104
4.11.6	Store Current Dataset or Selected Parameters in the Instrument	106
4.11.7	Reset the Instrument to Factory Default	106
4.11.8	Exporting a Dataset as Printable File	106
4.11.9	Operation of the Instrument via Browser (VNC)	107
4.11.10	Closing the Program	107
4.12	MODBUS / J-BUS Protocol	108
4.12.1	Communication	108
4.12.2	Function 1 or 2: Reading n Bits	109
4.12.3	Function 3 or 4: Reading n Successive Words	109
4.12.4	Function 5: Writing a Bit	110
4.12.5	Function 6: Writing a Word	110
4.12.6	Function 8: Diagnosis	111
4.12.7	Function 15: Writing n Successive Bits	111
4.12.8	Function 16: Writing n Successive Words	112
4.12.9	MODBUS / J-BUS Error Messages	112
4.12.10	MODBUS / J-BUS Word Addresses	113
5	SMA Protocol	114
5.1	General	114
5.2	Description of Used Symbols	114
5.3	SMA Command Set	115
5.3.1	Requesting a Weight	115
5.3.2	Controlling the Scale	116
5.3.3	Scale Diagnosis	117
5.3.4	Scale Data	118
5.3.5	Scale Information	118
5.3.6	Escape Command	118
5.4	SMA Reply Messages	118
5.4.1	Standard Reply	119
5.4.2	Reply with Unknown Command	120
5.4.3	Reply in Case of Communication Error	120
5.4.4	Reply with Diagnosis Command	120
5.4.5	Reply with 'A' and 'B' Command	121
5.4.6	Scale Reply with 'I' and 'N' Commands	122
5.5	Communication Error	122
6	PR 1612 Commands	123
6.1	Main commands for indicator function	123
6.2	Error Messages for PR 1612 Commands	123
7	Fieldbus Interface	124
7.1	Fieldbus Interface Protocol	124
7.1.1	Write Window (Input Area)	125
7.1.2	Read Window (Output Area)	125
7.1.3	Reading and Writing Data	125
7.2	Description of the I/O Area (Read / Write Window)	126
7.2.1	Input Area	126
7.2.2	Output Area	127
7.2.3	Reading and Writing Register via Fieldbus	128
7.2.4	Example: Reading the Gross Weight	130
7.3	Fieldbus Register	131
7.3.1	Register 0: IO Status Bits for Reading	131
7.3.2	Register 1: Scale Status	131
7.3.3	Register 2: State of State-Controlled Action Bits	132
7.3.4	Register 3: State of Edge-Controlled Action Bits	132

7.3.5	Register 4: Calibration Information, Error Byte	132
7.3.6	Register 5: Device Type and Software Release	133
7.3.7	Register 6: Board Number	133
7.3.8	Register 7: (Reserved)	133
7.3.9	Register 8 ... 15: Weight Data	133
7.3.10	Register 20: Weight Data	133
7.3.11	Register 22 ... 27: Limit Values (Read/Write)	133
7.3.12	Register 30, 31: Fixed Values (Read/Write)	134
7.3.13	Register 80 ... 89: State-Controlled Action Bits (Write)	134
8	Global SPM Variables	135
9	Configuration print-out	137
10	Repairs and Maintenance	138
10.1	Battery for Date/Time	138
10.1.1	Battery Replacement	138
10.2	Solder Work	139
10.3	Cleaning	139
11	Disposal	139
12	Specifications	140
12.1	Instructions for Use of 'Free Software'	140
12.2	General Data	140
12.2.1	Backup Battery for Time/Date	140
12.2.2	Power Supply PR 5410/00	140
12.2.3	Power Supply PR 5410/01	140
12.3	Effect of Ambient Conditions	141
12.3.1	Environmental Conditions	141
12.3.2	Electromagnetic Compatibility (EMC)	141
12.3.3	RF Interference Suppression	141
12.4	Weighing Electronics	142
12.4.1	Load Cells	142
12.4.2	Principle	142
12.4.3	Accuracy and Stability	142
12.4.4	Sensitivity	142
12.5	Mechanical Data	143
12.5.1	Construction	143
12.5.2	Dimensions	143
12.5.3	Weight	143
12.6	Use in Legal-for-Trade Mode	143
12.6.1	Documentation for Verification on the Enclosed CD	143
12.6.2	Additional Instructions	143
13	Index	145

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sartorius/PR-5410 operating manual.html](https://the-checkout-tech.com/manuals/sartorius/PR-5410%20operating%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)