

# **SHIMADZU ELECTRONIC BALANCE**

## **BL SERIES**

**BL-120S, 220S, 320S, 620S, 3200S**

**BL-120H, 220H, 320H, 1200H, 2200H, 3200H (L)**

## **SERVICE MANUAL**

Read the instruction manual thoroughly before you use the product. Save this instruction manual with care so that you can use it any time you need

**SHIMADZU CORPORATION**  
ANALYTICAL & MEASURING INSTRUMENTS DIVISION  
KYOTO, JAPAN

# Contents

<b>1. Introduction</b> .....	1
<b>2. Troubleshooting</b> .....	2
<b>3. Parts replacement</b> .....	3
3.1 Parts name .....	3
3.2 How to remove case assembly (1) .....	4
3.3 How to remove main board assembly ③. (Refer to Fig. 3.) .....	5
3.4 How to remove unit assembly ④ (Refer to Fig. 3.) .....	5
3.5 Replacement of main board assembly ③. (Refer to Fig. 3.) .....	5
3.6 How to mount jig ⑩ (Refer to Figs. 3 and 6.) .....	5
3.7 Replacement of fulcrum spring ⑪ and force point spring ⑬ (Refer to Fig. 6.) .....	6
3.7.1 How to remove fulcrum spring ⑪ and force point spring ⑬ .....	6
3.7.2 How to mount new fulcrum spring ⑪ and force point spring ⑬ .....	6
3.8 Replacement of parallel guide (upper) ⑥ (Refer to Figs. 3 and 6.) .....	8
3.9 Replacement of parallel guide (lower) ⑦ (Refer to Figs. 4 and 6.) .....	8
3.10 Replacement of magnet assembly ⑱ (Refer to Figs. 3, 4, 5, and 6.) .....	9
3.11 Replacement of coil assembly ② (Refer to Figs. 4, 5, and 6.) .....	9
3.12 Replacement of pre-amplifier assembly (Refer to Figs. 3 and .5) .....	10
<b>4. Service menu</b> .....	13
4.1 Displaying the service menu .....	13
4.2 Contents of service menu .....	13
4.2.1 Adjustment of Linearity .....	14
4.2.2 Setting the weighing value for adjustment of linearity .....	16
4.2.3 Temperature coefficient data editor and Non-volatile RAM data editor .....	16
4.2.4 External output mode for non-volatile data .....	16
<b>5. Adjustment</b> .....	17
5.1 Height adjustment of beam stopper fitting .....	17
5.2 Balance adjustment .....	18

5.3	Level adjustment .....	18
5.4	Adjustment of shift error (off-center error) .....	19
<b>6.</b>	<b>Precautions for replacing the parts .....</b>	<b>20</b>
<b>7.</b>	<b>Parts list.....</b>	<b>21</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Shimadzu/BL-120 BL-220 BL-320 BL-620 BL-120>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)