

TSCALE

JC series **Dual counting Scales** *User's guide*

CONTENTS

SECTION 1 INTRODUCTION	1
SECTION 2 TECHNICAL SPECIFICATIONS	2
2.1 SPECIFICATIONS FOR THE LOCAL SCALE.....	2
2.2 SPECIFICATIONS FOR THE REMOTE SCALE	2
2.3 COMMON SPECIFICATIONS	2
SECTION 3 INSTALLATION	3
3.1 LOCATING THE SCALES	3
3.2 SETTING UP THE SCALES.....	3
3.2.1 Setting up the local scale.....	3
3.2.2 Setting up the remote scale.....	4
3.2.3 Remote scale connection.....	4
3.2.4 Remote scale setup.....	4
SECTION 4 KEY DESCRIPTIONS	6
SECTION 5 DISPLAYS	7
5.1 WEIGHT WINDOW	7
5.2 UNIT WEIGHT WINDOW.....	7
5.3 COUNT WINDOW.....	7
SECTION 6 OPERATION	8
6.1 ZEROING AND TARING THE DISPLAY	8
6.1.1 Zeroing	8
6.1.2 Taring	9
6.1.3 Taring the remote scale.....	9
6.2 MEMORY FUNCTIONS.....	10
6.2.1 Manual accumulation	10
6.2.2 Automatic accumulated total.....	10
6.3 PARTS COUNTING.....	10
6.3.1 Weighing a sample to determine the Unit Weight	11
6.3.2 Entering a known Unit Weight	11
6.3.3 Automatic update of unit weight.....	11

6.3.4 Count pre-set or check-weighing	12
6.4 PLU (Product Look Up).....	12
6.4.1 Storing PLU's manually.....	13
6.4.2 Entering description manually.....	14
6.4.3 Recalling PLU's manually.....	14
SECTION7 PARAMETERS.....	16
7.1 USER PARAMETERS	16
7.2 USER PARAMETERS SETTING TABLE	16
SECTION8 BATTERY OPERATION.....	18
SECTION9 RS-232 OUTPUT	19
SECTION10 CALIBRATION	20
SECTION11 ERROR CODES.....	21
SECTION12 TECHNICAL PARAMETERS.....	22

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*