

**TEC**

TEC Electronics Computing Scale

# **SL21-N SERIES**

## **Initial Setting Manual**

Document No. EM3-31006

Original Apr., 1990

(Revised )

**TOKYO ELECTRIC CO., LTD.**

# CONTENTS

	Page
1. OUTLINE OF INITIAL SETTING .....	1
2. SWITCH AND KEY FUNCTIONS IN INITIAL SETTING .....	2
2.1. Initial Switch .....	2
2.2. Operation Switch and Keys .....	2
3. FUNCTION TABLE FOR P2 MODE .....	3
4. INITIAL SETTING .....	20
4.1. How to Place the Scale in Initial Set Mode .....	20
4.2. Initial Set Mode [P0] .....	20
4.3. Initial Set Mode [P1] .....	23
4.4. Initial Set Mode [P2] .....	27
4.5. Initial Set Mode [P3] .....	29
5. STOPPER ADJUSTMENT .....	30
5.1. Adjustment of Platter Frame Stoppers .....	30
5.2. Adjustment of Load Cell Stopper .....	31
6. STANDARD SETTINGS BY COUNTRY OF DESTINATION ..	32

Quality: Good

NOTE: Section 4.3 is complete, page 25 and 26 are presumed blank.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/TEC/SL-21 initial settings and calibration AU ma](https://the-checkout-tech.com/manuals/TEC/SL-21%20initial%20settings%20and%20calibration%20AU%20man.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)