

INITIAL SETTING MANUAL

MODEL **SL39N**
ORIGINAL **MAY, 1987**
(REVISED **NOV., 1988** **)**

DOCUMENT NO. **E99-04012 A**

[APPLICABLE MODELS]

SL39-15L-N-US/US-1

SL39-30L-N-US/US-1

SL39-50L-N-US/US-1

CONTENTS

	Page
1. OUTLINE OF INITIAL SETTING	1
2. SWITCH AND KEY FUNCTIONS IN INITIAL SETTING	2
2.1. Initial Switch	2
2.2. Operation Switch and Keys	2
3. FUNCTION TABLE FOR P2 MODE	3
4. INITIAL SETTING	20
4.1. How to Place the Scale in Initial Set Mode	20
4.2. Initial Set Mode [P0]	20
4.3. Initial Set Mode [P1]	23
4.4. Initial Set Mode [P2]	27
5. STOPPER ADJUSTMENT	29
5.1. Adjustment of Platter Frame Stoppers	29
5.2. Adjustment of Load Cell Stopper	30
6. STANDARD SETTINGS BY COUNTRY OF DESTINATION ..	31

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)