

# INITIAL SETTING MANUAL

**MODEL**            **SL39N**  
**ORIGINAL**       **MAY, 1987**  
**(REVISED**       **NOV., 1988**       **)**  
**DOCUMENT NO.**    **E99-04012 A**

[ APPLICABLE MODELS ]

SL39-15L-N-US/US-1

SL39-30L-N-US/US-1

SL39-50L-N-US/US-1



## CONTENTS

	Page
1. OUTLINE OF INITIAL SETTING .....	1
2. SWITCH AND KEY FUNCTIONS IN INITIAL SETTING .....	2
2.1. Initial Switch .....	2
2.2. Operation Switch and Keys .....	2
3. FUNCTION TABLE FOR P2 MODE .....	3
4. INITIAL SETTING .....	20
4.1. How to Place the Scale in Initial Set Mode .....	20
4.2. Initial Set Mode [P0] .....	20
4.3. Initial Set Mode [P1] .....	23
4.4. Initial Set Mode [P2] .....	27
5. STOPPER ADJUSTMENT .....	29
5.1. Adjustment of Platter Frame Stoppers .....	29
5.2. Adjustment of Load Cell Stopper .....	30
6. STANDARD SETTINGS BY COUNTRY OF DESTINATION ..	31

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/TEC/SL-39-Series initial settings manual.html](https://the-checkout-tech.com/manuals/TEC/SL-39-Series%20initial%20settings%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)