



TEC Digital Scale

# SL47-N-1 SERIES

## Service Manual

Document No. EM0-31002

Original May, 1989

(Revised )

### TABLE OF CONTENTS

INITIAL SETTING .....	EM3-31002
CIRCUIT DESCRIPTION .....	EM6-31002
SCHEMATIC DIAGRAM .....	EM7-31002
PARTS LIST .....	EM8-31001

TOKYO ELECTRIC CO., LTD.

## TABLE OF CONTENTS

	Page
1. SPECIFICATIONS .....	1
2. OVERVIEW .....	2
2.1 Built-in type .....	2
2.2 Remote display type .....	3
3. LEVEL ADJUSTMENT .....	4
4. OUTLINE OF INITIAL SETTING .....	5
5. SWITCH FUNCTIONS IN INITIAL SETTING MODE .....	6
6. INITIAL SETTING PROCEDURES .....	7
6.1 How to place the scale in initial setting mode .....	7
6.2 Setting the ZERO point and SPAN data .....	7
6.3 Checking the direct reading data .....	8
6.4 Selecting the scale functions .....	9
7. SCALE FUNCTION TABLE .....	10
8. STOPPER ADJUSTMENT .....	12
8.1 Adjustment of load cell stopper .....	12
8.2 Adjustment of platter frame stoppers .....	13

## TABLE OF CONTENTS

	Page
1. WIRING DIAGRAM .....	1
2. CIRCUIT DESCRIPTION .....	2
2.1 PC BOARD CPU. PS. IBM .....	2
2.2 PC BOARD CPU. PS. TEC .....	11
2.3 PC BOARD CPU. PS. NCR .....	18

SL47-N-1 MAY '89

**CONTENTS**

	Page
HOW TO USE THIS PARTS LIST .....	2
BODY PARTS	
1. COVER ASSY .....	4
2. BASE ASSY .....	7
3. REMOTE DISPLAY ASSY .....	10
4. ECR CABLE ASSY .....	12
ELECTRONIC PARTS	
1. CPU. PS. TEC PCB ASSY .....	15
2. CPU. PS. IBM PCB ASSY .....	18
3. DISPLAY PCB ASSY .....	22

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/TEC/SL-47-N-1 service and circuit and parts 4in1](https://the-checkout-tech.com/manuals/TEC/SL-47-N-1%20service%20and%20circuit%20and%20parts%204in1.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)