


# Owners Manual

**TEC LOAD CELL SCALE**  
(WITH LABEL PRINTER)

**MODEL SL57 SERIES**  
(US. Version)

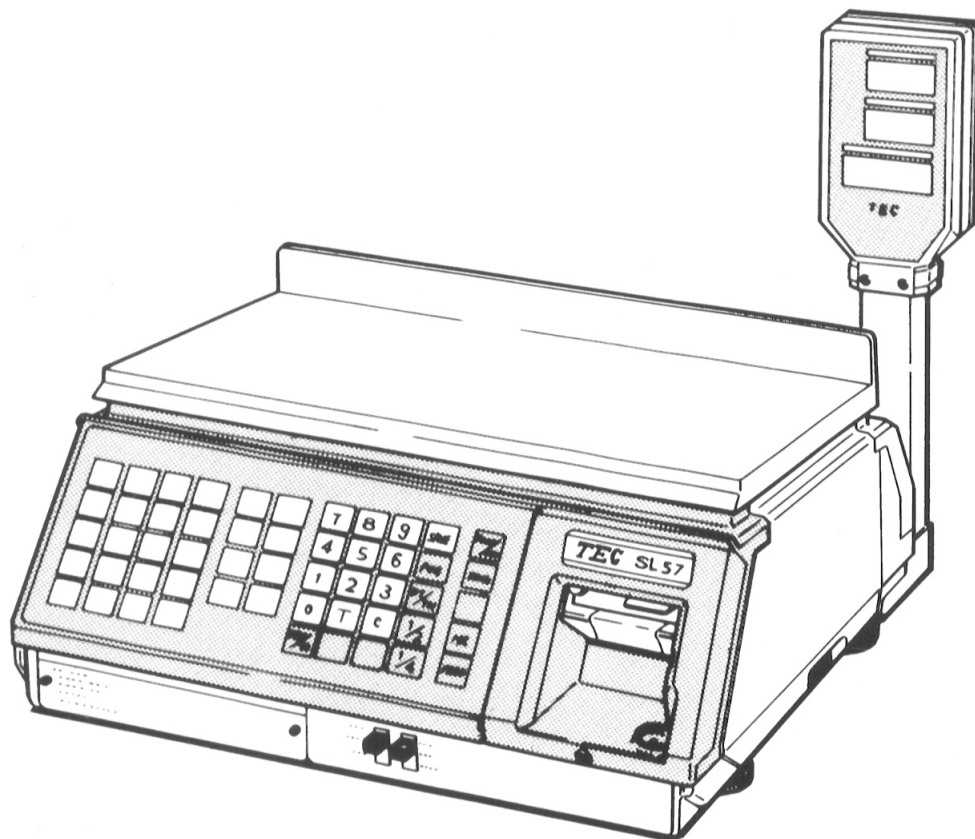

**TEC** TOKYO ELECTRIC CO., LTD.

## TABLE OF CONTENTS

	Page
INTRODUCTION.....	1
PRECAUTIONS.....	1
1. SPECIFICATIONS.....	2
2. OVERVIEW.....	3
3. REMOTE DISPLAY.....	3
4. KEY ARRANGEMENT.....	4
5. KEY AND LAMP FUNCTIONS.....	4
6. LEVEL ADJUSTMENT.....	7
7. CLEANING THE PRINT HEAD.....	7
8. REMOVAL AND REPLACEMENT OF LABEL ROLL.....	8
9. NOTES BEFORE STARTING OPERATION.....	9
10. OPERATION PROCEDURES	
10-1. Weighed Article Registration.....	10
10-2. Fix Price Registration.....	11
10-3. By Count Registration.....	12
10-4. Tare Function Procedures.....	14
10-5. Save Function Procedures.....	16
10-6. Unit Price per 1/2, 1/4 lbs.....	18
10-7. Date Change.....	19
10-8. Shelf Life Date Setting.....	20
10-9. Print Test Label.....	20
11. TOTAL OPERATION PROCEDURES	
11-1. Individual Department Read.....	21
11-2. Grand Total Read.....	21
11-3. Individual Department Reset.....	22
11-4. Grand Total Reset.....	22
12. PROGRAMMING PROCEDURES	
12-1. Date and Time Setting.....	23
12-2. Unit Price Presetting or Changing.....	23
12-3. Name or Message Programming.....	23
12-4. Address or Message Programming (Bottom of label).....	24
12-5. Print Item ON/OFF Setting or Changing.....	24
13. ERROR MESSAGE TABLE.....	26
14. BEFORE YOU CALL FOR SERVICE.....	26

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)