


Owners Manual

TEC LOAD CELL SCALE
(WITH LABEL PRINTER)

MODEL SL59 SERIES

(US-1. Version)

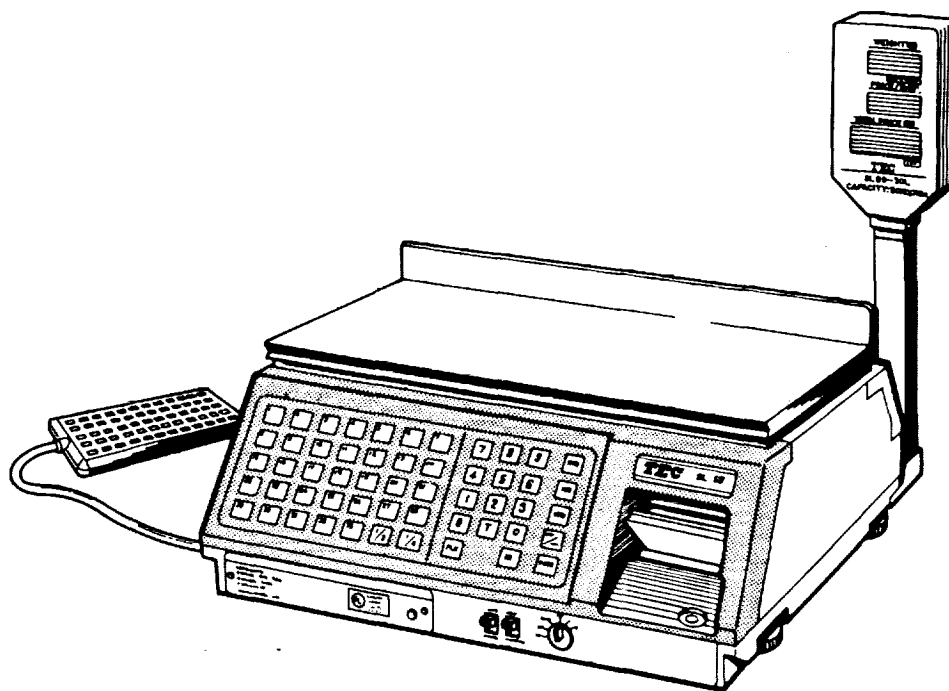

TEC TOKYO ELECTRIC CO., LTD.

TABLE OF CONTENTS

	Page
INTRODUCTION, PRECAUTIONS	2
1. SPECIFICATIONS, DIMENSIONS	3
2.3. OUT OF VIEW, REMOTE DISPLAY	4
4. KEY ARRANGEMENT	5
5. KEY AND LAMP FUNCTIONS	5
6. MAIN CONTROL LOCK	7
7. ALPHA KEYBOARD (option)	8
8. CASSETTE MAGNETIC TAPE OPERATIONS	10
9.10. LEVEL ADJUSTMENT, NOTES BEFORE STARTING OPERATION	11
11. OPERATING SECTION	13
11-1. NORMAL OPERATION	15
A. Weighed Article Registration	15
B. Non Weighed Article Registration	16
C. Fix Price Registration	19
D. Tare Function Procedure	20
E. Date Change	22
11-2. TOTAL OPERATION	23
A. Grand Total READ and RESET (1)	23
B. Grand Total READ and RESET (2)	24
C. PLU Single READ and RESET	25
D. PLU Group READ and RESET	26
E. Random Items PLU READ and RESET	27
F. Void READ and RESET	28
G. Hourly Report	29
12. PROGRAMMING SECTION	31
PART I	33
PART II	35
PART III	38
PART IV	41
PART V	42
PART VI	43
PART VII	44
PART VIII	45
PART IX	46
PART X	49
PART XI	49
13. LABEL THREADING	50
14. CLEANING THE PRINT HEAD	50
15. BEFORE YOU CALL FOR SERVICE	51

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/TEC/SL-59_owners_US_ver_manual.html

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)