



TEC Electronic Computing Scale  
**SL-5900 Series**

**Programming Manual**

Document No. EM3-31005F

Original Nov., 1989  
(Revised Jan., 1992)

**APPLICABLE MODELS**

SL-5900-30-C2-US  
SL-5900-35-C2-US  
SL-5900-35-C4-US  
SL-5900-36-C4-US

TOKYO ELECTRIC CO., LTD.

## TABLE OF CONTENTS

	Page
1. OVERVIEW .....	1
2. PROGRAMMING KEYBOARD AND KEY LAYOUT .....	2
3. PROGRAMMING KEY FUNCTIONS .....	3
4. CONTROL LOCK .....	5
5. NOTES BEFORE STARTING PROGRAMMING .....	6
5.1 Installing PC Keyboard .....	6
5.2 Installing RK-3 Keyboard .....	6
6. PROGRAMMING PROCEDURES .....	7
• Selection of Programming Menu .....	7
Menu No. 0 :Changing Unit Price .....	8
Menu No. 1 :Setting or Changing PLU Data .....	9
Menu No. 2 :Setting Store Address or Commercial Message .....	14
Menu No. 3 :Adjusting Print Position for Label .....	15
Menu No. 4 :Setting Date, Time, Machine Number, and Store Number .....	16
Menu No. 5 :CMT Operations .....	17
Menu No. 7 :Setting Bar Code Format .....	21
Menu No. 8 :Assigning Speed Keys .....	24
Menu No. 11 :Setting Ingredient (for SL-5900-□6 type only) .....	25
Menu No. 12 :Issuing Confirmation Label (for SL-5900-□5/□6 only) .....	29
Menu No. 13 :Switching On-Line/Local (for SL-5900-□5/□6 only) .....	30
Menu No. 17 :Setting Grade Line (for SL-5900-□6 only) .....	31
Menu No. 18 :Memory Card (for SL-5900-□6 only) .....	32
Menu No. 20 :Transmitting PLU File, Unit Price, Address or Speed Key (FUN System) .....	34
Menu No. 21 :Setting Clerk Name (for SL-5900-□6 only) .....	36
Menu No. 22 :Setting Report Message (for SL-5900-□6 only) .....	37
Menu No. 40 :Setting Print Item ON/OFF #1 .....	38
Menu No. 41 :Setting Print Item ON/OFF #2 .....	39
Menu No. 42 :Setting Average Resistance of Print Head .....	40
Menu No. 99 : RAM Clear .....	41

7. OUTLINE OF INITIAL SETTING .....	42
8. SWITCH AND KEY FUNCTIONS IN INITIAL SETTING .....	43
8.1 Initial Switch .....	43
8.2 Operation Keys .....	43
9. INITIAL SETTING PROCEDURES .....	44
9.1 Before Starting Initial Setting .....	44
9.2 Initial Set Mode [P0] .....	44
9.3 Initial Set Mode [P1] .....	47
9.4 Initial Set Mode [P2] .....	51
9.5 Initial Set Mode [P3] .....	52
9.6 Initial Set Mode [P4] .....	53
9.7 Initial Set Mode [P5] .....	54
9.8 Initial Set Mode [P6] .....	55
9.9 Initial Set Mode [P7] .....	56
10. FUNCTION TABLE FOR [P2] MODE .....	57
11. STANDARD SETTINGS BY COUNTRY OF DESTINATION .....	72

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/TEC/SL-5900-Series\\_programming\\_manual.html](https://the-checkout-tech.com/manuals/TEC/SL-5900-Series_programming_manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)