

TOLEDO®

**MODEL
1938**

COUNTING SCALE

**TECHNICAL MANUAL AND
PARTS CATALOG**

TM 001938 100

CONTENTS

I. GENERAL DESCRIPTION	1
A. OVERVIEW	1
B. FEATURES	1
C. STATEMENT OF PERFORMANCE	1
D. ACCURACY CONSIDERATIONS	1
II. SYSTEM DESCRIPTION	1
A. INTERNAL FUNCTIONS	1
B. DISPLAY	1
C. KEYBOARD	2
III. SPECIFICATIONS	2
A. ELECTRICAL	2
B. ENVIRONMENT	2
C. PHYSICAL	3
D. CONFIGURATION	3
IV. INSTALLATION INSTRUCTIONS	3
A. ASSEMBLY	3
B. ACCESSING SETUP AND CALIBRATION MODE	5
C. SOFTSWITCH FUNCTIONS	7
D. CALIBRATION	8
E. GRAVITY ADJUSTMENT	9
V. OPERATING INSTRUCTIONS	10
A. POWER-UP SEQUENCE	10
B. OPERATING SEQUENCES	10
VI. RS232 SERIAL INPUT/OUTPUT	10
A. DATA OUTPUT	10
B. DATA INPUT	11
C. PIN CONNECTIONS FOR RS232 PORT	11
VII. CARE AND MAINTENANCE	11
VIII. TROUBLESHOOTING	12
A. PROCEDURES	12
B. ERROR CODES	12
C. VOLTAGE CHECKS	12
IX. PARTS REPLACEMENT & ADJUSTMENTS	13
A. KEYBOARD REPLACEMENT	13
B. DISPLAY PCB REPLACEMENT	13
C. DIGITAL LOAD CELL REPLACEMENT	14
D. SPIDER REPLACEMENT AND OVERLOAD STOP ADJUSTMENT	14

X. SCHEMATIC DIAGRAM	16
XI. REPLACEMENT PARTS	17
DISPLAY HOUSING	17
1938 BASE INTERIOR	18 & 19
1938 BASE EXTERIOR	20
1938 EXTERIOR	21
OPTIONAL ACCESSORIES	22
XII. APPENDICES	23
A. APPENDIX A GRAVITY ADJUSTMENT TABLE FOR SPECIFIC LOCATIONS	23
B. APPENDIX B ALTERNATE GRAVITY FACTORS TABLE FOR LATITUDE/ALTITUDE	25
XIII. INDEX	26

Information regarding technical training on this product
may be obtained by writing to Toledo Scale at:

TOLEDO SCALE COMPANY
INDUSTRIAL TRAINING
1150 DEARBORN DRIVE
WORTHINGTON, OHIO 43085

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*