



TC-2005 Series

Digital Counting Scale – Dual Channel

Setup & Operation Manual

Revision 2.9
October 10, 2003

© 2001-2003 Transcell Technology, Inc.

Contents subject to change without notice.

Transcell Technology, Inc.
975 Deerfield Parkway
Buffalo Grove, IL 60089
Tel (847) 419-9180
Fax (847) 419-1515
E-mail: transcell@transcell.net
Web: www.transcell.net

TABLE OF CONTENTS

	<u>Page</u>
Chapter 1: Introduction to the Transcell TC-2005 Series Digital Counting Scale.....	6
Chapter 2: Getting Started	7
Chapter 3: Operation.....	9
3.1 Display.....	9
3.1.1 Light Emitting Diode (LED).....	10
3.2 Keyboard	11
3.2.1 Function Keys.....	11
3.2.2 Function/Numeric Keys	11
3.3 General Scale Operation.....	11
3.3.1 Weighing an Item	12
3.3.2 Weighing an Item On The Remote Scale	12
3.3.3 Taring an Item of Unknown Weight.....	12
3.3.4 Taring an Item of Known Weight.....	12
3.3.5 Clearing a Tare.....	12
3.3.6 Piece Counting	12
3.3.7 Clearing the Piece Count	13
Chapter 4: Advanced Features and Operation	14
4.1 Average Piece Weight Entry	14
4.1.1 APW Entry from Scale Keyboard	14
4.1.2 Download APW from TC Scale	14
4.1.3 APW Entry from Scanner	14
4.2 Memory Accumulator	15
4.2.1 Accessing the Memory Accumulator.....	15
4.2.2 Adding to the Memory Accumulator.....	15
4.2.3 Printing the Memory Accumulator	15
4.2.4 Clearing and Exiting the Memory Accumulator.....	15
4.3 Charging the Battery	15
Chapter 5: Configuration	16
5.1 Configuration Overview	16
5.2 Setup ("F") Menu	17
5.3 Remote ("R") Menu	18
5.3.1 Entering the Remote Menu	18
5.3.2 Navigating in the Remote Menu.....	19
5.3.3 Exiting the Remote Menu	19
5.4 User ("A") Menu.....	20

5.4.1	Entering the User Menu	20
5.4.2	Navigating in the User Menu.....	20
5.4.3	Exiting the User Menu	23
5.5	User Menu Procedures	24
5.5.1	Custom Unit Entry (A6)	24
5.5.2	ID Number Entry (A7).....	24
5.5.3	Set Time (A8)	25
5.5.4	Check Time (A9)	25
5.5.5	Set Date (A10).....	25
5.5.6	Check Date (A11).....	25
Chapter 6:	Calibration	26
6.1	Calibration Overview	26
6.2	Calibration Mode	26
6.3	Calibration Mode - Remote Scale	27
Appendix A:	Specifications	28
Appendix B:	Serial Port Information.....	29
B.1	COM1 Serial Port	29
B.1.1	Connecting the Serial Device.....	29
B.1.2	Default Print Format	29
B.2	COM2 Serial Port	30
B.2.1	Connecting the Serial Device.....	30
B.2.2	Full Duplex Modes for COM2.....	30
B.2.2.1	Continuous Mode	30
Appendix C:	Error Messages	32
C.1	Error Messages	32
C.1.1	Operator Errors	32
C.1.2	Calibration Errors	32
Appendix D:	Remote Scale Wiring	33
D.1	Remote Scale Wiring	33

LIST OF FIGURES

1-1	TC-2005 Series Front Panel	6
2-1	TC-2005 Rear Panel	7
3-1	TC-2005 Display Detail	9
3-2	Function Keys Layout	10
3-3	Function/Numeric Keys Layout	10
5-0	F Menu	16
5-1	Remote Menu Key Assignments	18
5-2	Remote Menu Chart	19
5-3	User Menu Key Assignments	19
5-4	User Menu Chart	20
6-1	Calibration Mode Key Assignments	26
B-1	Pin Assignments for COM1 Serial Port	29
B-2	Default Print Format	29
B-3	Pin Assignments for COM2 Serial Port	30
B-4	Consolidated Controls Demand Mode	30
D-1	Color Codes for Shielded Load Cell Cable	33
D-2	Pin assignments for the Load Cell Port	33

LIST OF TABLES

1-1	TC-2005 Series Product Matrix	6
3-1	TC-2005 Series Annunciator Definitions	9
3-1a	TC-2005 Series Annunciator Definitions - Continued	10
5-0	F Menu	17
5-1	Remote Menu Descriptions	19
5-2	User Menu Descriptions – A1 to A10	21
5-2a	User Menu Descriptions – A11 to A16	21
6-1	Minimum / Recommended Calibration Test Weights	27
B-1	Recognized Host Commands	31

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*